

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gueray](#) /
- › [Gueray 6-in-1 CD/DVD Player Instruction Manual](#)

## Gueray B0CQRPY464

# Gueray 6-in-1 CD/DVD Player Instruction Manual

Model: B0CQRPY464

## 1. SAFETY INFORMATION

Please read all instructions carefully before using the device and retain this manual for future reference. Always ensure the device is placed on a stable, flat surface. Avoid exposing the unit to moisture, rain, or direct sunlight. Do not block ventilation openings. Use only the power adapter supplied with the device. Keep out of reach of children. Disconnect the power supply during lightning storms or when unused for long periods.

## 2. PACKAGE CONTENTS

- Gueray 6-in-1 CD/DVD Player (1 unit)
- Remote Control (batteries not included)
- AV Cable
- HDMI Cable
- USB Charging Cable
- User Manual

## 3. PRODUCT OVERVIEW

The Gueray 6-in-1 CD/DVD Player is a versatile desktop unit designed for various audio and video playback needs. It features a compact design with integrated speakers and a clear LED display.



Figure 1: Front view of the Gueray 6-in-1 CD/DVD Player with included accessories.

## Components and Controls

# EASY TO CONNECT HIGH QUALITY DISC DRIVE



**Fast Reading**



**Durable & Shockproof**



**Error Connection**



**Noise Cancellation**

Figure 2: Detailed view of the player's ports and controls.

- **Mode Switch:** Toggles between different playback modes (CD, DVD, Bluetooth, FM, USB, AUX).
- **Volume +/-:** Adjusts the audio output level.
- **Previous/Next:** Navigates between tracks or stations.
- **Play/Pause:** Starts or pauses playback.
- **LED Display:** Shows current mode, track time, volume, or FM frequency.
- **CD Lid:** Protective cover for the disc tray.
- **Loudspeaker:** Integrated stereo speakers for audio output.
- **Power ON/OFF:** Main power switch.
- **USB Port:** For USB flash drive playback.
- **DC-5V IN:** Power input port.
- **HDMI:** HDMI output for connecting to a TV or projector.
- **AUX Port:** 3.5mm audio input/output.

## 4. SETUP

Follow these steps to set up your Gueray CD/DVD Player:

1. **Power Connection:** Connect the supplied USB charging cable to the DC-5V IN port on the side of the player and plug the other end into a compatible USB power adapter (not included) or a USB port on a computer.
2. **Power On:** Slide the 'ON/OFF POWER' switch on the side of the unit to the 'ON' position. The LED display will light up.
3. **Initial Display:** Upon powering on, the display will show 'HI' briefly, then 'CD' indicating it's ready for CD playback.
4. **Remote Control Setup:** Insert 2 AAA batteries (not included) into the remote control.
5. **Connecting to TV/Projector (Optional):** For DVD playback, connect the player to your TV or projector using the supplied HDMI cable or AV cable. Ensure your TV input is set to the corresponding HDMI or AV input.

Your browser does not support the video tag.

Video 1: Demonstration of the Gueray CD/DVD Player's physical features, power connection, and basic operation.

## 5. OPERATING INSTRUCTIONS

### 5.1 CD/DVD Playback

The player supports DVD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3, and JPEG formats.

# ALL REGION FREE

## Widely compatible disc formats

DVD / DVD-R / DVD + R / DVD+RW / DVD-RW / DVD 9;  
VCD / CDDA / HDCD / CDG , CD-R / CD RW  
( Note : Bluray discs and CPRM are not supported ! )



Figure 3: The player supports a wide range of disc formats.

1. **Insert Disc:** Gently press the 'Open' button located at the bottom of the disc tray to open the CD lid. Place your CD or DVD onto the spindle, ensuring it is seated correctly. Close the lid firmly.
2. **Automatic Recognition:** The player will automatically detect the disc type and begin reading it. The display will show 'READ' and then the track number/time.
3. **Playback Control:** Use the 'Play/Pause', 'Previous', 'Next', and 'Stop' buttons on the unit or remote control to manage playback.
4. **Volume Adjustment:** Use the 'Volume +/-' buttons on the unit or remote to adjust the sound level.

## 5.2 Bluetooth Functionality

The player features Bluetooth 5.0 for both transmitting and receiving audio.

## Bluetooth Transmitter 5.0

Listen to CD Music/Audio with Wireless headphone or Bluetooth Speaker



## Bluetooth Receiver 5.0

Enjoy Your Wireless Music from Smartphone/ MP3/MP4/Desktop PC/Laptop/Tablet PC



Figure 4: The player can transmit audio to Bluetooth headphones/speakers or receive audio from a smartphone.

1. **Switch to Bluetooth Mode:** Press the 'MODE' button on the unit or the 'Bluetooth' button on the remote until 'BLUE' appears on the display.
2. **Pairing (Receiver Mode):** On your smartphone or other Bluetooth-enabled device, search for 'Gueray' in the Bluetooth settings and connect. The player will act as a Bluetooth speaker.
3. **Pairing (Transmitter Mode):** While playing a CD/DVD, press the 'Bluetooth' button on the remote. The player will search for nearby Bluetooth headphones or speakers. Once found, it will connect and transmit the audio.

### 5.3 FM Radio

Enjoy your favorite radio stations with the built-in FM tuner.



Figure 5: The remote control allows easy access to FM radio functions.

1. **Switch to FM Mode:** Press the 'MODE' button on the unit or 'FM/CH' button on the remote until 'FM' appears on the display.
2. **Scan for Stations:** Press the 'SCAN' button on the remote to automatically scan and save available FM stations.
3. **Tune Stations:** Use the 'Previous' or 'Next' buttons on the unit or remote to manually tune to desired frequencies or navigate through saved stations.

#### 5.4 USB Flash Drive Playback

Play audio files directly from a USB flash drive.

1. **Insert USB Drive:** Insert your USB flash drive into the USB port on the side of the player.
2. **Switch to USB Mode:** Press the 'MODE' button on the unit or 'USB' button on the remote until 'USB' appears on the display.
3. **Playback:** The player will automatically detect and begin playing compatible audio files (e.g., MP3). Use playback controls as with CD/DVD.

#### 5.5 3.5mm AUX Input/Output

Connect external audio sources or output audio to external speakers.

1. **Input Mode:** Connect an external device (e.g., smartphone, tablet) to the AUX port using a 3.5mm audio cable. Press the 'MODE' button until 'LINE' appears on the display. The player will function as a wired speaker for the external device.
2. **Output Mode:** Connect the AUX port to external wired speakers using a 3.5mm audio cable. The player's audio will be routed through the external speakers.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your Gueray CD/DVD Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. For the disc tray and lens, use a specialized CD/DVD lens cleaner kit. Do not use abrasive cleaners or solvents.
- **Dust Cover:** The player includes a dust cover. Keep the dust cover closed when not in use to prevent dust accumulation on the disc tray and internal components.
- **Disc Handling:** Always handle discs by their edges. Avoid touching the shiny surface to prevent scratches and fingerprints, which can affect playback quality.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

If you encounter issues with your player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off	Ensure power cable is securely connected; Turn the power switch to 'ON'
Disc not playing / 'READ' error	Disc is dirty, scratched, or incompatible format	Clean the disc; Try a different disc; Ensure disc format is supported
No sound	Volume too low; Mute activated; Incorrect mode selected	Increase volume; Check mute setting on remote; Select correct mode (CD, DVD, Bluetooth, etc.)
Bluetooth pairing failed	Device too far; Not in pairing mode; Interference	Ensure devices are close; Re-enter Bluetooth mode; Reduce interference from other devices
Poor FM reception	Weak signal; Antenna not extended	Relocate the unit; Extend the antenna fully; Perform a new scan

## 8. SPECIFICATIONS

- **Brand:** Gueray
- **Model:** B0CQRPY464
- **Connectivity Technology:** Auxiliary, Bluetooth, HDMI
- **Color:** DVD CD Player-White
- **Speaker Type:** Stereo
- **Power Source:** Battery Powered (Internal rechargeable battery)
- **Package Dimensions:** 8.58 x 8.31 x 3.19 inches
- **Item Weight:** 2.29 pounds
- **Supported Disc Formats:** DVD, VCD, CD, CD-G, HD-CD
- **Supported File Formats:** WMA, AVI, MP3, JPEG
- **Bluetooth Version:** 5.0
- **Video Output Resolution:** 1080P (Does not support 2K or 4K resolution)

## 9. WARRANTY AND SUPPORT

Gueray products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official Gueray website. You may also contact the seller directly through your purchase platform for assistance. For further inquiries or assistance, please contact Gueray Customer Service.