

Faber 106.0708.173

Faber 4 Burner 63cm Cooktop (Model 106.0708.173) User Manual

Your guide to safe installation, operation, and maintenance.

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in fire, electric shock, or personal injury. Keep this manual for future reference.

- Ensure proper ventilation in the kitchen area during operation.
- Do not store flammable materials near the cooktop.
- Keep children away from the appliance during use.
- Do not use the cooktop if the glass surface is cracked or broken.
- Always use appropriate cookware for the burner size.
- Turn off all burners and the gas supply when not in use.
- Installation must be performed by a qualified technician in accordance with local regulations.



Image 1.1: Top-down view of the Faber 4 Burner 63cm Cooktop, showing the black glass surface, four brass burners, and control knobs.

2. PRODUCT OVERVIEW

The Faber 4 Burner 63cm Cooktop is designed for efficient and convenient cooking. It features a durable black glass top and four brass burners of varying sizes to accommodate diverse cooking needs.

2.1 Components

- **Black Glass Top:** 6mm tempered glass for durability and easy cleaning.
- **Brass Burners:** Includes one jumbo, two medium, and one small burner for versatile cooking.
- **MS Powder Coated Pan Support:** Sturdy supports for cookware.
- **SS Drip Tray:** Stainless steel trays to collect spills, making cleaning easier.
- **Knob Control:** Ergonomic knobs for precise flame adjustment.



Image 2.1: Close-up of the MS Powder Coated Pan Support, designed for stability and durability.



Image 2.2: View of the Stainless Steel Drip Trays, which are removable for easy cleaning.



Image 2.3: Detail of a high-quality brass burner, showing the flame ports.



Image 2.4: Close-up of the toughened glass surface, highlighting its smooth finish.

3. SETUP AND INSTALLATION

This section outlines the steps for unpacking and installing your Faber cooktop. Professional installation is recommended.

3.1 Unpacking

1. Carefully remove the cooktop from its packaging.
2. Inspect the appliance for any damage incurred during transit. Report any damage to your retailer immediately.
3. Ensure all included components are present: 1 Gas Stove, 1 Warranty Card, 1 User Manual, Cleaning Pin, Batti Stand.

3.2 Installation Requirements

- The cooktop requires a stable, level surface for installation.
- Ensure adequate clearance from walls and overhead cabinets as per local safety standards.
- A certified gas connection point must be available.
- The kitchen area must have proper ventilation.



Image 3.1: Overhead view of the cooktop indicating approximate dimensions: 635mm width, 500mm depth, and 110mm height.

4. OPERATING INSTRUCTIONS

Follow these steps to safely operate your Faber cooktop.

4.1 Lighting a Burner

1. Place your cookware centrally on the pan support over the desired burner.
2. Push down and turn the corresponding control knob counter-clockwise to the "Ignite" or "High" position.
3. Hold the knob down for a few seconds until the flame ignites. If the flame does not ignite, release the knob and repeat the process.
4. Once ignited, adjust the flame to the desired intensity by turning the knob between the "High" and "Simmer" positions.

4.2 Turning Off a Burner

To turn off a burner, turn the control knob clockwise until it clicks into the "OFF" position. Ensure the flame is

completely extinguished.

Image 4.1: Close-up of a control knob, showing the 'OFF' and 'SIM' (simmer) markings for flame adjustment.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

5.1 Daily Cleaning

- Allow the cooktop to cool completely before cleaning.
- Wipe the glass surface with a soft cloth and a mild detergent or glass cleaner. Avoid abrasive cleaners.
- Remove and clean the SS drip trays and pan supports with warm soapy water. Dry thoroughly before replacing.

5.2 Burner Maintenance

- Periodically remove the burner caps and crowns. Clean them with warm soapy water and a soft brush.
- Ensure the burner ports are clear of food debris. Use the provided cleaning pin if necessary.
- Ensure all burner components are completely dry before reassembling them. Incorrect reassembly can lead to improper flame.



Image 5.1: A hand wiping the cooktop surface, demonstrating the ease of cleaning the glass top.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your cooktop. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply, clogged burner port, faulty igniter.	Check gas supply. Clean burner ports. Contact service if igniter is faulty.

Problem	Possible Cause	Solution
Irregular flame.	Clogged burner ports, wet burner components, incorrect assembly.	Clean burner ports. Ensure burner components are dry and correctly assembled.
Gas smell.	Gas leak, loose connection.	Immediately turn off gas supply. Open windows for ventilation. Do not operate the cooktop. Contact a qualified technician immediately.
Knob is stiff or loose.	Debris under knob, worn component.	Clean around the knob. If issue persists, contact service.

7. SPECIFICATIONS

Feature	Detail
Model Number	106.0708.173
Type	Black Glass Freestanding Cooktop
Burner Configuration	4 Brass Burners (1 Jumbo, 2 Medium, 1 Small)
Glass Type	6mm Tempered Glass
Pan Support	MS Powder Coated
Drip Tray	SS Drip Tray
Control Type	Knob Control
Item Dimensions (LxWxH)	59.5 x 70 x 11 Centimeters
Item Weight	9 kg
Manufacturer	Franke Faber India Pvt. Ltd.

8. WARRANTY AND SUPPORT

Your Faber 4 Burner 63cm Cooktop comes with a warranty to ensure peace of mind.

8.1 Warranty Information

This product is covered by a **2 Years Warranty by Faber**. Please refer to the included Warranty Card for detailed terms and conditions, including coverage specifics and exclusions.

8.2 Customer Support

For any service requests, technical assistance, or warranty claims, please contact Faber customer care:

- **Manufacturer:** Franke Faber India Pvt. Ltd.
- **Contact Number:** 1800-209-3484
- **Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

When contacting support, please have your product model number (106.0708.173) and purchase details readily available.