

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Porodo](#) /

› [Porodo Universal Wireless Remote & Mouse \(PD-MWKTC-BK\) Instruction Manual](#)

Porodo PD-MWKTC-BK

Porodo Universal Wireless Remote & Mouse (PD-MWKTC-BK) Instruction Manual

Model: PD-MWKTC-BK

1. PRODUCT OVERVIEW

The Porodo Universal Wireless Remote & Mouse is a compact and versatile input device designed to combine the functionalities of a keyboard and a mouse. It offers convenient control for various devices, including Smart TVs, PCs, laptops, Android projectors, and more. This device features a full QWERTY keyboard, a multi-touch touchpad, and dedicated media control keys, all operating via 2.4GHz wireless technology or Bluetooth.



Rechargeable
Battery



2.4GHz
Wireless



Bluetooth

Universal Wireless Remote & Mouse



Image 1: The Porodo Universal Wireless Remote & Mouse, highlighting its RGB backlighting, rechargeable battery, 2.4GHz wireless, and Bluetooth connectivity.

Beyond Imagination Fully Compatible

• • •

The best remote control peripherals, suitable for the big screen with the operating system displaying around



All-in-one PC



Computer



Android Projecter



Smart TV



HTPC



PAD (OTG)



Phone (OTG)



TV BOX

Image 2: Front and back views of the remote and mouse, illustrating its compatibility with various devices such as All-in-one PCs, Computers, Android Projectors, Smart TVs, HTPCs, PADs (OTG), Phones (OTG), and TV Boxes.

2. SETUP GUIDE

2.1 Package Contents

- Porodo Universal Wireless Remote & Mouse
- USB Receiver (typically stored in the battery compartment)
- Charging Cable
- User Manual

2.2 Charging the Device

Before first use, ensure the device is fully charged. Connect the provided charging cable to the charging port on the remote and to a standard USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

2.3 Connecting the USB Receiver (2.4GHz Wireless Mode)

1. Locate the USB receiver, usually found in the battery compartment of the remote.
2. Insert the USB receiver into an available USB port on your target device (e.g., Smart TV, PC, Android box).
3. Turn on the Porodo Remote & Mouse using the power switch. The device should automatically connect to the receiver.
4. The device is plug-and-play; no additional drivers are typically required.

2.4 Connecting via Bluetooth (if applicable)

If your device supports Bluetooth connectivity, you can pair it directly without the USB receiver. Refer to your device's Bluetooth pairing instructions. On the Porodo Remote & Mouse, activate Bluetooth pairing mode (refer to specific key combinations in the operating section if available).



Image 3: The remote and mouse highlighting its dual connectivity options: 2.4 GHz wireless and Bluetooth.

3. OPERATING INSTRUCTIONS

3.1 Keyboard Functionality

- **Typing:** Use the QWERTY layout for text input.
- **Function Keys (F1-F12):** These keys often have secondary functions (e.g., media control, volume) accessible by pressing the 'Fn' key simultaneously.

- **Backlight:** Some models feature RGB backlighting. Press the dedicated backlight key (often indicated by a light bulb icon) to cycle through colors or turn it on/off.

3.2 Touchpad Functionality

- **Single Finger Tap:** Functions as a left-click.
- **Two-Finger Tap:** Functions as a right-click.
- **Two-Finger Drag:** For scrolling up/down or left/right.
- **Single Finger Drag:** Moves the cursor on the screen.
- **Dedicated Left/Right Click Buttons:** Located below the touchpad for traditional mouse clicks.

3.3 Media Control Keys

Dedicated buttons for volume up/down, mute, play/pause, next/previous track are typically located above the touchpad or integrated into the function keys.

3.4 Voice Control (if applicable)

Some models may include a microphone for voice input. Press the dedicated microphone button to activate voice commands or search functions on compatible devices.



Image 4: The remote and mouse in use, demonstrating its Google Voice integration for controlling entertainment and accessing information on a connected TV.

3.5 Operational Range

The device offers an extended operational range of up to 10 meters (approximately 33 feet), allowing flexible control from a comfortable distance.

Your browser does not support the video tag.

Video 1: A product demonstration video showcasing the features and ease of use of a similar wireless keyboard with touchpad. This video illustrates comfortable wireless control, long battery life, and plug-and-play connectivity.

4. MAINTENANCE

4.1 Cleaning

To clean the device, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals, abrasives, or solvents, as these can damage the surface.

4.2 Battery Care

- Recharge the device when the battery indicator is low to ensure continuous operation.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing the device for an extended period, charge it to about 50% and store it in a cool, dry place.

4.3 Storage

Store the device in a dry environment, away from extreme temperatures, direct sunlight, and high humidity. Keep it away from liquids and dust.

5. TROUBLESHOOTING

5.1 Device Not Responding

- **Check Battery:** Ensure the device is charged. Connect it to a power source and try again.
- **Power Switch:** Verify that the power switch on the device is in the 'ON' position.
- **USB Receiver:** For 2.4GHz mode, ensure the USB receiver is securely plugged into the target device's USB port. Try a different USB port.
- **Re-pairing:** If using Bluetooth, try re-pairing the device with your host system.
- **Interference:** Move the device closer to the receiver/host device and away from other wireless devices that might cause interference.

5.2 Touchpad or Keys Unresponsive

- **Clean Surface:** Ensure the touchpad surface and keys are clean and free from debris.
- **Restart:** Turn the device off and then on again.
- **Host Device:** Restart the host device (PC, Smart TV, etc.).

5.3 Short Battery Life

- **Full Charge:** Ensure the device is fully charged before use.
- **Backlight Usage:** If your model has a backlight, frequent or continuous use will consume more battery. Turn it off when not needed.
- **Auto-Sleep:** The device is designed to enter sleep mode after a period of inactivity to save power. Waking it up should be quick.

6. SPECIFICATIONS



Home
Entertainment



Office
Presentations



Gaming
Consoles

Specifications

Operational Range	- 10m	Battery Type	- BL -5B
Power	- +5dB Max	Battery Capacity	- >300mAh
Operation Voltage	- 3.7V	Product Dimension	- 146 x 96 x 15mm
Number of Keys	- 84	Product Weight	- 115g
Charging Current	- <200mA	System Compatibility	- Windows, Mac OS, Linux, Android, Google Smart TV
Sleep Current	- <30uA	Layout	- English & Arabic

SKU: PD-MWKTC-BK

www.porodo.net  /porodo  /myporodo

Barcode: 6849108441483

Image 5: The remote and mouse, illustrating its use for home entertainment, office presentations, and gaming consoles, alongside a table of detailed product specifications.

Feature	Detail
Manufacturer	Porodo
Model Number	PD-MWKTC-BK (68491084488)
Product Dimensions	14.6 x 9.6 x 1.5 cm
Item Weight	115 grams
Color	Black
Connectivity Technology	Radio Frequency (2.4GHz) / Bluetooth
Special Feature	Programmable Buttons, Touchpad, Backlight
Compatible Devices	Laptop, PC, Smart TV, Android Box, Projector
Keyboard Description	Internal (Integrated)
Movement Detection Technology	Optical

Feature	Detail
Power Source	Battery Powered (Rechargeable)
Battery Capacity	>300mAh
Operational Range	10m
System Compatibility	Windows, Mac OS, Linux, Android, Google Smart TV
Layout	English & Arabic

7. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the official Porodo website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.