



Manuals.plus /

› QUOLIX /

› QUOLIX Q-268 Rechargeable Kids Walkie Talkies Instruction Manual

## QUOLIX Q-268

# QUOLIX Q-268 Rechargeable Kids Walkie Talkies Instruction Manual

Model: Q-268

## 1. PRODUCT OVERVIEW

The QUOLIX Q-268 Walkie Talkies are designed for clear and reliable communication for children aged 3-12. These rechargeable devices offer a range of features to enhance outdoor play and communication.

### Key Features:

- **Rechargeable Design:** Built-in rechargeable battery with USB-C charging.
- **Clear Communication:** Crystal-clear sound quality with noise cancellation technology.
- **VOX Function:** Voice-activated transmission for hands-free operation.
- **Built-in Flashlight:** Integrated LED flashlight for use in low-light conditions.
- **22 FRS Channels:** Provides multiple channels for private communication.
- **Long Range:** Up to 1.86 miles (3 KM+) in ideal, unobstructed conditions.
- **Durable & Portable:** Compact, lightweight design made from high-quality ABS plastic, with included belt clip and lanyard.
- **Key Lock:** Prevents accidental channel or setting changes.
- **FCC Certified:** Ensures compliance with safety and communication standards.

# Clear & Secure Audio

## 99 Privacy Codes



Image 1.1: QUOLIX Q-268 Walkie Talkies highlighting clear and secure audio features.

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 3 x QUOLIX Q-268 Walkie Talkies
- 3 x USB Charging Cables
- 3 x Belt Clips
- 3 x Lanyards
- 1 x English User's Manual

## 3. SAFETY INFORMATION

Read all safety instructions before using the device. Failure to follow these instructions may result in injury or damage to the product.

- **Adult Supervision:** Always ensure children are supervised while using the walkie talkies.
- **Battery Safety:** The walkie talkies contain non-removable lithium-ion batteries. Do not attempt to open, replace, or dispose of the battery in fire. Avoid exposing the device to extreme temperatures.

- **Choking Hazard:** Small parts like lanyards and belt clips can pose a choking hazard to young children.
- **Water Exposure:** These walkie talkies are not water-resistant. Avoid exposure to water or excessive moisture.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals or abrasive cleaners.
- **FCC Compliance:** This device complies with FCC regulations. Any unauthorized modifications may void the user's authority to operate the equipment.

## 4. SETUP

### 4.1 Charging the Walkie Talkies

1. Locate the USB-C charging port on the side or bottom of the walkie talkie.
2. Connect one end of the provided USB-C charging cable to the walkie talkie.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light on the walkie talkie will illuminate to show it is charging.
5. A full charge typically takes approximately 2.5 hours. The indicator light will change or turn off once charging is complete.



# Rechargeable

Type-C Charging with  
Non-removable battery

-  Non-removable battery
-  7x24h Standby
-  1100mAh
-  2.5h Full Charge

Image 4.1: Walkie Talkie connected for USB-C charging.

## 4.2 Powering On/Off

- To power on, press and hold the **Power/Menu** button until the screen illuminates.
- To power off, press and hold the **Power/Menu** button until the screen turns off.

## 4.3 Attaching Belt Clip and Lanyard

- **Belt Clip:** Slide the belt clip into the designated slot on the back of the walkie talkie until it clicks securely into place.
- **Lanyard:** Thread the lanyard through the small loop at the top of the walkie talkie and secure it.



Image 4.2: Walkie Talkie worn with a lanyard for easy carrying.

## 5. OPERATING INSTRUCTIONS

### 5.1 Channel Selection

1. With the walkie talkie powered on, press the **Menu** button once. The channel number on the display will flash.
2. Use the **Up (+)** or **Down (-)** buttons to select your desired channel (1-22).

3. Press the **Menu** button again to confirm the channel selection, or wait a few seconds for it to set automatically.
4. Ensure all walkie talkies intended for communication are set to the same channel.

## 5.2 Push-to-Talk (PTT) Button

- To transmit your voice, press and hold the large **PTT** button located on the side of the walkie talkie.
- Speak clearly into the microphone.
- Release the **PTT** button to stop transmitting and listen for a response.

## 5.3 Voice-Activated Transmission (VOX)

The VOX function allows you to transmit without pressing the PTT button, activating automatically when you speak.

1. Press the **Menu** button multiple times until the VOX icon appears on the display.
2. Use the **Up (+)** or **Down (-)** buttons to select a VOX sensitivity level (e.g., 1-3, with 3 being most sensitive) or turn VOX off.
3. Press the **Menu** button to confirm.



Image 5.1: Hands-free communication using the VOX feature.

## 5.4 Using the Flashlight

- Press the **Flashlight** button (usually marked with a lightbulb icon) to turn the LED flashlight on.
- Press the button again to turn the flashlight off.

# Perfect Gifts For Kids



Image 5.2: Child using the integrated flashlight feature.

## 5.5 Key Lock Function

- To activate the key lock, press and hold the **Lock** button (often combined with the music note icon) until a lock icon appears on the display. This prevents accidental changes to channels or settings.
- To deactivate, press and hold the **Lock** button again until the lock icon disappears.

## 5.6 Monitor Function

- Press the **MON** button to temporarily disable squelch and listen for weak signals on the current channel. This can be useful for checking if a channel is clear or for hearing faint transmissions.

Your browser does not support the video tag.

Video 5.3: Official product video demonstrating key features and usage of the QUOLIX Walkie Talkies.

## 6. MAINTENANCE

### 6.1 Cleaning

- Wipe the exterior of the walkie talkie with a soft, slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the device's finish

or internal components.

- Ensure no moisture enters the charging port or microphone/speaker openings.

## 6.2 Battery Care

- To prolong battery life, recharge the walkie talkies regularly, even if not in frequent use.
- Avoid fully discharging the battery frequently.
- Do not expose the device to extreme heat or cold, as this can degrade battery performance and lifespan.
- The battery is non-removable. Do not attempt to open the device or replace the battery.

## 6.3 Storage

- When not in use for extended periods, store the walkie talkies in a cool, dry place, away from direct sunlight and moisture.
- Ensure the devices are fully charged before storing them for a long duration.

## 7. TROUBLESHOOTING

If you encounter issues with your QUOLIX Q-268 Walkie Talkies, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery is depleted.	Recharge the walkie talkie using the provided USB-C cable.
No sound or poor sound quality	Incorrect channel/privacy code; Low volume; Obstructions.	Ensure both units are on the same channel. Adjust volume. Reduce distance or move to an open area.
Short communication range	Environmental obstructions (buildings, trees); Low battery; Weather conditions.	Move to an open area. Ensure batteries are fully charged. Range is reduced by physical barriers.
Interference or unwanted transmissions	Other users on the same channel.	Change to a different channel.
Buttons not responding	Key lock is activated.	Deactivate the key lock by pressing and holding the Lock button.

## 8. SPECIFICATIONS

Feature	Detail
Brand	QUOLIX
Model Number	Q-268
Number of Channels	22 FRS Channels
Frequency Protocol	FRS (Family Radio Service)
Tuner Type	UHF
Maximum Talking Range	Up to 1.86 Miles (3 KM+) in ideal conditions
Battery Type	1 Lithium Ion (included, non-removable)
Voltage	3.6 Volts
Charging Interface	USB-C
Special Features	Lightweight, Built-in LED Flashlight, VOX Function
Water Resistance Level	Not Water Resistant
Certifications	FCC Certified
Included Components	3 Walkie Talkies, 3 USB cables, 3 Belt clips, 3 Lanyards, 1 User Manual

# Walkie Talkies for Kids

# Size



Image 8.1: Dimensions of the QUOLIX Q-268 Walkie Talkie.



Image 8.2: Illustration of walkie talkie range under various environmental conditions.

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

The QUOLIX Q-268 Walkie Talkies come with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

### 9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact QUOLIX customer service. Refer to the contact information provided on the product packaging or the official QUOLIX website.