



[Manuals.plus](#) /

› [Zvyteay](#) /

› Zvyteay 13 Gallons Tilt Out Trash Can Cabinet User Manual

Zvyteay 10031

Zvyteay 13 Gallons Tilt Out Trash Can Cabinet User Manual

Model: 10031

INTRODUCTION

Thank you for choosing the Zvyteay 13 Gallons Tilt Out Trash Can Cabinet. This versatile and stylish cabinet is designed to enhance your kitchen or living space by providing a hidden solution for waste management and additional storage. Its durable construction and thoughtful design ensure long-lasting utility and aesthetic appeal.



Image: The Zvyteay Tilt Out Trash Can Cabinet, brown finish, shown in a modern kitchen setting with a coffee maker on top, demonstrating its integrated appearance.

PRODUCT FEATURES

- **13 Gallon Capacity:** Designed to perfectly fit a standard 13-gallon trash can, keeping your kitchen clean and preventing odors. Dimensions: 22.1" L x 14.6" W x 37" H (trash can not included).
- **High-Quality Wood Material:** Constructed from durable wood MDF with a vintage barn door design, rust-proof hinges, and iron handles, ensuring stability and longevity.
- **Space-Saving Design:** Offers hidden storage for trash cans and features two additional drawers for organization. The top surface provides extra display space for appliances or decor.
- **Multi-Purpose Use:** Can be utilized as a kitchen trash can, recycling bin, 13-gallon laundry basket, clothing/toy storage, or pet food storage cabinet.
- **Pet-Proof:** The enclosed design helps prevent pets from accessing the trash bin.

With 2 Drawers



High Quality Metal Buckle



Farmhouse style barn door



Prevention of dumping



Image: Detailed view of the cabinet's features, highlighting the two functional drawers, the robust metal hinge for the tilt-out door, the decorative farmhouse-style barn door, and the anti-dumping bracket for stability.

WHAT'S IN THE BOX

Your Zvyteay Tilt Out Trash Can Cabinet package includes:

- Cabinet components (unassembled)
- All necessary hardware for assembly
- Instruction manual

SPECIFICATIONS

Attribute	Detail
Product Dimensions	22.1" L x 14.6" W x 37" H

Weight	44 Pounds
Item Model Number	10031
Brand	Zvyteay
Capacity	13 Gallons
Color	Brown
Opening Mechanism	Tilt-Out
Material	Wood MDF
Recommended Uses	Indoor
Room Type	Kitchen
Finish Type	Wooden

Trash Can Capacity: 13 Gallon DIMENSION



Image: A detailed diagram illustrating the dimensions of the Zvyteay Tilt Out Trash Can Cabinet, including its overall height (37"), width (22.1"), depth (14.6"), and internal measurements for the tilt-out compartment and drawers.

SETUP AND ASSEMBLY

The Zvyteay Tilt Out Trash Can Cabinet requires assembly. Please follow the included instruction manual carefully. All necessary hardware is provided.

1. Unpack all components and verify against the parts list in the manual.
2. Identify each piece and organize them for easy access.
3. Follow the step-by-step diagrams and instructions to assemble the cabinet frame.
4. Attach the drawer slides and assemble the drawers.
5. Install the tilt-out door with its rust-proof hinges, ensuring smooth operation.
6. Attach the handles and knobs to the drawers and door.
7. For added stability, consider securing the cabinet to a wall using the provided anti-dumping bracket, especially if children or pets are present.



Image: The Zvyteay Tilt Out Trash Can Cabinet in brown, with its front door tilted open to show the interior compartment designed to hold a trash can. The two top drawers are closed.

OPERATING INSTRUCTIONS

Using your Zvyteay Tilt Out Trash Can Cabinet is straightforward:

- **Inserting a Trash Can:** Open the tilt-out door completely. Place your 13-gallon trash can into the compartment. Ensure it sits securely on the base.
- **Disposing of Waste:**
 - For small items, you can slightly open the tilt-out door and drop waste directly into the bin.
 - For larger items or to remove the trash bag, fully open the tilt-out door. The rust-proof hinge allows the door to stay open at various angles for convenience.
- **Using the Drawers:** The two top drawers provide additional storage for kitchen essentials, trash bags, or other items. Pull the knobs to open and push to close.

- **Utilizing the Top Surface:** The sturdy top surface can hold small appliances like coffee makers, microwaves, or serve as a display area.

Give you a clean and tidy space



Hide Mess & Odor



Extra Storage Area



Image: The Zvyteay Tilt Out Trash Can Cabinet in a kitchen corner, illustrating its ability to hide unsightly trash and provide extra counter space for items like a toaster.

MAINTENANCE

To ensure the longevity and appearance of your Zvyteay cabinet, follow these maintenance tips:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the wood finish.
- **Spills:** Promptly clean any spills to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Tighten if necessary to maintain stability.
- **Hinges:** The rust-proof hinges are designed for durability. If they become stiff, a small amount of silicone spray lubricant can be applied.

TROUBLESHOOTING

If you encounter any issues with your Zvyteay Tilt Out Trash Can Cabinet, please refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose fasteners or uneven floor.	Ensure all assembly screws are tightened. If the floor is uneven, use furniture pads or shims under the legs to level the cabinet. Secure to the wall using the anti-dumping bracket.
Drawers do not slide smoothly.	Misaligned slides or debris in tracks.	Check that drawer slides are correctly installed and aligned. Clear any dust or debris from the tracks. A small amount of silicone lubricant can improve smoothness.
Tilt-out door does not close properly.	Obstruction or hinge misalignment.	Check for any items obstructing the door's path. Inspect hinges for damage or misalignment and adjust if possible. Ensure the trash can inside is not too large or improperly placed.
Cabinet appears damaged or parts are missing upon arrival.	Shipping damage or packing error.	Do not attempt to assemble if parts are damaged or missing. Contact Zvyteay customer service immediately for assistance and replacement parts.

WARRANTY AND SUPPORT

Zvyteay is committed to providing high-quality products. For any questions, concerns, or warranty claims, please contact our customer service team. Refer to your purchase documentation for specific warranty details and contact information.

We are dedicated to ensuring your satisfaction with our products.

