

[Manuals.plus](#) /

› [PRITOM](#) /

› PRITOM M10 10 inch Tablet User Manual

## PRITOM M10

# PRITOM M10 10 inch Tablet User Manual

Model: M10 (Touch 10) | Brand: PRITOM

## 1. INTRODUCTION

Welcome to the PRITOM M10 10 inch Tablet user manual. This guide provides detailed instructions to help you set up, operate, maintain, and troubleshoot your new Android 13 tablet. Please read this manual thoroughly to ensure proper use and to maximize your device's performance and longevity.

## 2. WHAT'S IN THE BOX

Upon opening your PRITOM M10 Tablet package, please verify that all the following items are included:

- PRITOM M10 10 inch Tablet
- Charger
- USB C Cable
- User Manual (this document)

## 3. PRODUCT OVERVIEW AND KEY FEATURES

The PRITOM M10 Tablet is designed for versatile use, offering a balance of performance and entertainment. Below are its primary features:



Figure 3.1: Front view of the PRITOM M10 Tablet, showcasing its vibrant display.

### 3.1 High Performance Android 13 System

The tablet runs on the stable Android 13 Go system, powered by an energy-saving Quad-core Processor. It features 4GB RAM (+2GB Expandable) and 64GB ROM, ensuring quicker app launches and smoother video playback. Storage can be expanded up to 512GB via a Micro SD card (not included).

# Fast and Responsive Performance



Figure 3.2: Visual representation of the tablet's core performance features.

## 3.2 Brilliant HD IPS Display

Equipped with a 10-inch 1280 x 800 HD IPS display, the tablet offers sharp images and rich colors for an immersive visual experience. The Eye Health mode filters blue light and optimizes backlight for comfortable reading.

# 10.1 inch HD Large Screen

Pritom 10" M10 tablet features a 1280x 800 vivid IPS display and supports multi-angle visual experience



Figure 3.3: The tablet's 10.1-inch HD IPS display for vivid visuals.

## 3.3 Dual Cameras and Storage

Capture moments with the Front 2.0 MP and Rear 8.0 MP cameras. The 64GB internal storage is sufficient for daily needs, and it can be expanded up to 512GB using a Micro SD card.

# 64GB ROM Storage

Expandable up to 512GB via the micro SD card slot




Figure 3.4: The tablet's storage capacity, expandable via Micro SD card.

## 3.4 Long-Lasting Battery

The large battery and low-power CPU allow for up to 8 hours of mixed use, including reading, watching TV shows, web browsing, and light gaming, making it ideal for entertainment on the go.

# Large Capacity Battery

It is suitable for reading, movie, drama, and music appreciation during long time commuting and traveling.

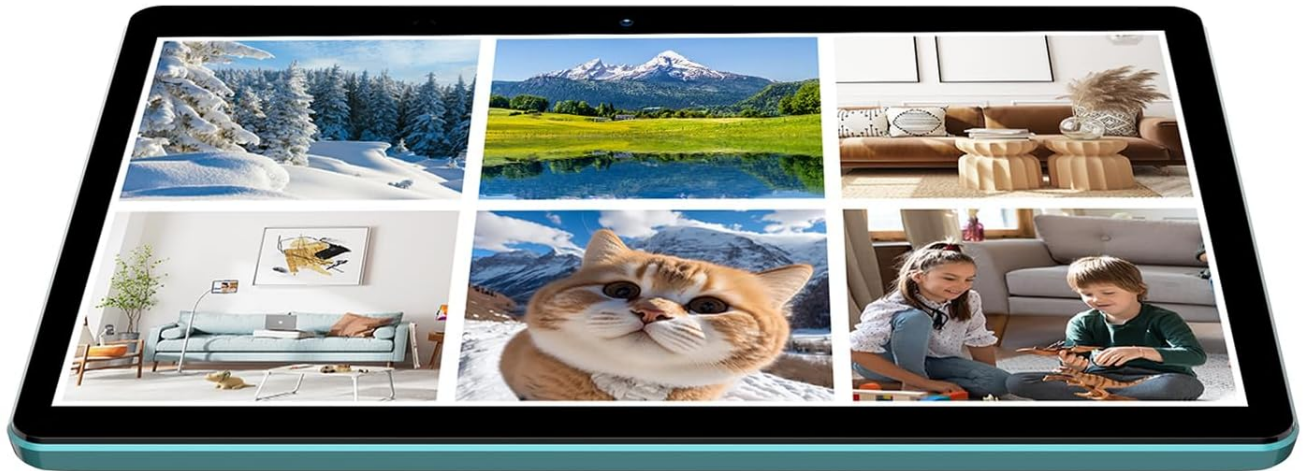

Video and Drama



Daily use



Reading

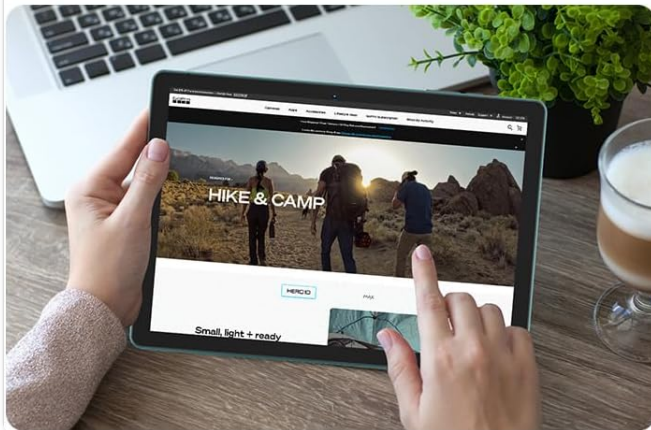


Figure 3.5: Battery performance for different usage scenarios.

## 3.5 Connectivity and Entertainment

The tablet supports Wi-Fi and Bluetooth for seamless connectivity. It is GMS Certified, allowing access to thousands of apps from the Google Play Store, including popular streaming and social media applications. It also supports GPS for navigation (requires Wi-Fi connection).

# Long-lasting Navigation Support GPS ( Need WIFI )



Figure 3.6: The tablet's GPS functionality for navigation.



Figure 3.7: The tablet's compatibility with a wide range of popular applications.

## 4. SETUP GUIDE

### 4.1 Initial Charging

Before first use, fully charge your PRITOM M10 Tablet. Connect the provided USB-C cable to the tablet's charging port and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging progress. A full charge typically takes 3-4 hours.

### 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) for a few seconds until the PRITOM logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select 'Power off' or 'Shut down'.
- **To Restart:** From the power-off menu, select 'Restart'.

### 4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet. This is crucial for downloading apps and updates.
3. **Google Account:** Sign in with your existing Google account or create a new one. This is required to access the Google Play Store and other Google services.
4. **Date & Time:** Set the correct date and time, or allow the network to set it automatically.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for security.

### 4.4 Inserting a Micro SD Card (Optional)

To expand storage, locate the Micro SD card slot (often under a small flap on the side). Gently insert the Micro SD card with the gold contacts facing down until it clicks into place. The tablet will recognize the new storage.

## 5. OPERATING YOUR TABLET

### 5.1 Basic Touchscreen Gestures

- **Tap:** To select an item, open an app, or press a button.
- **Touch & Hold:** To open contextual menus or move items.
- **Swipe:** To scroll through lists or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on photos, maps, or web pages.

### 5.2 Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn Wi-Fi on, select your network, and enter the password.
- **Bluetooth:** Go to Settings > Connected devices > Connection preferences > Bluetooth. Turn Bluetooth on, and the tablet will scan for available devices. Select a device to pair.

### 5.3 Downloading and Managing Apps

Access the Google Play Store app from your home screen or app drawer. Browse or search for apps, then tap 'Install' to download them. To manage apps, go to Settings > Apps & notifications.

### 5.4 Using the Cameras

Open the Camera app. You can switch between the front and rear cameras, take photos, and record videos. Tap the screen to focus, and use the on-screen shutter button to capture.

### 5.5 Battery Management

To optimize battery life, reduce screen brightness, turn off Wi-Fi/Bluetooth when not in use, and close background apps. You can monitor battery usage in Settings > Battery.

## 6. MAINTENANCE

### 6.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid harsh chemicals or abrasive materials.

### 6.2 Software Updates

Regularly check for system updates to ensure your tablet has the latest features and security patches. Go to Settings > System > System update.

### 6.3 Storage Management

To maintain optimal performance, periodically clear unnecessary files and uninstall unused apps. You can check storage usage in Settings > Storage.

## 7. TROUBLESHOOTING

If you encounter issues with your PRITOM M10 Tablet, refer to the following common solutions:

| Problem                 | Possible Cause                                                        | Solution                                                                                                       |
|-------------------------|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Tablet won't turn on    | Low battery; System crash                                             | Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart. |
| Wi-Fi connection issues | Incorrect password; Router issue; Signal interference                 | Verify password. Restart router. Move closer to router. Forget network and reconnect.                          |
| Slow performance        | Too many apps running; Low storage; Outdated software                 | Close unused apps. Clear cache. Uninstall unnecessary apps. Check for system updates.                          |
| Battery drains quickly  | High screen brightness; Background apps; Frequent Wi-Fi/Bluetooth use | Reduce brightness. Close background apps. Turn off Wi-Fi/Bluetooth when not needed.                            |

If problems persist, consider performing a factory reset (Settings > System > Reset options > Erase all data).**Warning: This will erase all data on your tablet. Back up important data before proceeding.**

## 8. SPECIFICATIONS

Detailed technical specifications for the PRITOM M10 Tablet:

| Feature                | Detail                                       |
|------------------------|----------------------------------------------|
| Brand                  | PRITOM                                       |
| Model Name             | M10 (Touch 10)                               |
| Operating System       | Android 13 Go                                |
| Processor              | Quad-Core, 1.5 GHz (Unisoc)                  |
| RAM                    | 4GB (+2GB Expand)                            |
| Internal Storage (ROM) | 64GB                                         |
| Expandable Storage     | Up to 512GB via Micro SD card (not included) |
| Screen Size            | 10 Inches                                    |
| Screen Resolution      | 1280 x 800 Pixels (HD IPS)                   |
| Front Camera           | 2.0 MP                                       |
| Rear Camera            | 8.0 MP                                       |
| Wireless Connectivity  | 802.11n, 802.11b, 802.11g (Wi-Fi), Bluetooth |
| Battery Life (Average) | 8 Hours (mixed use)                          |
| Dimensions (LxWxH)     | 9.6 x 6.9 x 0.3 inches                       |

| Feature     | Detail      |
|-------------|-------------|
| Item Weight | 2.03 pounds |
| Color       | Cyan        |

## 9. WARRANTY AND SUPPORT

The PRITOM M10 Tablet comes with a **1-year worry-free guarantee**. If you experience any quality issues with the tablet within this period, it can be returned for a free replacement.

PRITOM is committed to providing reliable customer service. For technical support, warranty claims, or any other inquiries, please contact PRITOM customer service via the contact information provided on their official website or through your purchase platform. Please have your model number (M10) and purchase details ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

- Where can I download the original stock ROM firmware and flashing tools for the PRITOM M10 tablet (Model M10\_C07\_EEA, Android 13, Build TQ2A.230405.003.B2)?**

The "CRASHDUMP NOW, PLEASE CONNECT TO TIGERDUMP TOOL" error typically indicates a critical system failure or corrupted partition on devices using Unisoc (formerly Spreadtrum) processors, such as the PRITOM M10. Unfortunately, PRITOM does not provide...

[Read full answer](#)
- My PRITOM M10 tablet refuses to boot up, and after attempting a reset, it only displays a 'No command'**

**prompt. How can I fix this?**

The "No command" screen is a common Android recovery state. To bypass this screen and access the recovery menu on your PRITOM M10, follow these steps: Access the Menu: While on the "No command" screen...

[Read full answer](#)