

[Manuals.plus](#) /

› [Seiko Clocks](#) /

› Seiko QHP011B Alarm Clock User Manual

Seiko Clocks QHP011B

Seiko QHP011B Alarm Clock User Manual

Model: QHP011B

INTRODUCTION

Thank you for choosing the Seiko QHP011B Alarm Clock. This analog alarm clock features a silent sweep second hand, selectable alarm sounds (two melodies or a beep), a snooze function, and adjustable alarm volume. Its compact design with a wood-grain plastic finish makes it suitable for various indoor settings, including bedrooms and children's rooms. Please read this manual carefully before use to ensure proper operation and longevity of your clock.

SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel.
- Dispose of used batteries according to local regulations.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Seiko QHP011B Alarm Clock
- User Manual (this document)

Note: Batteries are not included and must be purchased separately.

SETUP

Battery Installation

The Seiko QHP011B requires three (3) AA batteries for operation.

1. Locate the battery compartment cover on the back of the clock.

2. Slide or unclip the cover to open the compartment.
3. Insert three new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Figure 1: Front view of the Seiko QHP011B Alarm Clock. This image displays the clock's analog face, featuring clear hour and minute markers, a silent sweep second hand, and a separate small dial for setting the alarm time. The clock has a wood-grain plastic finish.

OPERATING INSTRUCTIONS

Setting the Time

To set the current time:

1. Locate the **Time Setting Knob** on the back of the clock.
2. Rotate the knob in either direction until the hour and minute hands display the correct time.

Setting the Alarm

To set the alarm time:

1. Locate the **Alarm Setting Knob** on the back of the clock.
2. Rotate the knob until the alarm hand points to your desired alarm time.
3. Locate the **Alarm ON/OFF Switch** (usually a small slide switch) on the back or side of the clock. Slide it to the "ON" position to activate the alarm.

Selecting Alarm Sound

The QHP011B offers a choice of alarm sounds: two melodies or a traditional beep. Locate the **Alarm Sound Selector Switch** (if present, typically on the back) and slide it to your preferred setting.

Snooze Function

When the alarm sounds, press the **Snooze Button** (usually a large button on top of the clock). The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes). To turn off the alarm completely, slide the Alarm ON/OFF switch to the "OFF" position.

Adjusting Alarm Volume

The alarm volume can be adjusted. Locate the **Volume Control Dial** (if present, typically on the back) and rotate it to increase or decrease the alarm sound level to your preference.

Silent Second Hand

This clock features a silent sweep second hand, ensuring a quiet environment free from ticking sounds, which is ideal for bedrooms.

MAINTENANCE

Cleaning

To clean the clock, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

Battery Replacement

When the clock's display becomes dim, the alarm weakens, or the clock stops functioning, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all three AA batteries at the same time with new ones.

TROUBLESHOOTING

- **Clock not working:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new ones.
- **Alarm not sounding:** Check if the Alarm ON/OFF switch is in the "ON" position. Verify the alarm time is set correctly. Ensure batteries are not depleted.
- **Alarm too quiet/loud:** Adjust the Volume Control Dial on the back of the clock.
- **Inaccurate timekeeping:** Replace batteries. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Description
Model Number	QHP011B
Dimensions (L x W x H)	11.1 x 3.81 x 8.6 cm (approximately 4.37 x 1.5 x 3.39 inches)
Weight	170 grams (approximately 0.37 lbs)
Material	Plastic with wood-grain finish
Display Type	Analog
Power Source	3 x AA Batteries (not included)
Special Features	Silent sweep second hand, Selectable alarm (2 melodies/beep), Snooze, Adjustable alarm volume
Intended Use	Indoor (Bedroom, Children's Room)

WARRANTY AND SUPPORT

Seiko Clocks products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Seiko Clocks website. For technical support or service inquiries, please contact Seiko Clocks customer service through their official channels.

© 2023 Seiko Clocks. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQTGQVYF>

More documents and user manuals: <https://manuals.plus/>