

[Manuals.plus](#) /

› [Best Choice Products](#) /

› Best Choice Products Pretend Play Corner Kitchen (Model SKY6912) Instruction Manual

Best Choice Products SKY6912

Best Choice Products Pretend Play Corner Kitchen Instruction Manual

Model: SKY6912

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Best Choice Products Pretend Play Corner Kitchen. Please read these instructions carefully before assembly and use to ensure proper function and safety.



Overall view of the Best Choice Products Pretend Play Corner Kitchen in pink.

SAFETY INFORMATION

General Safety Guidelines

- **Age Recommendation:** This product is not suitable for children under 3 years old due to small parts.
- **Adult Assembly Required:** Assembly must be performed by an adult.
- **Supervision:** Children should be supervised during play.
- **Stability:** Ensure the kitchen is placed on a flat, stable surface to prevent tipping.
- **Battery Safety:** Follow battery installation instructions carefully. Do not mix old and new batteries, or different types of batteries. Remove batteries if the product is not used for extended periods.
- **Material Safety:** This playset is constructed from engineered wood with metal components and is ASTM & CPSIA-certified for safety.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the separate Assembly Guide for a detailed list of parts and hardware.

- Wooden kitchen panels and components
- Hardware pack (screws, fasteners, etc.)
- Interactive electronic components (stove hood, ice maker, stove burners)
- 6 play accessories (pots, utensils)
- Assembly Guide

ASSEMBLY INSTRUCTIONS

The Best Choice Products Pretend Play Corner Kitchen requires adult assembly. Due to the number of components, assembly can be time-consuming. Please follow the included Assembly Guide step-by-step to ensure correct and secure construction.

Key Assembly Points:

- **L-Shape Design:** The unique L-shape construction is designed to fit into a corner, optimizing space. Ensure proper orientation during assembly.
- **Hardware:** Use the correct screws and fasteners for each step as indicated in the Assembly Guide. Do not overtighten screws to avoid damaging the wood.
- **Electronic Components:** Install electronic parts (stove hood, ice maker, stove burners) as directed. These components require batteries (not included).

CORNER PLAYSET

L-shape for space-saving fun



**Bevel Pink Color Shown*

A child playing with the L-shaped corner kitchen, demonstrating its space-saving design.

PRODUCT DIMENSIONS



Diagram illustrating the overall dimensions of the corner kitchen playset.

OPERATING INSTRUCTIONS

The Pretend Play Corner Kitchen offers various interactive features for an engaging play experience.

Interactive Stove Hood:

- The stove hood features a light and mimics authentic sounds.
- Requires batteries for operation (not included).
- Press the designated buttons on the hood to activate lights and sounds.



A child pressing a button on the light-up stove hood, which also produces authentic sounds.

Pretend Ice Maker:

- The refrigerator includes a battery-powered ice dispenser.
- Press the lever to activate interactive lights and sounds, simulating ice dispensing.

PRETEND ICE MAKER

with interactive lights and sounds



**Bevel Pink Color Shown*

A child using the pretend ice maker, which features interactive lights and sounds.

Stove Burners and Knobs:

- The stove features glowing burners that produce sounds when activated.
- The oven and stove knobs produce clicking sounds when turned, mimicking real appliance controls.
- Requires batteries for burner lights and sounds (not included).

**Farmhouse White Color Shown*

CLICK

INTERACTIVE RANGE

with realistic clicking knobs

A child turning one of the interactive range knobs, which produce clicking sounds.

BATTERY-POWERED STOVE

with 6 play accessories



**GLOWING
BURNERS
WITH SOUNDS**



Close-up of the battery-powered stove with glowing burners and included play accessories.

Storage Areas:

- The playset includes open storage in the refrigerator, pantry, oven, and sink shelves.
- These areas provide space for storing play accessories and other items.

AMPLE STORAGE

Store accessories for easy clean up



**Farmhouse White Color Shown*

The kitchen playset in white, showcasing the ample storage compartments including cubbies, refrigerator, and pantry.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust the playset to maintain its appearance.
- **Battery Replacement:** Replace batteries in electronic components as needed. Ensure correct polarity.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.

TROUBLESHOOTING

Common Issues and Solutions:

- **Electronic Features Not Working:**
 - Check if batteries are installed correctly.

- Replace with fresh batteries.
- Ensure battery compartment covers are securely closed.
- **Loose Components:**
 - Refer to the Assembly Guide to identify the specific connection point.
 - Tighten screws or fasteners as needed. Do not overtighten.
- **Loud Stove Burner Sounds:**
 - If the sound level is too high, a small piece of tape can be placed over the speaker grille to slightly muffle the sound.

SPECIFICATIONS

Model Number	SKY6912
Product Dimensions	57" (L) x 24" (W) x 37.5" (H)
Item Weight	56 pounds
Recommended Age	3 years and up
Materials	Engineered wood, metal components
Certifications	ASTM F963, CPSIA

WARRANTY AND SUPPORT

For any questions regarding assembly, missing parts, or product functionality, please contact Best Choice Products customer support. Refer to your purchase documentation for specific warranty details and contact information. Best Choice Products is committed to providing reliable products and customer satisfaction.

© 2025 Best Choice Products. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQTVW1F4>

More documents and user manuals: <https://manuals.plus/>