

- Manuals.plus /
- › VIPERTEK /
- › VIPERTEK VTS-881 Micro Stun Gun User Manual

VIPERTEK VTS-881

VIPERTEK VTS-881 Micro Stun Gun User Manual

Model: VTS-881 | Brand: VIPERTEK

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your VIPERTEK VTS-881 Micro Stun Gun. This compact device is designed for self-defense and features an integrated LED flashlight. Please read all instructions carefully before operating the device.



Figure 1: Front view of the VIPERTEK VTS-881 Micro Stun Gun.

SAFETY PRECAUTIONS

- **Legal Restrictions:** Be aware of and comply with all local, state, and federal laws regarding the purchase, possession, and use of stun guns.
- **Intended Use:** This device is intended for self-defense purposes only.
- **Children:** Keep out of reach of children.
- **Flammable Materials:** Do not use near flammable liquids or gases.
- **Water Exposure:** Avoid exposing the device to water or excessive moisture.
- **Medical Conditions:** Do not use on individuals with pacemakers, heart conditions, or other serious medical conditions.
- **Testing:** When testing the stun gun, ensure it is pointed away from yourself and others. The loud sound and visible arc are normal.

SETUP

Charging the Device

The VIPERTEK VTS-881 features an internal rechargeable battery. Before first use, fully charge the device.

1. Locate the charging port on the side of the device.
2. Slide the charging plug out from the device.
3. Connect the included charging cable to the device and a standard wall outlet (adapter not included).
4. The indicator light will illuminate during charging.
5. Charge for approximately 8 hours for a full charge. The indicator light may change or turn off when fully charged, depending on the model.
6. It is recommended to charge the device once a month to maintain battery health, even if not used frequently.



Figure 2: The stun gun connected to a power outlet for charging.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls before an emergency situation.





Figure 3: Side view illustrating the safety switch, flashlight button, and stun activation button.

Safety Switch

The device is equipped with a safety switch to prevent accidental discharge. Ensure the switch is in the "OFF" position when not in use. To operate the flashlight or stun gun, slide the switch to the "ON" position.

Using the LED Flashlight

1. Slide the safety switch to the "ON" position.
2. Press the dedicated flashlight button (often marked with a lightbulb icon) to activate the LED flashlight.
3. Press the button again to turn off the flashlight.

Using the Stun Gun

The stun gun function is designed for immediate self-defense. The loud crackling sound alone can act as a deterrent.

1. Slide the safety switch to the "ON" position.
2. Press and hold the stun activation button (often marked with a lightning bolt icon).
3. The stun electrodes at the top of the device will emit an electrical arc and a loud sound.
4. To apply the stun, firmly press the electrodes against an attacker's body. A contact duration of 1-2 seconds is generally sufficient to cause muscle contraction and disorientation. Longer contact (3-5 seconds) can lead to loss of balance and muscle control.
5. Release the stun activation button to stop the discharge.
6. Immediately return the safety switch to the "OFF" position after use.



Figure 4: The stun gun with active electrodes and illuminated flashlight.

MAINTENANCE

- **Charging:** Recharge the device monthly to ensure optimal battery performance.
- **Cleaning:** Wipe the exterior of the device with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the stun gun in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the safety switch is in the "OFF" position during storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on or stun.	◦ Battery is depleted. ◦ Safety switch is in the "OFF" position. ◦ Stun activation button not pressed correctly.	◦ Charge the device fully (refer to "Charging the Device"). ◦ Ensure the safety switch is slid to the "ON" position. ◦ Press and hold the stun activation button firmly.
Flashlight is dim or not working.	◦ Battery is low. ◦ Flashlight button not pressed.	◦ Recharge the device. ◦ Ensure the safety switch is "ON" and press the flashlight button.

SPECIFICATIONS

- **Model:** VTS-881
- **Brand:** VIPERTEK
- **Color:** Black (for this variant)
- **Material:** Rubber
- **Product Dimensions:** 3.75 inches (L) x 1.5 inches (W)
- **Power Source:** Internal Rechargeable Battery
- **Included Components:** Charging Cable
- **Features:** Micro Stun Gun, LED Flashlight



Figure 5: Dimensions of the VIPERTEK VTS-881 Micro Stun Gun.



Figure 6: The stun gun held in a hand, demonstrating its compact size.



Figure 7: The stun gun stored in its included carrying holster.

WARRANTY INFORMATION

The VIPERTEK VTS-881 Micro Stun Gun comes with a **Limited Lifetime Warranty**. For details regarding warranty claims or service, please refer to the manufacturer's official website or contact their customer support directly. Proof of purchase may be required.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries, please visit the official VIPERTEK website or contact their customer service department. You can often find contact information on the product packaging or through the brand's online store:

VIPERTEK Brand Store: <https://www.amazon.com/stores/VIPERTEK/page/A7A1A96A-4118-44FE-9F94-72DAC018CA14>

© 2024 VIPERTEK. All rights reserved.

Disclaimer: This device is intended for self-defense only. Users are responsible for understanding and complying with all applicable laws and regulations regarding stun gun ownership and use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQVD1NP6>

More documents and user manuals: **<https://manuals.plus/>**