

[Manuals.plus](#) /

› [HAVA](#) /

› HAVA T01 Portable Washing Machine User Manual

HAVA T01

HAVA T01 Portable Washing Machine User Manual

Model: T01 | Brand: HAVA

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your HAVA T01 Portable Washing Machine. Designed for compact living spaces such as apartments, dormitories, and RVs, this fully automatic washer offers 8 wash cycles and 4 water level settings. Please read this manual thoroughly before first use and retain it for future reference.





Image 1.1: The HAVA T01 Portable Washing Machine, a compact and fully automatic appliance.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Ensure the washing machine is connected to a properly grounded electrical outlet.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation. The machine features a **Child Lock** function to prevent accidental changes to settings.
- Do not wash items that have been soiled with flammable substances.
- Always unplug the machine before cleaning or performing any maintenance.
- **Quality Control Note:** A small amount of residual water may be present in the unit due to manufacturer's quality testing. This is normal and does not indicate a defect.

3. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- 1 x HAVA T01 Washing Machine
- 1 x User Manual (this document)
- 1 x Water Supply Hose
- 1 x Drain Hose
- 1 x Protective Bottom Plate
- 2 x Screws



Image 3.1: The HAVA T01 Portable Washing Machine with its included accessories: water supply hose, drain hose, protective bottom plate, and screws.

4. SETUP AND INSTALLATION

4.1 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and access. The compact design measures 16.53 x 17.91 x 28.5 inches, requiring minimal floor space.



Image 4.1: The HAVA T01 Portable Washing Machine demonstrating its compact and space-saving design in a small living area.

4.2 Water Supply Connection

1. Connect one end of the water supply hose to the water inlet on the back of the washing machine.
2. Connect the other end of the water supply hose to a cold water faucet. Ensure connections are tight to prevent leaks.

4.3 Drain Hose Installation

Important Draining Note: The T01 does not drain upwards. The drain hose must lie flat on the floor, and no part of the

drain hose should be more than 4 inches (10 cm) above the floor to ensure proper drainage. Position the drain hose into a sink, tub, or floor drain.

4.4 Power Connection

Plug the power cord into a standard 120V AC grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The HAVA T01 features a touch-sensitive control panel with an LED display. The display indicates the remaining time and current cycle status.



Image 5.1: The HAVA T01 control panel, highlighting the 8 wash programs and 4 water level options.

5.2 Loading Laundry

Open the soft-close glass lid and load clothes into the stainless steel tub. The machine has a capacity of 0.8 cubic feet, accommodating up to 6.6 lbs (3 kg) of laundry. This is suitable for approximately 9 shirts, 4 pairs of pants/jackets/dresses, or 15 pieces of underwear.



Image 5.2: Visual representation of the HAVA T01's laundry capacity for various clothing items.

5.3 Adding Detergent

Add appropriate laundry detergent directly into the tub with the clothes. Follow detergent manufacturer's recommendations for load size.

5.4 Selecting a Wash Program

The HAVA T01 offers 8 wash programs:

- **Normal:** For everyday laundry.
- **Quick:** A fast wash cycle, completing in as little as 22 minutes.
- **Gentle:** Ideal for delicate fabrics, baby clothes, and lingerie.
- **Heavy:** For heavily soiled items.
- **Soak:** Pre-soaks clothes before the main wash.
- **Rinse & Spin:** For rinsing and spinning items without a full wash.
- **Spin:** Extracts excess water from clothes. The maximum spin speed is 750 RPM.
- **Tub Clean:** For cleaning the washing machine tub.

Select the desired program using the touch controls. You can also choose from 4 water level settings to optimize water usage for different load sizes.

5.5 Additional Features

- **Delay Start:** Program the machine to start a wash cycle up to 24 hours later, allowing you to take advantage of off-peak electricity rates.
- **Child Lock:** Activate this feature to lock the control panel, preventing unintended operation by children.



Image 5.3: The HAVA T01 Portable Washing Machine illustrating the Child Lock feature for safety.



Image 5.4: The HAVA T01 Portable Washing Machine highlighting the 24-hour delay start function.

5.6 Starting a Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine operates quietly, with a noise level of less than 60 dB.



Image 5.5: The HAVA T01 Portable Washing Machine demonstrating its quiet operation, rated at less than 60 dB.

6. MAINTENANCE

6.1 Tub Cleaning

Regularly use the **Tub Clean** program to ensure the washing machine's internal components remain clean and free of residue, maintaining optimal washing performance. The stainless steel tub is designed for durability and easy maintenance.



**STAINLESS
STEEL TUB**

**SOFT-CLOSING
GLASS LID**



Image 6.1: Detail of the HAVA T01's durable stainless steel tub and soft-closing glass lid.

6.2 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6.3 Filter Cleaning

Check and clean the lint filter (if applicable, typically located inside the tub or near the drain) regularly to prevent blockages and ensure efficient operation.

7. TROUBLESHOOTING

If you encounter issues with your HAVA T01 Portable Washing Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Child Lock activated; Lid not closed properly.	Check power connection; Deactivate Child Lock; Ensure lid is fully closed.
Water does not drain	Drain hose elevated; Drain hose kinked or blocked; Filter clogged.	Ensure drain hose is flat on the floor (max 4 inches height); Straighten hose; Clean filter.
Excessive vibration or noise	Machine not level; Load unbalanced.	Adjust leveling feet; Redistribute laundry evenly in the tub.
Poor cleaning performance	Overloaded tub; Insufficient detergent; Incorrect wash program.	Reduce load size; Use appropriate amount of detergent; Select suitable wash program.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	HAVA
Model	T01
Capacity	0.8 Cubic Feet (approx. 6.6 lbs / 3 kg)
Product Dimensions (D x W x H)	19.3 x 18.1 x 27.85 inches
Item Weight	43.1 pounds
Max Spin Speed	750 RPM
Noise Level	Less than 60 dB
Installation Type	Freestanding
Control Console	Touch
Standard Cycles	8 (Normal, Quick, Gentle, Heavy, Soak, Rinse & Spin, Spin, Tub Clean)
Water Level Settings	4
Access Location	Top Load
Voltage	120 Volts (AC)
Material Type	Stainless Steel Tub
Special Features	8 Wash Program Options, Child Lock, Compact Design, Delay Start, Full Automatic Functionality

9. WARRANTY AND SUPPORT

9.1 Product Warranty

HAVA provides a **one-year warranty** for all new T01 Portable Washing Machine units from the date of purchase. This warranty covers manufacturing defects under normal use conditions. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, concerns, or assistance with your HAVA T01 Portable Washing Machine, please contact our customer support team. We are committed to providing support and resolving any issues you may encounter. Contact information can typically be found on the HAVA official website or on the product packaging.

© 2025 HAVA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question