

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Uthfy](#) /

› [Uthfy 46-inch Tower Fan User Manual](#)

Uthfy HY-13RL

Uthfy 46-inch Tower Fan User Manual

Model: HY-13RL

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or foreign objects into any openings of the fan.
- Unplug the fan from the power outlet when not in use, when moving it from one location to another, or before cleaning.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- The bladeless design enhances safety, especially around children and pets.
- This product is equipped with safety plugs to prevent damage from voltage overloads, as certified by ETL.

PRODUCT FEATURES

- **Powerful Airflow:** Delivers air at 28 ft/s speed, effectively circulating air in your living space.
- **Wide Oscillation:** Features 120° ultra-wide oscillation to cover a larger area and increase air circulation.
- **Smart Timer Function:** Unique 24-hour auto on/off timer can be set even when the power switch is off. The display turns off after 15 seconds for undisturbed rest.
- **Multiple Speed & Mode Options:** Offers 3 speed levels (low, medium, high) and 3 wind modes (sleep, natural, normal) for personalized cooling.
- **User-Friendly Controls:** Top control panel for easy operation without bending, and a clear front LED display.
- **Convenient Remote Control:** Adjust all settings from up to 26 feet away.
- **Portable Design:** Compact and slim with a hidden handle for easy transport between rooms. Includes a built-in compartment for remote storage.
- **Space-Saving:** Slim design fits beautifully into any corner of your home or office.

PACKAGE CONTENTS

- Uthfy 46-inch Tower Fan (Model: HY-13RL)
- Remote Control

SETUP GUIDE

The Uthfy 46-inch Tower Fan requires minimal assembly before first use.

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in the "Package Contents" section are present.
2. **Assemble Base:** Attach the fan base to the main body of the tower fan. Align the grooves and secure with the provided fasteners (if any, typically screws). Refer to the diagram below for visual guidance.
3. **Positioning:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.
5. **Remote Batteries:** Insert 2 AAA batteries (not included) into the remote control, observing polarity.

Space-saving Design

Slim, space-saving design perfects for any corner.



Figure 1: Space-saving design and dimensions of the Uthfy 46-inch Tower Fan.

OPERATING INSTRUCTIONS

The Uthfy Tower Fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel Overview



Figure 2: Top control panel and digital display.

- **Power Button:** Turns the fan on or off.

- **Speed Button:** Cycles through 3 wind speeds: Low, Medium, High.
- **Mode Button:** Selects between 3 wind modes: Normal, Natural, Sleep.
- **Oscillation Button:** Activates or deactivates the 120° oscillation function.
- **Timer Button:** Sets the auto on/off timer from 1 to 24 hours.
- **LED Display:** Shows current settings, including wind speed, mode, timer, and ambient room temperature. The display will dim after 15 seconds of inactivity.

Remote Control Functions

Easy-to-Read Remote Control

Large remote control with different functions for more convenient operation



Figure 3: Remote control for convenient operation.

The remote control allows you to access all fan functions from up to 26 feet away. Ensure the remote is pointed towards the fan's receiver for optimal response.

- **ON/OFF:** Powers the fan on or off.
- **SPEED:** Adjusts the fan speed.

- **MODE:** Changes the wind mode.
- **SWING:** Toggles oscillation.
- **TIMER:** Sets the timer.

Wind Modes Explained

- **Normal Mode:** Provides a constant, steady airflow at the selected speed.
- **Natural Mode:** Simulates natural breeze by varying fan speed intermittently.
- **Sleep Mode:** Operates at a lower, quieter speed with dimmed display for undisturbed sleep.

More Speeds to Your Needs

With 3 speeds & 3 modes, you can always feel the comfortable breeze for you.

3 Wind Modes:



Sleep Mode



Natural Mode



Coal Mode

3 Wind Speeds:



Low

Medium

High



Figure 4: Available wind speeds and modes.

Broad Blowing Range

Chills on every inch of your room with 80° widespread oscillation.



Figure 5: Wide 120° oscillation for broad cooling range.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- Before Cleaning:** Always unplug the fan from the power outlet before cleaning.
- Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents as they may damage the finish.
- Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to gently remove dust and debris from the air inlet and outlet grilles.
- Storage:** If storing the fan for an extended period, cover it with a cloth or plastic bag to protect it from dust. Store in a cool, dry place.

TROUBLESHOOTING GUIDE

If you experience issues with your Uthfy Tower Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Power button not pressed; Safety plug activated.	Ensure the fan is securely plugged into a working outlet. Press the power button. Check if the safety plug has tripped due to voltage overload.
No airflow or weak airflow.	Air inlets/outlets blocked; Fan speed set too low.	Clean any dust or obstructions from the grilles. Increase the fan speed setting.
Remote control not working.	Batteries are dead or incorrectly inserted; Remote not pointed at receiver; Obstruction between remote and fan.	Replace batteries and ensure correct polarity. Point the remote directly at the fan's control panel. Remove any obstructions.
Fan is noisy.	Fan not on a level surface; Internal obstruction.	Ensure the fan is on a stable, flat surface. Check for any foreign objects inside the fan (unplug first).

If the problem persists after trying these solutions, please contact Uthfy customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Uthfy
Model Name	Uthfy 46 Inch Tower Fan with Remote Control (HY-13RL)
Product Dimensions	12.18"D x 12.18"W x 45.86"H
Item Weight	11 pounds
Color	Black
Mounting Type	Floor Mount
Controls Type	Remote, Top Control Panel
Noise Level	20 dB
Voltage	120.0 V

Feature	Detail
Special Features	Display Ambient Temperature, Remote Controlled, Portable, Memory Function, Oscillating Fan (120°), Bladeless, 24H Auto-on/off Timer
Certifications	ETL Certified
Assembly Required	Yes
Batteries Required (Remote)	Yes (2x AAA, not included)

WARRANTY AND SUPPORT

The Uthfy 46-inch Tower Fan comes with a **1-year warranty** from the date of purchase, covering defects in materials and workmanship.

For warranty claims, technical support, or any questions regarding your product, please contact Uthfy customer support through their official channels. You can find more information and contact details on the [Uthfy Brand Store on Amazon](#).

© 2024 Uthfy. All rights reserved.