

[Manuals.plus](#) /

› [BOBLOV](#) /

› BOBLOV W1 Body Camera User Manual

BOBLOV W1

BOBLOV W1 Body Camera User Manual

Model: W1 (CM15UK-64GBW1)

1. INTRODUCTION

Thank you for choosing the BOBLOV W1 Body Camera. This compact and versatile device is designed for reliable video recording in various scenarios, including law enforcement, outdoor activities, and personal use. This manual provides detailed instructions to help you set up, operate, and maintain your W1 body camera for optimal performance.



Portable Size Body Camera

More handy & ergonomic camera design

Image 1.1: The BOBLOV W1 Body Camera, showcasing its portable and ergonomic design.

2. PRODUCT OVERVIEW

The BOBLOV W1 is a high-definition body camera featuring a Novatek chipset and Sony sensor for clear 1080P video quality. Its compact design includes a durable clip for easy attachment to clothing or gear, making it ideal for hands-free recording.

2.1 Camera Components and Controls



Image 2.1: Diagram illustrating the various components and controls of the BOBLOV W1 Body Camera.

- **Power Button:** Used to turn the camera on/off.
- **Video Button:** Initiates and stops video recording.
- **Photo Button:** Captures still images.
- **Audio Button:** Starts and stops audio-only recording.
- **Charging Port (USB):** For charging the device and connecting to a computer.
- **Card Slot:** For inserting the Micro SD card.
- **Reset Button:** Small pinhole for factory reset.

3. WHAT'S IN THE BOX

Upon unboxing your BOBLOV W1 Body Camera, please verify that all the following items are included:

Packaging Lists



- | | | | | | |
|---|------------------|---|-------------|---|-------------|
| 1 | W1 Body Camera | 2 | Card Reader | 3 | User Manual |
| 4 | A1 Micro SD Card | 5 | Small Clip | 6 | USB Cable |

Image 3.1: Contents of the BOBLOV W1 Body Camera package.

- 1 x BOBLOV W1 Body Camera
- 1 x USB Cable
- 1 x User Manual
- 1 x Card Reader
- 1 x 64GB A1 Micro SD Card (pre-installed or separate)

4. SETUP

4.1 Inserting the Micro SD Card

The BOBLOV W1 camera supports Micro SD cards up to 128GB. A 64GB A1 Micro SD card is included. Locate the card slot on the side of the camera. Gently insert the Micro SD card with the gold contacts facing the back of the camera until it clicks into place.

4.2 Initial Charging

Before first use, fully charge the camera. Connect the provided USB cable to the camera's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate. A full charge takes approximately 2 hours.

Lasting 90 Mins Video Recording

Charging Time: **2** Hrs

Support Recording when Charging

Built-in **550** mAh Battery



Image 4.1: The BOBLOV W1 camera connected for charging, highlighting its 90-minute recording capability and 2-hour charging time.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **To Power On:** Slide the ON/OFF switch to the 'ON' position. The indicator light will turn on.
- **To Power Off:** Slide the ON/OFF switch to the 'OFF' position. The indicator light will turn off.

5.2 Recording Video

- Ensure the camera is powered on.
- Press the **Video Button** once to start video recording. The indicator light will flash.
- Press the **Video Button** again to stop recording. The indicator light will become solid.
- The camera supports loop recording, automatically overwriting the oldest files when the memory card is full.

5.3 Taking Photos

- Ensure the camera is powered on.
- Press the **Photo Button** once to capture a still image. The indicator light will flash briefly.

5.4 Recording Audio

- Ensure the camera is powered on.
- Press the **Audio Button** once to start audio-only recording. The indicator light will flash in a specific pattern (refer to camera's LED behavior for details).
- Press the **Audio Button** again to stop audio recording.

5.5 Playback and File Transfer

To access recorded files, you have two primary methods:

- **Connect to PC via USB:** Use the provided USB cable to connect the camera directly to your computer. The camera will appear as a removable disk, allowing you to drag and drop files.
- **Use the Card Reader:** Remove the Micro SD card from the camera and insert it into the provided card reader. Connect the card reader to your computer's USB port to access the files.

Different Methods to Playback Files & Setting

Connect to PC via cable provided



Use the card reader



Image 5.1: Visual representation of connecting the camera directly to a PC via USB cable and using the included card reader for file playback and settings adjustment.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera

regularly, even if not in use, to maintain battery health.

- **Firmware Updates:** Check the official BOBLOV website periodically for any available firmware updates to ensure optimal performance and new features.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery; Power switch in OFF position.	Charge the camera fully; Ensure power switch is ON.
Cannot record video/photo.	Micro SD card full or not inserted correctly; Card error.	Check card insertion; Format or replace Micro SD card; Delete old files.
Poor video quality.	Dirty lens; Low light conditions.	Clean the lens; Ensure adequate lighting.
Camera not recognized by PC.	Faulty USB cable; Driver issue; Camera not in correct mode.	Try a different USB cable/port; Restart PC; Use card reader.
Short battery life.	Battery degradation; Continuous recording.	Ensure full charge; Reduce continuous recording; Consider power bank for extended use.

8. SPECIFICATIONS

Explore More Use Way



Delivery Man



Security



Service Job



Daily Recording



Image 8.1: The BOBLOV W1 camera highlighting its 1080P video resolution and SONY 307 Sensor.

Feature	Detail
Model Name	W1 (CM15UK-64GBW1)
Video Resolution	1080p
Photo Resolution	15.98 MP (Max Webcam Image Resolution)

Feature	Detail
Battery Capacity	550 mAh Lithium Polymer
Recording Time	Up to 90-100 minutes (1080P)
Charging Time	Approx. 2 hours
Storage	Micro SD Card (32GB/64GB/128GB max), 64GB A1 card included
Connectivity	USB, Wi-Fi (for compatible devices)
Dimensions (L x W x H)	4.92 x 3.94 x 3.15 inches
Weight	4.6 ounces
Field of View	120 Degrees
Water Resistance Level	Not Water Resistant (IP54 rated for dust and splash protection)
Included Components	W1 body camera, USB cable, user manual, card reader

9. WARRANTY AND SUPPORT

BOBLOV stands behind the quality of its products. Your W1 Body Camera comes with a **24-month product coverage** for BOBLOV supporters. For any technical assistance or inquiries, BOBLOV offers quick response within 24 hours and lifetime technical support. For further support, please visit the official BOBLOV website or contact their customer service directly.

© 2024 BOBLOV. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question