

Anker A1257

Anker Power Bank (10000mAh, 22.5W) Instruction Manual

Model: A1257

1. INTRODUCTION

Thank you for choosing the Anker Power Bank (10000mAh, 22.5W). This portable charger is designed to provide reliable and fast power to your devices on the go. It features a compact design, high capacity, and multiple safety protections.



Image: Anker Power Bank (10000mAh, 22.5W) in various colors, highlighting its next-generation design.

Key Features:

- **Compact and High Capacity:** Despite its small size, it offers 10000mAh, capable of charging an iPhone 17 approximately 1.8 times or a Galaxy S25 approximately 1.7 times.
- **Ultra-Thin Design:** At approximately 16mm thick, it is thinner than a 1-yen coin's diameter, making it easy to carry in small pockets.
- **Integrated Strap Cable:** The included USB-C to USB-C cable can be stored and used as a convenient strap, eliminating the need for an extra cable.

- **22.5W Fast Charging:** Delivers up to 22.5W output for rapid charging of compatible smartphones and other devices.
- **Multi-Device Charging:** Equipped with two USB-C ports and one USB-A port, allowing simultaneous charging of up to three devices.
- **Enhanced Safety Features:** Incorporates temperature management, short-circuit prevention, and current/voltage control for safe operation, complying with PSE technical standards.



Image: Icons representing 22.5W fast charging, included USB-C cable, compact size, and digital display.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Anker Power Bank (10000mAh, 22.5W)
- USB-C to USB-C Cable (integrated strap design)
- Instruction Manual
- Customer Support Information

3. SETUP

Initial Charging of the Power Bank

Before first use, fully charge your Anker Power Bank. This ensures optimal performance and battery longevity.

1. Connect the included USB-C to USB-C cable to one of the USB-C ports on the power bank.
2. Connect the other end of the cable to a compatible USB wall charger (not included). For fastest charging, use a charger that supports 20W Power Delivery.
3. The digital display on the power bank will show the charging progress. It is fully charged when the display shows 100%.

最大22.5W急速充電



Image: Illustration showing how to charge the Anker Power Bank using a USB-C cable and wall adapter.

4. OPERATING INSTRUCTIONS

Charging Your Devices

The Anker Power Bank can charge various devices, including smartphones, tablets, and other USB-powered gadgets.


1. Connect your device to the power bank using a compatible USB cable. You can use the included USB-C to USB-C cable or your device's original charging cable.
2. The power bank will automatically begin charging your device. The digital display will show the remaining battery percentage.
3. To charge multiple devices, connect them to the available USB-C and USB-A ports. The power bank supports simultaneous charging of up to three devices.

幅広い機器に対応

最大22.5W出力に対応し、iPhoneやAndroidスマートフォンからタブレット端末まで幅広い機器に充電可能です



 iPhone 17 / 16 / 15
シリーズ

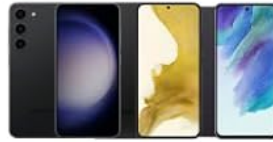

Galaxy S25 / S24 / S23
シリーズ



Soundcore
Liberty 4



Pixel 8 / 7
シリーズ



iPad Air / Pro
シリーズ

3台同時充電が可能

USB-Cポートを2つ、USB-Aポートを1つ搭載し最大3台同時に充電可能です



Image: The Anker Power Bank connected to and charging multiple devices, including smartphones and earbuds.

Checking Battery Level

Press the power button once to activate the digital display, which shows the remaining battery percentage.

Using the Integrated Strap Cable

The included USB-C to USB-C cable is designed to be stored neatly and also functions as a strap for easy carrying.

- To use as a strap: Ensure both ends of the USB-C cable are securely tucked into their designated slots on the power bank.
- To charge: Pull out the USB-C connectors from their slots and connect them to your devices.

ストラップとして使用可能な ケーブルつき

付属ケーブルの端子部分を収納して
ストラップとして使用できる設計を初めて採用
外出先でケーブル忘れの心配がありません





※本製品のストラップは、本製品に付属のケーブル専用になります。その他のケーブルには対応しておりません
※同梱されているケーブルは約10,000回の折り曲げに対応可能 / Anker調べ

Image: A hand holding the Anker Power Bank by its integrated strap cable, demonstrating its dual function.

5. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power bank.

- **Cleaning:** Use a dry, soft cloth to clean the surface of the power bank. Do not use corrosive cleaners or sprays.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Health:** For optimal battery health, fully charge and discharge the power bank at least once every three months if not in regular use.

6. TROUBLESHOOTING

Common Issues and Solutions:

- **Power Bank Not Charging:**
 - Ensure the charging cable is securely connected to both the power bank and the wall charger.
 - Try a different wall charger and cable to rule out faulty accessories.
 - Verify the wall charger is functioning correctly.
- **Device Not Charging from Power Bank:**
 - Ensure the power bank has sufficient charge.
 - Check if the charging cable connecting the device to the power bank is working correctly.
 - Try a different port on the power bank.
 - Some devices may require a specific charging protocol; ensure compatibility.
- **Slow Charging:**
 - Ensure you are using a fast-charging compatible cable and wall adapter for the power bank itself.
 - For device charging, ensure your device and cable support fast charging protocols (e.g., Power Delivery).

When to Stop Use Immediately:

Discontinue use and contact customer support if you observe any of the following:

 
こんな時にはすぐに



使用をやめましょう



膨らんでいる

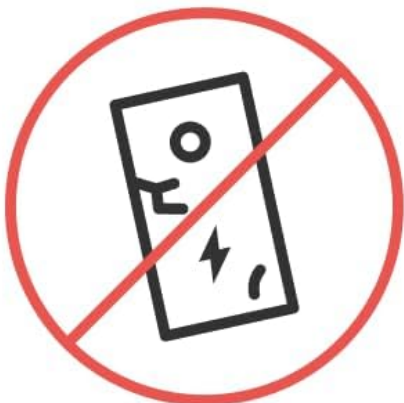

破損・
変形している



ポート内部に
ピン折れなどの
破損がある

Image: Visual warnings to stop using the power bank if it is swollen, damaged/deformed, or has internal port damage.

- The power bank appears swollen.

- The power bank is damaged or deformed.
- There is damage inside the charging ports (e.g., a broken pin).

7. SPECIFICATIONS

Feature	Specification
Brand	Anker
Model Number	A1257
Capacity	10000mAh
Max Output	22.5W
Input Voltage	5 Volts
Battery Type	Lithium Polymer
Item Weight	200 grams
Battery Weight	135 grams
Dimensions (L x W x H)	11.4 x 7.1 x 1.6 cm
Ports	2x USB-C (Input/Output), 1x USB-A (Output)
Compatible Devices	Smartphones, Tablets, and other USB-powered devices
UPC	194644189976

8. WARRANTY AND SUPPORT

Anker provides comprehensive warranty and customer support for your product.

Warranty Information:

Your Anker Power Bank comes with an **18-month warranty** from the date of purchase. In case of any defects or issues, Anker will handle exchanges or repairs. Additionally, if you register as an Anker member, your warranty will be automatically extended to **24 months**.

Anker Nanoシリーズなら

最大保証期間24ヶ月で ご購入後もさらに安心

最大
24ヶ月



+

会員限定
6ヶ月
延長保証

ご注文日から18ヶ月の間、不具合と思われる事象が生じた場合、同一製品との交換、又は修理対応等当社にて適切と判断する対応を承ります。加えて、Ankerで会員登録いただくと24ヶ月保証へ自動延長します。



日本語カスタマーサポート

製品・配送に関するご質問は
カスタマーサポートまでお気軽にご連絡ください。



Ankerグループのすべての対象製品 (モバイルバッテリー・急速充電器・イヤホン等) は、電気用品安全法 (PSE) の定める技術基準に適合しております。

※正規販売を行っている「Anker Direct」よりご購入された場合のみ、18ヶ月保証の対象となります。また、注文番号が保証書代わりとなります。 ※本製品は最大24カ月保証対象製品となります。Ankerで会員登録（無料）いただくと、通常18ヶ月の製品保証が24ヶ月へ自動延長されます。

Image: Visual representation of Anker's 18-month standard warranty and an additional 6-month extension for registered members, totaling 24 months.

Customer Support:

For any inquiries regarding the product or delivery, please contact our customer support team. Our dedicated support staff is available to assist you.

Please refer to the customer support information included in your package for contact details.

9. SAFETY INFORMATION

 
To ensure safe operation and prevent damage, please observe the following precautions:

General Precautions:


使用上のご注意

長時間高温になる場所での本製品のご使用や放置は、モバイルバッテリー内のリチウムイオン電池が熱の影響により膨張、破裂、発火するおそれがあるためお避けください。

特に下記のような環境にご注意ください

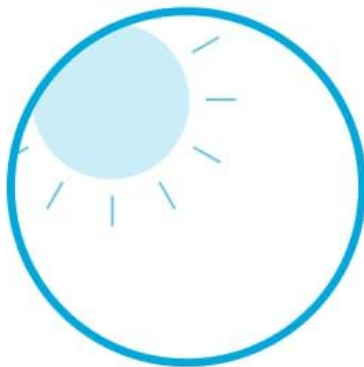

炎天下の屋外

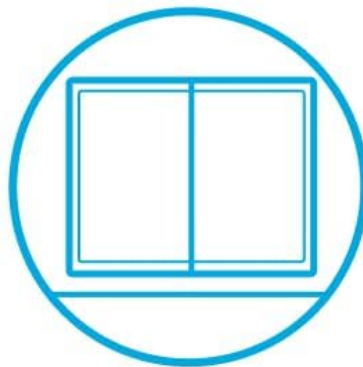 

直射日光の
当たる窓際



夏場など
高温になる車内

充電中は熱を帯びることがありますが、通常の仕様ですのでご安心ください。温度上昇時には、製品本体の保護機能により、デバイスへの充電が停止される場合がございます。製品本体やデバイスを守るための正常な動作のため、ご安心ください。温度が下がり、安定した状態になり次第、充電が再開されます。

Image: Visual warnings against using or storing the power bank in high temperatures, direct sunlight, or hot car interiors.

- Avoid using or placing the product in areas with high temperatures for extended periods. This can cause the lithium-ion battery inside to expand, rupture, or ignite.
- Do not expose the power bank to direct sunlight.
- Do not leave the power bank in a hot car or similar high-temperature environments.
- During charging, the power bank may generate some heat, which is normal. If the temperature rises excessively, the product's protection function may stop charging. Charging will resume once the temperature stabilizes.

Important Safety Points:

モバイルバッテリーを安全に使用するために



注意するポイント

熱を加えない



衝撃を与えない



濡らさない



高温・多湿な所に
保管しない



Image: Visual guidelines for safe use: Do not apply heat, do not impact, do not get wet, do not store in high temperature/humidity.

- Do not apply heat to the power bank.
- Avoid dropping or subjecting the power bank to strong impacts.
- Do not get the power bank wet.
- Do not store in high temperature or high humidity environments.

Anker's Commitment to Safety:

Ankerの



安全性への取り組み

01 | 多重保護機能



02 | 徹底した検査工程






安全のための
複数の保護機能を搭載



製造から出荷まで
複数の品質チェックを実施

04 | バッテリーの回収

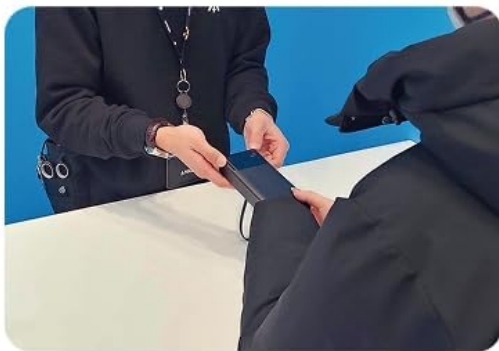 

2年を目安に交換を
おすすめしています

※交換目安は製品によって異なります

03 | 徹底した検査工程



日本語での
カスタマーサポートに加え、
製品の修理も相談可能

※修理条件・内容は製品によって異なります

Image: Anker's four-point commitment to safety: Multi-protection functions, thorough inspection processes, battery recycling, and dedicated customer support.

- **Multiple Protection Functions:** Equipped with various safety features to protect against overcharge, over-discharge, short-circuit, and overheating.
- **Thorough Inspection Process:** Products undergo rigorous quality checks from manufacturing to shipment.
- **Battery Recycling:** Anker promotes responsible battery recycling. It is recommended to replace the battery every 2 years.
- **Japanese Customer Support:** Provides support in Japanese, including product repair consultations.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQX67KTW>

More documents and user manuals: <https://manuals.plus/>