

CAPOXO CP-PBV-32G-New

CAPOXO CP-PBV-32G-New Digital Voice Recorder User Manual

Model: CP-PBV-32G-New | Brand: CAPOXO

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your CAPOXO CP-PBV-32G-New Digital Voice Recorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize its lifespan.

The CAPOXO CP-PBV-32G-New is a 32GB digital voice recorder designed for capturing audio with clarity. It features a long-lasting battery, voice-activated recording, and MP3 playback capabilities. Its compact design allows for discreet use in various environments.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x CAPOXO CP-PBV-32G-New Digital Voice Recorder
- 1 x USB Cable
- 1 x Earphone
- 1 x User Manual (this document)



Image: Contents of the CAPOXO voice recorder package, including the recorder, USB cable, earphones, and user manual.

3. PRODUCT OVERVIEW

Familiarize yourself with the device's components and controls.



Image: Diagram showing the CAPOXO voice recorder with labels for the headphone plug, USB/Charge input, USB/Charge output, Volume plus, Volume reduction, Menu button, and recording switch.

- **Recording Switch:** Slide to initiate or save recordings.
- **Headphone Plug:** For connecting earphones for audio playback.
- **USB/Charge Input:** For charging the device and connecting to a computer.
- **USB/Charge Output:** (If applicable, for power bank function)
- **Volume Buttons:** Adjust playback volume.
- **Menu Button:** Access device settings and navigation.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the voice recorder. Connect the device to a USB power adapter (not included) or a computer's USB port using the provided USB cable. The charging indicator will show the charging status.



Image: The CAPOXO voice recorder with a green battery icon indicating a full or charging battery.

4.2 Connecting to a Computer

To transfer files or set the device's time, connect the recorder to your computer using the USB cable. The device will appear as a removable disk drive.

5. OPERATING INSTRUCTIONS

5.1 Basic Recording

1. To start recording, slide the recording switch to the "ON" position. The device will begin recording automatically.
2. To save the recording and stop, slide the recording switch to the "OFF" position. The recording will be saved as an MP3 file.

Multi-function & Simple Recording

Push "ON" to start recording

Push "OFF" to save recording



One-click
recording



Automatic
Save



Segmented
recording



Magnetic
adsorption



OTG



AVR Mode



Image: A hand interacting with the CAPOXO voice recorder, illustrating the "Push ON to start recording" and "Push OFF to save recording" actions. Icons for one-click recording, automatic save, segmented recording, magnetic adsorption, OTG, and AVR Mode are also visible.

5.2 Voice Activated Recording (AVR Mode)

The device supports Voice Activated Recording (AVR). Refer to the on-screen menu or specific instructions for activating and configuring this mode. In AVR mode, the recorder will automatically pause during silent periods to conserve storage space and battery life.

5.3 Playback

1. Connect the provided earphones to the headphone jack.
2. Use the menu button to navigate through saved recordings.
3. Press the play button (if available, or use the menu) to start playback.
4. Adjust volume using the volume buttons.

5.4 File Management

Recordings are saved as MP3 files. When connected to a computer, you can access, copy, move, or delete these files like

any other data on a USB drive. Files are typically organized by date for easy identification.

5.5 Magnetic Adsorption

The recorder features strong magnetic adsorption, allowing it to be easily attached to any metallic surface. This provides versatile placement options for recording.



Strong Magnetic Adsorption

Easily install on any object made with iron. You can use it in the office, on the refrigerator, under the chair or anywhere you want.

Under the sofa

Under the desk

Under the car seat

Image: The CAPOXO voice recorder shown with text indicating "Strong Magnetic Adsorption" and examples of placement such as "Under the sofa", "Under the desk", and "Under the car seat".

6. MAINTENANCE

- Keep the device dry and away from extreme temperatures.
- Clean the exterior with a soft, dry cloth. Do not use liquid cleaners.
- Avoid dropping the device or subjecting it to strong impacts.
- Regularly back up important recordings to a computer.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Cannot record.	Memory full; Recording switch not in "ON" position.	Delete old files to free up space; Ensure switch is in "ON" position.
Poor audio quality.	Device too far from sound source; High background noise.	Place the device closer to the sound source; Record in a quieter environment.
Device not recognized by computer.	Faulty USB cable; Driver issue; Incorrect connection.	Try a different USB cable or USB port; Restart computer; Ensure proper connection.

8. SPECIFICATIONS

Brand	CAPOXO
Model	CP-PBV-32G-New
Memory Storage Capacity	32 GB
Product Dimensions	12 x 4.5 x 1.5 cm
Item Weight	395 g
Battery Type	Lithium Polymer
Battery Average Life	Up to 15 Days (recording)
Supported Audio Formats	MP3
Microphone Format	Built-In
Hardware Interface	USB 3.0 Type B
Compatible Devices	MP3 Player, Personal Computer, Smartphone, Tablet



Image: The CAPOXO voice recorder placed next to a ruler, illustrating its physical dimensions of approximately 12 cm in length and 4.5 cm in width.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product is covered by a limited warranty against defects in materials and workmanship. Please refer to the warranty card included in your package or contact customer support for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase.

9.2 Customer Support




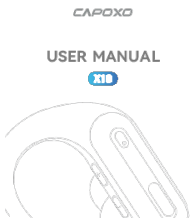
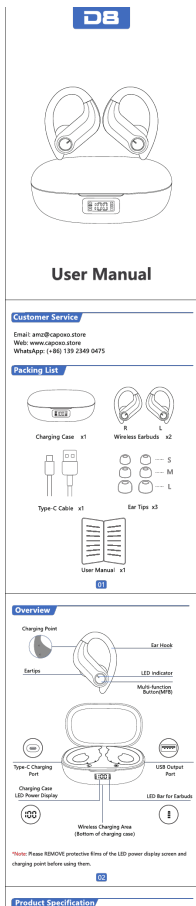
For technical assistance, troubleshooting, or warranty claims, please contact CAPOXO customer support. Contact details may be found on the product packaging or the official CAPOXO website.

Manufacturer: Capoxo

Importer: CAPOXO

Country of Origin: India

Related Documents - CP-PBV-32G-New

	<p>Capoxo N7 True Wireless Earbuds User Manual</p> <p>User manual for the Capoxo N7 True Wireless Earbuds, covering product overview, specifications, charging, pairing, multi-function operations, and troubleshooting.</p>
	<p>CAPOXO N7 True Wireless Earbuds User Manual</p> <p>Comprehensive user manual for the CAPOXO N7 True Wireless Earbuds, covering setup, features, operations, and troubleshooting.</p>
	<p>Capoxo D7 True Wireless Earbuds User Manual</p> <p>User manual for the Capoxo D7 True Wireless Earbuds, covering setup, pairing, charging, touch controls, and troubleshooting.</p>
	<p>Capoxo X19 Wireless Earbuds User Manual</p> <p>Comprehensive user manual for the Capoxo X19 wireless earbuds, covering product overview, specifications, charging instructions, pairing, troubleshooting, and multi-function operations.</p>
	

1. Latest version: v1.0
2. Bluetooth Version: V5.3
3. Support: A2DP, HFP, HSP, AVRCP
4. Earbuds Size/Weight: 40*30*20mm/7g
5. Charging Case Size/Weight: 100*50*30mm/27g
6. Charging Port: Type-C
7. Standby Time: 145h
8. Earbud Battery: 75mAh
9. Charging Case Battery: 200mAh
10. Transmission Range: 33 feet/without obstacle

Power On/Off

Auto Power On

Take the earbuds out from the charging case, they will turn on automatically.

Auto Power Off

Put the earbuds back into the charging case, they will disconnect & turn off automatically.

Manually Power On

If the earbuds are not of the charging case and power off, then press & hold them for 3s, they will power on.

Manually Power Off

In non-music mode or standby mode, press & hold either earbud for 5s, both earbuds will power off at the same time.

03

Bluetooth Connection

Prior to first use or for next use for long time, please fully charge both earbuds and charging case.

First Time Pairing

Step 1: Take twin earbuds out from charging case, they will automatically power on and enter pairing mode. At this time, led indicator of master earbud will flash Blue & Red light alternately, and the vice earbud led indicator flashes Blue 2 times every 2s.

Step 2: Activate the Bluetooth setting on your phone, search and connect "D8".

Once connected, the led light of both earbuds goes off.



*Note: If the earbuds are not connected to your device over 5 minutes, the earbuds will power off automatically.

04

For Second Time Use

If the earbuds have already connected with your device, and the Bluetooth setting of the device is on, in the second time using, when you take out the earbuds from the charging case, they will connect with your device automatically.

Pair with Other Device

D8 sports earbuds have memory function, they usually auto connect with the last paired device.

Thus, if you want to pair them with other device, you should disconnect "D8" from the last paired device, AND forget the pairing record in the last device. Then try to connect it to a new device, it should work properly.

Mono Mode (Only Left/Right Earbud is being Used)

You can use one earbud alone, leave another earbud in the charging case.

- When in Dual mode, put one earbud into the charging case.
- Or simply take one earbud out of the charging case, then search & connect "D8" on your device.



05

Factory Restore Settings

When should I reset?

- 1) Only one earbud plays music.
- 2) Both earbuds can not work with together.
- 3) Occur connection issues.

Follow Steps Below to Reset Earbuds

Step 1: Delete the pairing name "D8" on your phone and deactivate the Bluetooth setting of all devices used by the earbuds.

Step 2: Put the two earbuds in the charging case, keep them in the charging state.

Step 3: Press the MFB button for 5 seconds, then the earbud will flash red & light alternately for 1 seconds, which means the both earbuds have reset completely.

Step 4: Then, pick up the earbuds to turn them on, activate the Bluetooth setting on your phone search and select "D8" to connect, it should work properly.

If not, please put the earbuds back to the charging case and repeat the steps above.

*Note: After resetting, the pairing record between the earbuds and all your devices will be cleared. In case there is any unsuccessful message in your device, Please consider to delete the following record of "D8" and try the pairing process again.

06

Earbuds Charging

To Charge Earbuds

Insert the earbuds into charging case properly, they will power off & get charged.



Flash during charging: Turn off once fully charged.

Earbuds LED light: Red light up means "being charged", Red light off means "fully charged".

Low Battery Alarm

When the battery is less than 10% (and the voltage is lower than 3.6V), a prompt voice "Please charge" will be advised, announce once every 5 minutes and 5 times in total, and then the earbuds will power off as normal.

*Tip: If the earbuds don't charge or even can't turn on, that may because there is oxidized spot or something else on the charging connector or charging pin.

You can solve this problem by cleaning the magnet connector on the earbuds and charging pin on the charging case with alcohol wipes.

07

Charging Case Charging

Type-C Charging

There is Type-C charging cable in the small clear paper box inside the packing box. Please use the provided Type-C cable with a 20V/1A adapter(not included) to charge the charging case.



During charging, the charging case power display will show the battery in real time. The number will be displayed as 100 when fully charged.

Wireless Charging

Easy to charge your charging case without cables, just put the charging case on a wireless charging pad.

If the charging case doesn't start to charge, please try to reposition it, (Wireless Charging Pad not included).



08

To Charge Your Phone

Fully charged charging case supports charging your mobile phone, connect it to your mobile phone with your charging cable.



Multi-Function Operations

For Call

Answer Call

Click Once

End Call

Click Once

Reject Call

Long Press 2S



Voice Assistant

Voice assistant: Quick Triple-Click

*Note: Must in non-music mode or standby mode.



09

For Music

Play/Pause on "R" Earbud

Click Once

Next Track

Quick Double-Click

Volume +

Long Press & Hold



D8 Wireless Earbuds User Manual

User manual for the D8 Wireless Earbuds, detailing features, setup, operation, and troubleshooting. Includes information on Bluetooth pairing, charging, call and music controls, and safety precautions.

Note: In some cases, "L" marked only supports next song and volume. You have to go back to the previous song by your phone.



[Functions on "L" Earbud]

Play/Pause	Click Once
Previous Track	Quick Double-Click
Volume -	Long Press & Hold

 
Note: In some cases, "L" marked only supports next song and volume. You have to go back to the previous song by your phone.

How to Wear the Earbuds Correctly?

Choose best fit ear
then gently push
the earbuds into
your ears and
adjust them to get
a comfortable fit.

- Safety Attention**
1. Do not use the earbuds while driving a car, operating machinery or performing other activities that require hearing surrounding sounds.
 2. Using earbuds at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at times for your safety.
 3. Please avoid use in thundering and raining days to prevent damage or electrical shock.
 4. Please keep the earbuds out of extreme heat or humidity, do not use any corrosive cleanser(s) to clean the earbuds.
 5. Please avoid disassemble/reassemble the product in case of failure or fire accident.
 6. Please keep beyond the reach of kids or pets.
 7. Please stop using the device if it causes any discomfort or pain.
 8. As the Bluetooth signal cannot transmit in water, it is not suitable for swimming or diving. If submerged in water, do not turn the earbuds on until completely dried.

How to Place the Earbuds?

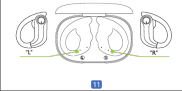

How to Sync Volume on Android?

To protect users from potential hearing damage, Android's level on max volume is quite low for Bluetooth audio devices.

If you feel the volume is too low, please access developer options and enable absolute volume, so you'll be able to raise the volume at your own will and to the full capabilities of your Bluetooth earbuds.

(Please scan the QR code to watch a video to learn more details.)

Find Build Number Firstly

Android 4.1 and lower: the Developer options screen is available by default.

Android 4.2 and higher: the Developer options in Android phones are hidden, you must enable this screen through Build Number.

Android 7.1 and lower: Settings > About Phone > Build Number

Android 8.0.0 and Android 8.1.0: Settings > System > About Phone > Build Number

Enable Developer Options

Locate the Build number and tap it about 7 times in succession to enable Developer options. You may also have to tap in your PIN for verification. Once developer options are activated, you will see a message that reads "You are now a developer".

Go back to the Settings pane, search Developer options as an entry. At the top of the Developer options screen, you can toggle the options as Figure 1.



(Figure 1)

Enable Absolute Volume

Scroll down until you reach the Networking section. Once there, enable (toggle ON) the absolute volume option as Figure 2.



(Figure 2)

***Note:** These options in the figures may be different from the device you're using. Typically, the choice depends on the type and model of the device you are working with.



[CAPOXO N7 True Wireless Earbuds User Manual | Bluetooth 5.3 Headphones](#)

Comprehensive user manual for CAPOXO N7 True Wireless Earbuds. Learn about setup, operations, charging, Bluetooth connection, and troubleshooting for your N7 earbuds.