

[Manuals.plus](#) /

> [Midea](#) /

> Midea 24" Compact Front-Load Washing Machine and Heat Pump Ventless Dryer Pair User Manual

Midea MF 200

Midea 24" Compact Front-Load Washing Machine and Heat Pump Ventless Dryer Pair User Manual

Model: MF 200

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea 24" Compact Front-Load Washing Machine and Heat Pump Ventless Dryer Pair. This innovative appliance offers energy and space-saving laundry solutions, featuring Steam Care and Cold Wash cycles. Please read this manual thoroughly before installation and use, and keep it for future reference.



Figure 1: Midea 24" Compact Front-Load Washing Machine and Heat Pump Ventless Dryer Pair. This image displays both the washing machine and the heat pump ventless dryer, showcasing their compact design and white finish, suitable for small spaces.

SETUP

The Midea Heat Pump Ventless Dryer does not require external ventilation, simplifying installation. Its compact 24" size allows for flexible placement, either next to the washer or stacked. Ensure proper leveling and connection to a suitable power supply. A power cord must be purchased separately.

Installation Considerations:

- **Ventless Design:** No external venting is required for the dryer, offering greater installation flexibility.

- **Stackable Option:** The units can be stacked to save floor space. Ensure proper stacking kit is used (sold separately).
- **Power Supply:** Connect to a dedicated electrical outlet as specified in the electrical requirements section (refer to full manual for details).
- **Water Supply:** Connect the washing machine to hot and cold water lines.
- **Drainage:** Ensure the drain hose is properly installed to prevent leaks and ensure efficient water removal.

OPERATING INSTRUCTIONS

Operating your Midea washer and dryer is straightforward. Follow these steps for optimal performance.

1. Loading Laundry:

Open the front-load door. The stainless steel drum is designed to handle various load sizes. While suitable for daily use, for larger families or bulky items, multiple loads may be necessary due to its compact size. Place laundry loosely inside the drum, ensuring not to overfill.



Figure 2: View of the Midea washing machine's stainless steel drum. The image shows the interior of the drum, highlighting its perforated design for efficient washing and rinsing.

2. Adding Detergent:

Pull out the detergent dispenser drawer located on the top left of the control panel. Pour your liquid or powder detergent into the designated compartment. Fill up to the 'MAX' line as indicated in the drawer. Close the dispenser drawer firmly.



Figure 3: Close-up of the Midea washing machine's detergent dispenser drawer. The image shows the open drawer with compartments for detergent and fabric softener, including a 'MAX' fill indicator.

3. Selecting a Wash Cycle:

Press and hold the Power button () to turn on the appliance. The display will light up. Turn the central control knob to select your desired wash cycle. Common cycles include:

- **Cotton:** For cotton garments.
- **Mix:** For mixed fabric loads.
- **Synthetic:** For synthetic fabrics.
- **Jeans:** Optimized for denim.
- **20°C:** A low-temperature wash cycle.
- **Allergy Care:** Designed to remove allergens.
- **Steam Care:** Utilizes steam to loosen stains and gently clean fabrics.
- **Quick 15':** A rapid 15-minute wash for lightly soiled items.
- **Rapid 45':** A 45-minute quick wash cycle.
- **ECO 40-60:** Energy-efficient cycle for cotton and mixed items at 40-60°C.
- **Bulky:** Ideal for larger items like blankets or sheets.
- **Wool:** Gentle cycle for woolens.
- **Rinse & Spin:** For rinsing and spinning only.
- **Spin Only:** For spinning only.

Adjust additional settings like **Turbo**, **Spin/Rinse**, **Extra Rinse**, **Delay**, **Pre Wash**, **Child Lock**, **Drum Clean**, **Temp.**, and **Water Level** using the touch buttons on the right side of the control panel.



Figure 4: The control panel of the Midea washing machine. This image highlights the central rotary knob for cycle selection and the touch-sensitive buttons for various functions and settings.

4. Starting the Cycle:

Once your selections are made, press the Start/Pause button () to begin the wash cycle. The machine will automatically proceed through the selected program until completion.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your Midea appliance.

- **Drum Clean:** Utilize the dedicated "Drum Clean" cycle periodically to maintain hygiene and prevent odor buildup within the washing machine drum.
- **Detergent Dispenser:** Clean the detergent dispenser regularly to prevent residue accumulation.
- **Exterior Cleaning:** Wipe down the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Heat Pump Dryer Filter:** Regularly clean the lint filter in the heat pump dryer to maintain drying efficiency and prevent fire hazards.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the full user manual for detailed troubleshooting steps.

Common issues often have simple solutions.

For complex problems or issues not covered in this manual, please contact Midea customer support.

SPECIFICATIONS

Feature	Detail
Brand	Midea
Capacity	2.5 Cubic Feet
Color	White
Drum Material	Stainless Steel
Special Feature	Inverter (Brushless Inverter Motor)
Access Location	Front Load
Drying Cycles	2 (Sensor Dry, Timed Dry)
Washing Cycles	2 (Normal, Heavy Duty) - <i>Note: More specific cycles listed in Operating Instructions.</i>
Energy Efficiency	Energy Star Certified, Heat Pump Dryer (28% less energy)
Dimensions (Depth with door open max)	24 Inches

WARRANTY AND SUPPORT

Your Midea appliance comes with a **10-year warranty** on the Brushless Inverter Motor, ensuring long-term reliability. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Midea website.

For customer support, technical assistance, or service requests, please contact Midea customer service through their official channels. Information regarding returns is typically available for 30 days from the purchase date, subject to retailer policies.