



Manuals.plus /

› **Morelax /**

› Morelax Mini Massage Gun User Manual

Morelax M893-MX

Morelax Mini Massage Gun User Manual

Model: M893-MX

1. INTRODUCTION

The Morelax Mini Massage Gun is a portable percussion muscle massager designed to provide deep tissue massage for whole body back pain relief and muscle soreness. Its compact design and multiple speed settings make it suitable for various muscle groups and on-the-go use.



Figure 1: Morelax Mini Massage Gun and its interchangeable massage heads.

2. SAFETY INFORMATION

For safe operation of your Morelax Mini Massage Gun, please adhere to the following guidelines:

- Use in well-ventilated areas.
- Avoid prolonged use on a single area to prevent overheating of the device or discomfort to the user.
- Do not use the device on open wounds, swollen areas, or inflamed skin.
- Consult a physician before use if you have any pre-existing medical conditions, are pregnant, or have a pacemaker.
- Keep out of reach of children.

- This device is not intended to diagnose, treat, cure, or prevent any disease or health condition.

3. PACKAGE CONTENTS

Upon opening your Morelax Mini Massage Gun package, verify that all components are present:

- Morelax Mini Massage Gun (Gray)
- 6 Interchangeable Massage Heads
- USB-C Charging Cable
- User Manual (this document)



Figure 2: Included items in the Morelax Mini Massage Gun package.

4. SETUP

Before first use, ensure the device is fully charged. To attach a massage head:

1. Select the desired massage head from the 6 provided options.
2. Align the base of the massage head with the opening on the front of the massage gun.
3. Gently push the massage head firmly into the opening until it is securely seated. Do not twist or force.
4. To remove, gently pull the massage head straight out.

5. OPERATING INSTRUCTIONS

The Morelax Mini Massage Gun features 4 adjustable speed settings and a simple one-button operation.

Power On/Off and Speed Adjustment:

1. To power on the device, press and hold the power button located at the bottom of the handle for 2 seconds. The device will start at Level 1 (Warm-up).
2. To cycle through speed levels, short press the power button:
 - **Level 1:** 1800 RPM (Warm-up)
 - **Level 2:** 2400 RPM (Relax)
 - **Level 3:** 3000 RPM (Recover)
 - **Level 4:** 3800 RPM (Deep Massage)

3. To power off the device, press and hold the power button for 2 seconds from any speed level.
4. The device features a 15-minute smart auto-off function to prevent overuse and conserve battery.

Usage Guidelines:

- Always start at the lowest speed setting (Level 1) to assess your comfort level.
- Gently apply the massage gun to the desired muscle area. Do not apply excessive pressure.
- Move the massage gun slowly over the muscle, avoiding bones and joints.
- Use for a few minutes at a time per muscle group.
- The device is designed for use on soft tissue only.

Long-lasting Battery

USB-C Fast Charging

2H

Fast Charging



2500 mAh

Figure 3: Speed settings and their corresponding RPMs.



Figure 4: Quiet and powerful operation of the massage gun.

6. MESSAGE HEADS AND THEIR USES

Your Morelax Mini Massage Gun comes with 6 different massage heads, each designed for specific muscle groups and massage types:

Round Head: Ideal for large muscle groups like quads, glutes, and hamstrings. Provides a general full-body massage.

Bullet Head: Designed for pinpoints and smaller muscle groups, such as feet and joints. Useful for targeting specific knots.

Shovel Head: Suitable for shoulder blades, IT bands, and for scraping and flushing motions.

U-shape Head: Best for the neck and smaller muscle groups, particularly around the spine (avoid direct contact with spine).

Flat Head: Versatile for small and large muscle groups, offering a broader, more even pressure.

Thumb Head: For impacting deep tissue like meridians, joints, palms, and soles. Mimics a thumb massage.



Figure 5: Overview of the 6 massage heads and their applications.

7. CHARGING

The Morelax Mini Massage Gun is equipped with a long-lasting battery and supports USB-C fast charging.

- Connect the provided USB-C charging cable to the charging port on the device.

- Connect the other end of the USB-C cable to a standard USB-C phone adapter or a 5V/2A adapter (not included).
- The battery indicator lights will show the charging status.
- A full charge provides up to 5 hours of use, depending on the speed setting.
- Charging time is approximately 2 hours for a full charge.

Your Go-To Massager, Anywhere. Anytime.



At the Gym



Outdoors



At Home



Perfect Gift

Figure 6: USB-C charging for convenience.

8. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your massage gun.

- **Cleaning:** Wipe the device and massage heads with a slightly damp cloth after each use. Do not use harsh chemicals or abrasive cleaners. The silicone material of the massage heads is detachable for cleaning.
- **Storage:** Store the massage gun and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

9. TROUBLESHOOTING

If you encounter any issues with your Morelax Mini Massage Gun, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Device not properly charged.	Charge the device fully using the provided USB-C cable and a compatible adapter. Ensure the power button is held for 2 seconds to turn on.
Weak percussion/vibration.	Low battery; Incorrect speed setting.	Recharge the device. Increase the speed setting by short pressing the power button.
Device stops unexpectedly.	15-minute auto-off activated; Low battery.	This is normal operation if 15 minutes have passed. If not, recharge the device.
Massage head is loose.	Head not fully inserted.	Ensure the massage head is pushed firmly into the opening until securely seated.

If the problem persists after trying these solutions, please contact Morelax customer support.

10. SPECIFICATIONS

Feature	Detail
Model Number	M893-MX
Brand	Morelax
Product Dimensions	8.66 x 6.69 x 2.36 inches
Item Weight	1.17 Pounds (0.53 Kilograms)
Material	Metal, Plastic, Silicone
Power Source	Battery Powered (1 P76 battery required)
Speed Settings	4 Speeds (1800-3800 RPM)
Massage Heads	6 Interchangeable Heads
Amplitude	7mm
Noise Level	As low as 45dB
Auto-off Timer	15 minutes

11. WARRANTY AND SUPPORT

Morelax products are manufactured to the highest quality standards. For information regarding warranty coverage or technical support, please refer to the warranty card included in your package or visit the official Morelax website. You may also contact the seller directly for assistance.

Manufacturer: Morelax

Date First Available: December 25, 2023