

- Manuals.plus /
- › [Dpofirs](#) /
 - › Dpofirs 4K UHD Camcorder Model Dpofirssh7a029qbo User Manual

Dpofirs Dpofirssh7a029qbo

Dpofirs 4K UHD Camcorder User Manual

Model: Dpofirssh7a029qbo

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Dpofirs 4K UHD Camcorder, Model Dpofirssh7a029qbo. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.



Figure 1.1: Dpofirs 4K UHD Camcorder overview.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.



Figure 2.1: Complete package contents.

- 1 x Dpofirs 4K UHD Camcorder
- 1 x Lens Cap
- 1 x Camera Battery (4500 mAh Li-ion, integrated)
- 1 x Handle Grip
- 1 x Fill Light
- 1 x Camera Bag
- 1 x Remote Control
- 1 x USB Cable
- 1 x HD Multimedia Interface Cable
- 3 x User Manuals (various languages)
- 1 x Microphone (160 mAh Li-ion battery, integrated)
- 1 x Storage Bag for Microphone

- 1 x Lens Hood
- 1 x Camera Bag with Shoulder Strap
- 1 x Camera Bracket

3. SETUP

3.1. Battery Installation and Charging

1. **Camera Battery:** The main camera battery (4500 mAh Li-ion) is integrated. Ensure it is fully charged before first use using the provided USB cable and a compatible power adapter (not included).
2. **Microphone Battery:** The external microphone has an integrated 160 mAh Li-ion battery. Charge it separately if needed, typically via a micro-USB port on the microphone itself.
3. **Remote Control Battery:** Insert 1 x AAA battery (not included) into the remote control, observing polarity.





Figure 3.1: Location of the camera battery compartment.

3.2. Memory Card Insertion

The camcorder supports storage cards up to 256GB (not included).

1. Locate the memory card slot on the camcorder.
2. Insert the storage card with the contacts facing the correct direction until it clicks into place.
3. To remove, gently press the card until it springs out.

3.3. Attaching Accessories

1. **Lens Hood:** Attach the lens hood to the front of the lens by twisting it clockwise until secure.
2. **External Microphone:** Mount the external microphone onto the hot shoe port located on top of the camcorder. Connect the 3.5mm audio cable from the microphone to the camcorder's microphone input jack.
3. **Fill Light:** If using an external fill light, mount it onto the hot shoe port or a separate bracket as required.
4. **Handle Grip:** Attach the handle grip to the designated mounting point on the camcorder for improved handling.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the power button (usually located near the touchscreen or on the side) for a few seconds to turn the camcorder on or off.

4.2. Recording Video and Taking Photos

The camcorder supports 4K (30FPS) video recording and 64MP still photos.

1. **Mode Selection:** Use the mode button or touchscreen interface to switch between video recording mode and photo capture mode.
2. **Recording/Shutter:** Press the record button (typically a red circle) to start/stop video recording. Press the shutter button (usually a camera icon) to take a photo.
3. **Digital Zoom:** Use the zoom rocker switch (often labeled 'W' for Wide and 'T' for Telephoto) to adjust the 18x digital

zoom.



Supports shooting Full HD 4K video and 64MP pixel photos with 18x digital zoom.

4.0 inch IPS touch screen for easy and convenient operation.

The camera can take clear photos even in low light conditions with IR night vision.



Figure 4.1: Camcorder in use for outdoor filming.

4.3. Touchscreen Operation

The 4-inch IPS touchscreen allows for intuitive navigation and playback. You can rotate the screen for selfie-style vlogging.

- Tap icons to select functions or settings.
- Swipe to navigate through menus or review recorded media.
- Rotate the screen to face forward for self-recording.

4.4. Infrared Night Vision

The camcorder can capture clear images and videos in low-light conditions and complete darkness using its infrared night vision feature.

- Activate night vision mode through the camcorder's menu settings.
- Ensure sufficient infrared light is available for optimal performance in dark environments.

4.5. Webcam Functionality

Connect the camcorder to your computer to use it as a webcam.

1. Connect the camcorder to your computer using the provided USB cable.
2. On the camcorder screen, select the 'Webcam' option.
3. Your computer should recognize the camcorder as a webcam, allowing its use with video conferencing applications.

4.6. HD Multimedia Interface Output

Connect the camcorder to external displays like TVs or projectors.

1. Use the included HD Multimedia Interface cable to connect the camcorder to an external display.
2. Ensure the external display is set to the correct input source.

4.7. External Microphone Usage

For enhanced audio quality, utilize the external microphone.



**Supports external microphone with 3.5mm jack for clear soundrecording.
Expand storage with storage card up to 256GB.**

Figure 4.2: Camcorder with external microphone for clear sound recording.

- Ensure the external microphone is securely attached and connected via the 3.5mm jack.
- Check the camcorder's audio settings to confirm the external microphone is selected as the input source.

4.8. Remote Control

The included remote control allows for convenient operation from a distance.

- Point the remote control towards the camcorder's infrared receiver.
- Use the buttons on the remote to start/stop recording, take photos, and navigate menus.

4.9. Tripod Mounting

The camcorder features a standard 1/4 threaded connector at the bottom for tripod mounting.

- Securely attach the camcorder to a compatible tripod (not included) for stable footage.

5. MAINTENANCE

5.1. Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses to clean the lens. Avoid harsh chemicals.
- **Screen:** Wipe the touchscreen with a microfiber cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- **Body:** Use a dry, soft cloth to wipe the camcorder body.

5.2. Battery Care

- Avoid fully discharging the battery frequently.
- Store the camcorder with a partially charged battery if not used for extended periods.
- Do not expose batteries to extreme temperatures.

5.3. Storage

- Store the camcorder in a cool, dry place, away from direct sunlight and excessive humidity.
- Use the provided camera bag for protection during transport and storage.

6. TROUBLESHOOTING

If you encounter issues with your Dpofirs 4K UHD Camcorder, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Camcorder does not power on.	Low or depleted battery.	Charge the camera battery fully.
Cannot record video or take photos.	Memory card full or not inserted correctly. Incorrect mode selected.	Check memory card status and reinsert if necessary. Ensure sufficient space. Verify camcorder is in the correct mode.
Poor audio quality.	External microphone not connected or selected.	Ensure external microphone is properly connected and selected in audio settings. Check microphone battery.
Webcam function not working.	Incorrect USB connection mode. Driver issues on computer.	Select 'Webcam' mode on the camcorder after connecting to PC. Try a different USB port or update computer drivers.
Remote control not responding.	Depleted AAA battery. Obstruction between remote and camcorder.	Replace AAA battery in the remote. Ensure clear line of sight to the camcorder's IR receiver.

7. SPECIFICATIONS

Feature	Specification
Model	Dpofirssh7a029qbo
Highest Image Resolution	65 MP
Highest Video Resolution	4K (30FPS)

Feature	Specification
Screen Size	4-inch IPS Touchscreen
Digital Zoom	18x
Storage Support	Up to 256GB storage card (excluded)
Camera Battery	1 x 4500 mAh Li-ion (integrated)
Microphone Battery	1 x 160 mAh Li-ion (integrated)
Remote Control Battery	1 x AAA (not included)
App Name	XDV Pro
Weight	1.64 Kilograms
Image Stabilization	No
Connectivity	WiFi, USB, HD Multimedia Interface

8. WARRANTY AND SUPPORT

Specific warranty information was not provided in the product data. For details regarding warranty coverage, technical support, or service, please refer to the official Dpofirs website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Dpofirs. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQY65V29>

More documents and user manuals: <https://manuals.plus/>