

[Manuals.plus](#) /

› [JTF](#) /

› JTF Sonic Electric Toothbrush Model J40 User Manual

JTF J40

JTF Sonic Electric Toothbrush Model J40 User Manual

Model: J40 | Brand: JTF

INTRODUCTION

This manual provides essential information for the safe and effective use of your JTF Sonic Electric Toothbrush Model J40. Please read these instructions thoroughly before first use and retain for future reference.



The JTF Sonic Electric Toothbrush Model J40, shown in black, is designed for effective daily oral hygiene.

What's in the Box

Verify that all components are present upon unpacking:

- 1 x JTF Sonic Electric Toothbrush Handle
- 8 x Replacement Brush Heads
- 1 x DC Charging Cable
- 1 x Travel Case
- 1 x Tongue Cleaner
- 1 x User Manual (this document)

JTF J40 Series

- 1 X manche de brosse à dents
- 1 X câble USB (adaptateur non inclus)
- 8 X têtes de brosse à dents
- 1 X gratte-langue



Illustration of the JTF J40 Series package contents, showing the toothbrush handle, eight brush heads, a DC charging cable, and a tongue cleaner.

PRODUCT OVERVIEW

Key Features

- **Effective Yet Gentle Cleaning:** Advanced sonic technology removes plaque and stains without irritating gums.
- **Long Battery Life:** Up to 45 days of use on a single 2-hour charge.
- **5 Brushing Modes:** Clean, Sensitive, White, Polish, and Massage for personalized oral care.
- **Smart Timer:** 2-minute timer with 30-second interval reminders for thorough brushing.
- **IPX7 Waterproof:** Fully waterproof design allows for safe use in the shower or bath.
- **8 Replacement Brush Heads:** Provides approximately 2 years of quality brushing.
- **Travel-Friendly:** Compact and lightweight design with a protective travel case.

Components

1. Brush Head (with W-shaped bristles)
2. Toothbrush Handle (with power button and mode indicators)
3. Charging Port (at the bottom of the handle)

5 Modes de nettoyage personnalisés

- | | |
|---|--|
| Clean
Pour un nettoyage normal | Sensitive
Pour les dents sensibles |
| Polish
Pour polir les dents | Massage
Pour le soin des gencives |
| White
Pour un nettoyage en profondeur | |



The toothbrush features five personalized cleaning modes: Clean, Sensitive, Polish, Massage, and White.

Poils en nylon ultra-fins de 0,125 cm

Forme en W adaptée
aux dents



Pas facilement déformable



The brush heads feature a W-shaped design with ultra-fine 0.125 cm nylon bristles for effective cleaning.

SETUP

1. Charging the Toothbrush

Before first use, fully charge the toothbrush. Connect the DC charging cable to the charging port at the bottom of the handle and plug the other end into a 5V USB adapter (not included). The indicator light will show charging status. A full charge takes approximately 2 hours and provides up to 45 days of use.

Longue durée de vie de la batterie

2
heures de
charge

=

45
jours
d'utilisation

Chargement sécurisé Charge puissante



The toothbrush offers a long battery life, providing 45 days of use from a 2-hour charge.

2. Attaching the Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push down firmly until it clicks into place. Ensure it is securely attached before use.

OPERATING INSTRUCTIONS

1. Power On/Off and Mode Selection

- Press the power button once to turn on the toothbrush. It will start in the last used mode.
- Press the power button repeatedly within 5 seconds to cycle through the 5 modes: Clean, Sensitive, White, Polish, Massage.

- To turn off the toothbrush, press and hold the power button for 2 seconds, or press the power button after cycling through all modes.

2. Brushing Technique

- Wet the bristles and apply a small amount of toothpaste.
- Place the brush head against your teeth at a slight angle towards the gum line.
- Turn on the toothbrush. Gently move the brush head slowly across each tooth, allowing the sonic vibrations to clean. Do not scrub.
- The smart timer will pause briefly every 30 seconds to indicate when to move to a different quadrant of your mouth.
- The toothbrush will automatically turn off after 2 minutes, signaling the completion of the recommended brushing time.



The smart timer guides you through a 2-minute brushing cycle with 30-second quadrant reminders.

3. Using the Tongue Cleaner

After brushing your teeth, use the included tongue cleaner to remove bacteria and freshen breath. Gently scrape from the back of your tongue forward, rinsing the cleaner after each pass.

AMÉLIORER LA SANTÉ BUCCO-DENTAIRE

✓

Haleine fraîche

✓

Parler en toute confiance

✓

Améliorer la santé bucco-dentaire

APRÈS

AVANT

✗

Mauvaise haleine

✗

Prolifération bactérienne

✗

Mauvaise haleine

Using the tongue cleaner helps improve oral health by removing bacteria and freshening breath.

MAINTENANCE

1. Cleaning the Toothbrush

- After each use, rinse the brush head thoroughly under running water.
- Remove the brush head and rinse the metal shaft area on the handle.
- Wipe the handle with a damp cloth. Do not immerse the handle in water for extended periods, despite its IPX7 rating, to prolong its lifespan.



The IPX7 waterproof rating allows for safe rinsing and use in wet environments.

2. Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed. To replace, simply pull the old brush head off the handle and push a new one into place.



The product includes eight replacement brush heads, providing a supply for approximately two years.

3. Storage

Store the toothbrush in a dry place when not in use. Use the provided travel case for hygienic storage and protection during travel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Low battery or no charge.	Charge the toothbrush for at least 2 hours. Ensure the charging cable is properly connected.
Weak vibrations or poor cleaning.	Worn-out brush head or low battery.	Replace the brush head. Recharge the toothbrush.
Brush head falls off during use.	Brush head not securely attached.	Ensure the brush head is pushed down firmly until it clicks into place.
On/Off button unresponsive.	Internal malfunction or debris around the button.	Clean around the button. If the issue persists, contact customer support.
Toothbrush not charging.	Faulty charging cable or adapter.	Try a different 5V USB adapter and charging cable. Ensure the charging port is clean.

SPECIFICATIONS

Feature	Detail
Model Number	J40
Power Source	Battery Powered (1 Lithium-ion battery included)
Battery Life	Up to 45 days on a 2-hour charge
Waterproof Rating	IPX7
Number of Modes	5 (Clean, Sensitive, White, Polish, Massage)
Movement Type	Pulsating (Sonic)
Handle Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	23.5 x 11.7 x 3.4 cm
Product Weight	230 grams
Country of Origin	China

WARRANTY AND SUPPORT

Defective Product

If you receive a defective product, please contact our customer support immediately for a satisfactory resolution.

Product Failure within 1 Year

Should the product fail within 1 year of use due to a manufacturing defect:

1. Contact JTF customer support.
2. Provide photographs of the product and a description of the issue.
3. If the issue is confirmed to be with the product itself, you will receive a replacement product.

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official JTF website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQY7GY6W>

More documents and user manuals: <https://manuals.plus/>