

ALLIMITY MM-S3913R-NP

ALLIMITY Replacement Remote Control User Manual

Model: **MM-S3913R-NP** | Brand: **ALLIMITY**

1. INTRODUCTION

This manual provides instructions for the ALLIMITY MM-S3913R-NP replacement remote control. This remote is designed to function as a direct replacement for various Saba TV models without requiring any programming or setup. Please verify compatibility with your specific TV model using the list provided below.

Compatible Saba TV Models:

- S3913R-SMART, S3913R
- LE50PV114
- S3213R-SMART
- S2813R, LE32PV114, S2813R-SMART
- LE24PV13
- S2814R-SMART
- K40DLV1ESM, K32LV1HSM

2. PACKAGE CONTENTS

The package contains:

- 1 x ALLIMITY MM-S3913R-NP Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

3. PRODUCT OVERVIEW

The ALLIMITY MM-S3913R-NP remote control is designed for ease of use and ergonomic comfort. It features a lightweight design and provides stable remote control performance with a transmission distance of up to 10 meters.



Figure 1: Front view of the remote control, displaying the power button, number pad, navigation keys, volume, channel controls, and special function buttons.



Figure 2: Angled view of the remote control, illustrating its slim profile and button layout from a different perspective.

4. SETUP

This remote control requires no programming or complex installation. Simply insert the batteries, and it will be ready for use with your compatible Saba TV.

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Close the battery compartment cover securely.





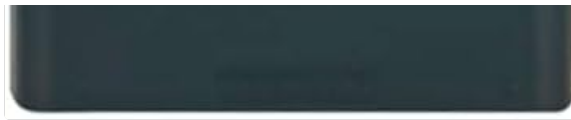


Figure 3: Back view of the remote control, indicating the location of the battery compartment.

5. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use. Point the remote directly at your Saba TV's infrared receiver.

- **Power Button:** Press to turn the TV on or off.
- **Number Pad (0-9):** Use to directly enter channel numbers.
- **Volume Up/Down (V+/V-):** Adjust the sound level.
- **Channel Up/Down (P+/P-):** Change TV channels.
- **Mute Button:** Mute or unmute the TV sound.
- **Source Button:** Select input sources (HDMI, AV, etc.).
- **Menu Button:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right) and OK:** Navigate through menus and confirm selections.
- **Exit Button:** Exit current menu or function.
- **Back Button:** Go back to the previous screen or menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Access specific functions within certain TV menus or applications.
- **Media Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Next, Previous for media content.

The remote operates using infrared (IR) technology. Ensure there are no obstructions between the remote and the TV's IR receiver for optimal performance.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners or immerse the remote in water.

6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA). Dispose of old batteries according to local regulations.

7. TROUBLESHOOTING

Remote control is not working:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's IR receiver.
- Make sure you are within the effective operating range (up to 10 meters) and pointing the remote

directly at the TV.

Remote control works intermittently:

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

8. SPECIFICATIONS

Feature	Specification
Model Number	MM-S3913R-NP
Brand	ALLIMITY
Connectivity Technology	Infrared (IR)
Number of Buttons	25
Maximum Range	10 Meters
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	17 x 5 x 1 cm
Product Weight	70 Grams
Special Feature	Lightweight, Ergonomic Design

9. WARRANTY AND SUPPORT

For any issues or questions regarding your ALLIMITY replacement remote control, please contact your retailer or the point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.