

[Manuals.plus](#) /

› [Hotsmtbang](#) /

› Hotsmtbang Replacement Remote Control Instruction Manual for Lifesmart Electric Fireplace Heaters

Hotsmtbang Replacement Remote Control

Hotsmtbang Replacement Remote Control Instruction Manual

Compatible with Lifesmart LPHT1010, LPHT1077, LS-PP1800-6WCH Electric Fireplace Infrared Heaters

INTRODUCTION

This manual provides instructions for the Hotsmtbang Replacement Remote Control, designed for use with specific Lifesmart Electric Fireplace Infrared Heater models. This remote control is pre-programmed and requires no additional setup beyond battery installation.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included). Please ensure correct polarity when inserting batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

Once batteries are correctly installed, the remote control is ready for use. No programming is required.

OPERATING INSTRUCTIONS

This remote control is designed to operate your Lifesmart Electric Fireplace Infrared Heater. Point the remote control directly at the heater's infrared receiver for optimal performance. The maximum effective range is approximately 1 meter.

Basic Functions

The remote control provides various functions to manage your heater. Specific button functions will correspond to the features available on your Lifesmart heater model.



Image: Front view of the remote control, displaying its buttons for controlling the heater.

Refer to your Lifesmart Electric Fireplace Infrared Heater's original manual for detailed information on specific button functionalities and heater operations.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control not responding.	◦ Dead or incorrectly inserted batteries. ◦ Remote control out of range. ◦ Obstruction between remote and heater.	◦ Replace batteries with new AAA batteries, ensuring correct polarity. ◦ Move closer to the heater (within 1 meter). ◦ Remove any objects blocking the line of sight between the remote and the heater.
Intermittent response.	◦ Weak batteries. ◦ Infrared interference.	◦ Replace batteries. ◦ Ensure no other infrared devices are operating nearby.

SPECIFICATIONS

- **Brand:** Hotsmtbang
- **Compatible Models:** Lifesmart LPHT1010, LPHT1077, LS-PP1800-6WCH Electric Fireplace Infrared Heaters
- **Special Feature:** No Programming Required
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** Approximately 1 Meter
- **Manufacturer:** Hotsmtbang

WARRANTY INFORMATION

This product comes with a 90-day quality warranty. The manufacturer ensures a hassle-free return process and offers unconditional refunds for quality-related issues. Please check the product upon receipt.

SUPPORT

For further assistance or inquiries regarding your Hotsmtbang Replacement Remote Control, please contact the seller directly through the platform where the purchase was made. Please have your order details ready when contacting support.

