

Manuals.plus /

- > enya /
- > Enya NEXG SE Smart Acoustic Electric Guitar User Manual

enya NEXG SE GREY

Enya NEXG SE Smart Acoustic Electric Guitar User Manual

Model: NEXG SE GREY | Brand: Enya

INTRODUCTION

The Enya NEXG SE Smart Acoustic Electric Guitar is a versatile carbon fiber travel guitar designed for adults. It features an integrated 30W wireless speaker, offering enhanced sound projection and a rich audio experience. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your instrument.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the following items are included:

- Enya NEXG SE Smart Acoustic Electric Guitar
- Thickened Gig Bag
- Charging Cable
- Adjusting Wrench



Figure 1: Enya NEXG SE Smart Acoustic Electric Guitar and included accessories.

2. Charging the Guitar

Before first use, fully charge the guitar. Connect the provided charging cable to the guitar's charging port and a suitable power adapter. The battery indicator on the guitar's display will show charging status. A full charge ensures maximum playtime.

3. Initial Power On

Locate the power button on the control panel. Press and hold to power on the guitar. The color display screen will illuminate, indicating the guitar is ready for use. Adjust the volume knob to a comfortable level.

OPERATING INSTRUCTIONS

1. Onboard Speaker Functionality

The NEXG SE features a powerful 30W onboard speaker system, providing rich bass, clear mids, and sparkling treble. This integrated speaker significantly enhances the acoustic experience, making the guitar considerably louder than traditional acoustic instruments. You can feel the sound vibrating in your hand.



Figure 2: Internal components highlighting the onboard speaker system.



Figure 3: Detailed view of the onboard speaker.

2. DSP Chip and ENYA MUSIC App

The integrated DSP (Digital Signal Processor) chip allows for advanced sound customization. You can store up to 4 onboard presets directly on the guitar. For full expandability and detailed control, download the ENYA MUSIC App on your smartphone or tablet.

Through the app, you can:

- Dial in custom settings for effects such as overdrive, wah, delay, reverb, chorus, vibrato, octave, compression, and EQ.
- Profile the tone of any acoustic guitar onto your NEXG SE, replicating its unique sound characteristics.
- Utilize Bluetooth connectivity for wireless audio streaming and control.



NEX SE

The Onboard Speaker

The speaker is thoroughly developed to deliver better sonic performance: louder volume, wider dynamic range, and prominent frequency response.



Figure 4: Guitar's color display screen for navigating presets and functionalities.



Figure 5: The ENYA MUSIC App interface for customizing sound and effects.

Your browser does not support the video tag.

Video 1: Demonstration of the Enya NEXG SE guitar's sound and display features, showcasing its versatility.

3. Sing & Play Anywhere

The NEXG SE is optimized for singing and playing. It supports wireless microphone input (microphone sold separately). The ENYA MUSIC App provides separate EQ and reverb settings specifically for the microphone, enhancing vocal clarity and presence. Additionally, the app features a vocal removal function, allowing you to sing along to your favorite tracks.

4. Bluetooth Connectivity

Connect your smart device to the NEXG SE via Bluetooth to stream music directly through the guitar's speaker. This allows you to play along with backing tracks or simply enjoy high-quality audio playback.

MAINTENANCE

1. Cleaning

Wipe the carbon fiber body and fretboard with a soft, dry cloth after each use to remove fingerprints and dust. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.

2. Storage

Always store the guitar in its thickened gig bag when not in use. This protects it from dust, scratches, and minor impacts. Store in a stable environment, away from extreme temperatures and humidity fluctuations.

3. String Replacement

Replace strings regularly to maintain optimal tone and playability. The guitar uses Phosphor Bronze strings. Refer to standard guitar string replacement procedures. Ensure proper string winding and tension.

4. Truss Rod Adjustment

If you experience excessive fret buzz or high action, the neck relief may need adjustment. Use the provided adjusting wrench to carefully turn the truss rod. Small adjustments are recommended, turning no more than a quarter turn at a time, and allowing the neck to settle before re-evaluating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from speaker	Low battery; Volume too low; Guitar not powered on.	Charge the guitar; Increase volume; Power on the guitar.
App connectivity issues	Bluetooth not enabled; Guitar too far from device; App outdated.	Ensure Bluetooth is on; Move closer to guitar; Update ENYA MUSIC App.
Charging not working	Faulty cable/adaptor; Loose connection.	Try a different cable/adaptor; Ensure connections are secure.
Fret buzz or high action	Neck relief issue; Worn frets (less common for new guitar).	Adjust truss rod with provided wrench (refer to Maintenance section). If persistent, consult a professional.

SPECIFICATIONS

Feature	Detail
Model Number	NEXG SE GREY
Item Weight	6.6 pounds
Package Dimensions	41 x 9.6 x 5 inches
Body Material	Carbon Fiber
Back Material	Carbon Fiber
Top Material	Carbon Fiber
Neck Material Type	Carbon Fiber
Fretboard Material	carbon fiber
String Material	Phosphor Bronze
Scale Length	23.7 Inches
Number of Strings	6
Color	Gray
Guitar Pickup Configuration	combination
Guitar Bridge System	Fixed
Musical Style	world-music
Hand Orientation	Right

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Enya Musical store or contact their customer service. Enya Musical is committed to providing 24-hour global service.

- Official User Manual (PDF): [Download PDF](#)
- Visit the Enya Store: [Enya Musical on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQYM7VC7>

More documents and user manuals: <https://manuals.plus/>