

Anthter ANST-03

Anthter Standing Garment Steamer User Manual

Model: ANST-03

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the steamer from the electrical outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Do not operate the steamer with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, do not use it.
- Use only distilled or de-mineralized water in the water tank to prevent mineral buildup and prolong the life of the steamer.
- Keep the steam head away from your body and hands during operation. Steam is hot and can cause burns.
- Do not immerse the steamer unit, cord, or plug in water or other liquids.
- Ensure the steamer is placed on a stable, flat surface during use.
- Keep out of reach of children and pets.
- Never pull the power cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Anthter Main Steamer Unit
- 2.4L Detachable Water Tank
- Steam Hose with Steam Head
- Adjustable Support Pole
- Garment Hanger Attachment
- User Manual

3. PRODUCT DIAGRAM

Familiarize yourself with the components of your Anthter Garment Steamer:



Image: Anthter Standing Garment Steamer components.

1. **Main Steamer Unit:** Contains the heating element and water pump. Equipped with roll wheels for easy movement.
2. **Water Tank:** 2.4-liter capacity, removable for easy filling.
3. **Steam Hose:** Connects the main unit to the steam head, delivering hot steam.
4. **Steam Head:** Features multiple steam outlets for efficient wrinkle removal.
5. **Adjustable Support Pole:** Provides height adjustment for comfortable steaming.
6. **Garment Hanger:** Attaches to the support pole to hold garments during steaming.

4. SETUP

Follow these steps to set up your garment steamer:

1. **Unpack:** Carefully remove all components from the packaging.

2. **Assemble Support Pole:** Insert the adjustable support pole into the designated slot on the main steamer unit. Secure it firmly.
3. **Attach Garment Hanger:** Place the garment hanger attachment onto the top of the support pole.
4. **Fill Water Tank:** Remove the 2.4L water tank from the main unit. Open the cap and fill the tank with distilled or de-mineralized water. Do not overfill. Close the cap securely.
5. **Insert Water Tank:** Place the filled water tank back into its compartment on the main unit, ensuring it is seated correctly.
6. **Connect Steam Hose:** Securely attach the steam hose to the steam outlet on the main unit. Ensure a tight connection to prevent leaks.

5. OPERATING INSTRUCTIONS

Your Anthter Garment Steamer is designed for efficient wrinkle removal. Follow these steps for optimal performance:

1. **Power On:** Plug the steamer into a standard electrical outlet. Press the power button to turn on the unit. The steamer will begin to heat up.
2. **Fast Heat-up:** The 1500W heating element allows the steamer to heat up in approximately 35 seconds, indicated by a ready light or sound.

MOST POWERFUL 1500W

Heats Up in 35S, Quickly Emits 248°F Steam



Image: Internal heating mechanism of the 1500W steamer.

3. **Steaming Technique:** Hang the garment on the provided hanger. Hold the steam head close to the fabric, moving it in an up-and-down motion. For stubborn wrinkles, gently press the steam head against the fabric.

6.5FT SUPERIOR STEAM OUTPUT

*Easy to Soften, Refresh, and De-wrinkle
A Wide Range of Fabrics*



**6.5ft
STEAM**

Image: Demonstrating the 6.5ft superior steam output.

40G/MIN STRONG STEAM

6 Even Steam Outlets Increase the Effective Ironing Area



Image: The steam head with 6 even steam outlets for 40g/min strong steam.

4. **Continuous Steaming:** The 2.4L water tank provides up to 90 minutes of continuous steaming, allowing you to de-wrinkle multiple garments without frequent refills.

2.4L LARGE CAPACITY WATER TANK

*80oz Large Water Tank Can Steam
Continuously for Over 90 Minutes*



Image: The 2.4L large capacity water tank.

5. **Auto-Shut Off:** For safety, the steamer features a dual safety protection system that automatically shuts off when the water tank is empty or if the unit overheats. It will automatically reset once cooled or refilled.
6. **Fabric Compatibility:** This steamer is suitable for a wide range of fabrics, including suits, jersey, blouses, wedding dresses, bed linens, tablecloths, sofa fabric, curtains, silk, wool, linen, cashmere, and synthetics.

FABRIC FRIENDLY

*Great for Silk, Wool, Linen, Cashmere,
Synthetics, Etc.*



Image: Steamer is fabric friendly, suitable for silk, wool, linen, cashmere, synthetics, etc.

FAST & EFFECTIVE WRINKLE REMOVER



Image: Fast and effective wrinkle remover.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your steamer:

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Remove the water tank and empty any remaining water. This prevents stagnant water and mineral buildup.
- **Descaling:** If you notice reduced steam output or mineral residue, descale the steamer. Mix a solution of 50% white vinegar and 50% distilled water. Fill the water tank with this solution and run the steamer until half the solution is used. Turn off, unplug, and let it sit for 30 minutes. Then, run the remaining solution through. Finish by running two full tanks of plain distilled water to rinse. Perform this monthly or as needed based on water hardness.
- **Clean Exterior:** Wipe the exterior of the steamer unit with a soft, damp cloth. Do not use abrasive cleaners.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Mineral buildup; Steamer not heated sufficiently	Refill water tank; Perform descaling procedure; Allow 35 seconds for heat-up
Water leaking from steam head or hose connection	Hose not securely attached; Water tank overfilled; Condensation buildup	Ensure hose is tightly connected; Do not overfill water tank; Allow steamer to heat fully before use
Steamer not turning on	Not plugged in; Power outlet issue; Safety auto-shut off activated	Check power cord connection; Try a different outlet; Ensure water tank is filled and unit has cooled if overheated

8. SPECIFICATIONS

- **Brand:** Anthter
- **Model:** ANST-03
- **Power:** 1500W
- **Water Tank Capacity:** 2.4 Liters
- **Heat-up Time:** Approximately 35 seconds
- **Continuous Steaming Time:** Up to 90 minutes
- **Product Dimensions:** 9 x 15 x 14 inches
- **Item Weight:** 14.7 pounds (6.68 Kilograms)
- **Voltage:** 120 Volts

9. WARRANTY AND SUPPORT

Anthter provides a **3-YEAR SATISFACTION ASSURANCE** for this garment steamer. If you encounter any issues or have questions regarding your product, please contact Anthter customer service for assistance. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question