

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HIENA PRO](#) /

> [HIENA PRO Professional Hair Clippers and T-Blade Trimmer Kit \(Model HYN-T08A\) User Manual](#)

HIENA PRO HYN-T08A

HIENA PRO Professional Hair Clippers and T-Blade Trimmer Kit (Model HYN-T08A) User Manual

[Product Overview](#) [Safety Information](#) [Package Contents](#) [Product Features](#) [Setup](#) [Operation](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The HIENA PRO Professional Hair Clippers and T-Blade Trimmer Kit (Model HYN-T08A) provides a comprehensive solution for hair cutting and detailing. This cordless kit is designed for ease of use and includes features such as an LED display for battery status and USB rechargeable functionality.



Figure 1: HIENA PRO Professional Hair Clippers and T-Blade Trimmer Kit, showcasing both the main clipper and the detail trimmer along with various accessories.

2. SAFETY INFORMATION

Caution: Use near face/eyes with care. Avoid ingestion/inhalation of small parts. For adult use or supervision.

3. PACKAGE CONTENTS

The HIENA PRO Hair Clippers and T-Blade Trimmer Kit includes the following items:

- 1 x Main Hair Clipper
- 1 x T-Blade Trimmer
- 8 x Clipper Guide Combs (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)
- 3 x Trimmer Guide Combs (1.5mm, 3mm, 4.5mm)
- 2 x USB Charging Cables
- 1 x Cleaning Brush
- 1 x Lubricating Oil
- 1 x Hair Cutting Cape

- 1 x User Manual



Figure 2: Included guide combs for both the main clipper and the T-blade trimmer, offering various cutting lengths.

4. PRODUCT FEATURES

- **Adjustable Taper Lever:** The main clipper features an adjustable taper lever, allowing for precise control over cutting lengths without changing guide combs. This provides flexibility for blending and fading.



Figure 3: Close-up of the adjustable taper lever on the main hair clipper, enabling fine-tuning of cutting length.

- **Professional LCD Display:** Both the clipper and trimmer are equipped with LCD screens that clearly show the remaining battery power as a percentage (0-100%) and indicate charging or lock status.



Figure 4: The digital display on the clipper, showing battery percentage and charging indicators.

- **USB Charging & Multiple Charging Options:** The devices can be charged via USB, offering flexibility to charge using laptops, PCs, power banks, or standard wall plugs. They can also be used while charging.



Figure 5: Illustration of the USB charging port and various compatible charging methods for convenience.

- **Powerful Motor & Low Noise:** Equipped with strong motors, these clippers and trimmers provide efficient cutting performance while operating with minimal noise.



Figure 6: Diagram highlighting the powerful motor and low-noise operation of the HIENA PRO clippers.

- **High Quality Cutterheads:** The blades are designed for sharpness and durability, ensuring a smooth cutting experience without snagging or pulling.



Figure 7: Close-up view of the high-quality cutterheads, emphasizing their sharp and non-abrasive design.

5. SETUP

5.1 Initial Charging

Before first use, fully charge both the main hair clipper and the T-blade trimmer. Connect the provided USB charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., laptop, power bank, or wall adapter). The LED display will indicate the charging status and battery percentage.

5.2 Attaching Guide Combs

To attach a guide comb, align the comb with the blade of the clipper or trimmer and push it firmly until it clicks into place. Ensure the comb is securely attached before use. To remove, gently pull the comb away from the blade.

6. OPERATING INSTRUCTIONS

6.1 Using the Main Hair Clipper

1. **Prepare Hair:** Ensure hair is clean and dry before cutting.
2. **Select Comb:** Choose the desired guide comb for the hair length you wish to achieve and attach it securely.
3. **Adjust Taper Lever:** Use the adjustable taper lever on the side of the clipper to fine-tune the cutting length for blending or precise cuts.
4. **Power On:** Press the power button to turn on the clipper.
5. **Begin Cutting:** Hold the clipper with the teeth pointing upwards and move it against the direction of hair growth. Use smooth, overlapping strokes.
6. **Monitor Battery:** Check the LED display for real-time battery status during use.

6.2 Using the T-Blade Trimmer

1. **Prepare Area:** Ensure the area to be trimmed is clean and dry.
2. **Select Comb (Optional):** For specific lengths, attach one of the smaller trimmer guide combs. For close trimming or detailing, use without a comb.

3. **Power On:** Press the power button to activate the trimmer.
4. **Detailing:** Use the T-blade for precise lines, edging, and intricate designs. Hold the trimmer at an angle that allows for clean, sharp lines.
5. **Monitor Battery:** The LED display will show the battery percentage.

Video 1: Demonstration of the HIENA PRO Hair Clipper Set, including unboxing and practical usage for hair cutting and detailing.

7. MAINTENANCE

7.1 Cleaning the Blades

After each use, turn off the clipper/trimmer and remove any attached guide comb. Use the provided cleaning brush to gently brush away loose hairs from the blades. For thorough cleaning, detachable blades can be removed and rinsed under water (refer to the specific instructions in the included manual for blade removal and reattachment).

7.2 Oiling the Blades

Regular oiling ensures optimal performance and extends the life of your blades. After cleaning, apply a few drops of the provided lubricating oil to the teeth of the blades. Turn on the clipper/trimmer for a few seconds to allow the oil to distribute evenly. Wipe off any excess oil.

7.3 Storage

Store the clippers and trimmers in a dry, cool place. Always place the protective cover over the blades when not in use to prevent damage and maintain sharpness.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device is locked	Charge the device fully; Press and hold the power button for 3 seconds to unlock (if applicable).
Poor cutting performance (pulling hair)	Blades are dull or dirty; Insufficient oil; Hair is wet or tangled	Clean and oil blades; Ensure hair is dry and detangled; Consider blade replacement if dull.
Battery not charging	Faulty cable or adapter; Charging port issue	Try a different USB cable and power adapter; Ensure charging port is clean and free of debris.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.69 x 1.57 x 1.97 inches

Feature	Detail
Item Model Number	HYN-T08A
Batteries	1 Lithium Polymer battery required (included)
Battery Description	Lithium-Ion
Manufacturer	HIENA PRO
Included Components	Hair Clipper, T-Blade Trimmer, Guide Combs, USB Cables, Cleaning Brush, Oil, Hair Cutting Cape
Unit Count	1.00 Count

10. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact details provided in the original product packaging or visit the official HIENA PRO website. Keep your purchase receipt as proof of purchase for any warranty claims.