

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SMETA](#) /
- › [SMETA 1000W Combination Microwave Oven and Grill 34L User Manual](#)

SMETA T-DMD100-34LKMMK(J9)

SMETA 1000W Combination Microwave Oven and Grill 34L User Manual

Model: T-DMD100-34LKMMK(J9)

INTRODUCTION

Thank you for choosing the SMETA 1000W Combination Microwave Oven and Grill. This appliance is designed to offer versatile cooking options, including microwave, air fry, convection, and grill functions, along with convenient features like ECO mode, child lock, and easy cleaning. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image: Front view of the SMETA Combination Microwave Oven, showcasing its sleek black design and digital display.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Supervise children closely when the appliance is in use.

SETUP AND INSTALLATION

Unpacking and Components

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. If any damage is observed, do not operate the oven and contact customer support.

The package should include:

- SMETA Combination Microwave Oven Unit
- Glass Turntable (Diameter: 315mm)
- Turntable Ring Assembly
- Microwave Rack
- User Manual (this document)

Placement and Electrical Connection

Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation around the appliance.

Suggested installation spacing

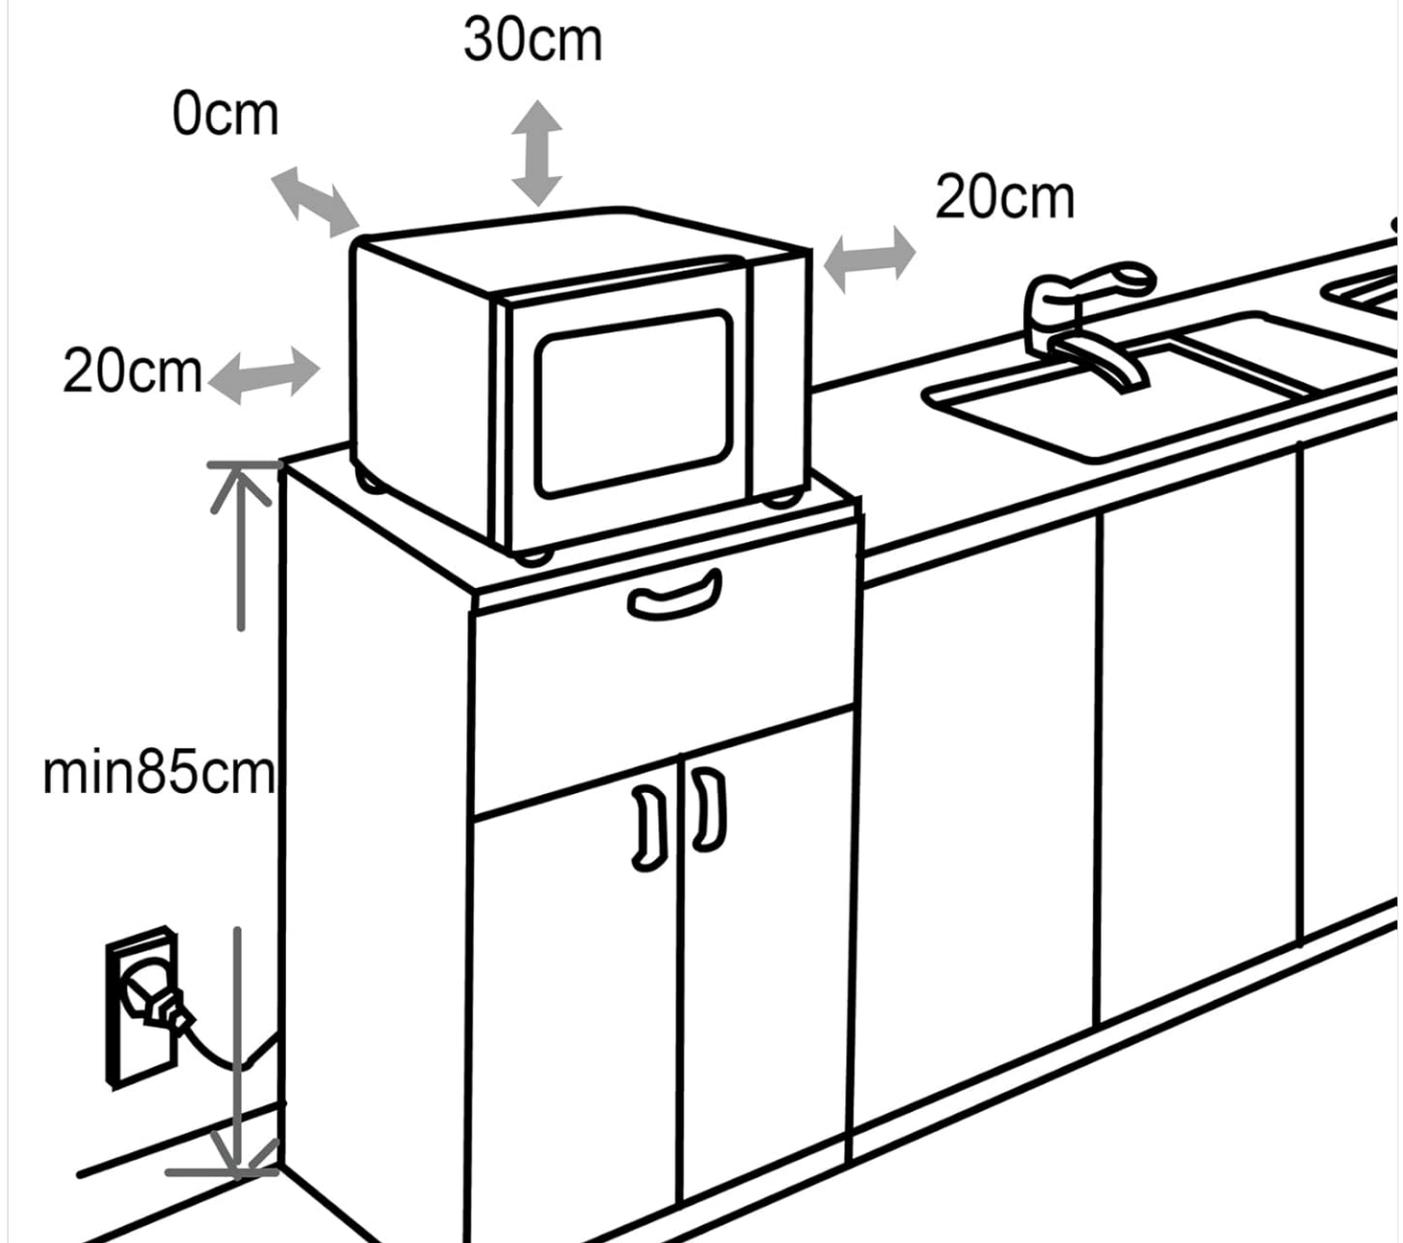


Image: Diagram illustrating recommended clearance for proper ventilation. Maintain at least 20cm clearance on the sides, 30cm at the top, and 0cm at the back (if wall-mounted or flush), with a minimum height of 85cm from the floor to the power outlet.

- **Clearance:** Allow at least 20 cm (7.9 inches) of space on the sides, 30 cm (11.8 inches) above, and ensure the rear is not blocked for proper ventilation.
- **Power Supply:** Plug the oven into a standard 240V, 50Hz AC outlet with a dedicated circuit. Do not use extension cords or multiple outlet adapters.

OPERATING INSTRUCTIONS

Control Panel Overview

The SMETA Combination Microwave Oven features an intuitive digital display and touch controls for easy operation.



Microwave



Air Fry



Broil



Bake



Pro Defrost



Low Temp Cook



Popcorn



and more...

Image: Close-up of the control panel, showing the digital display, function buttons (Home Fry, Crispy Grill, Pro Defrost, Low Temp Control, Kitchen Assistant, Optional Function), and the central control knob with 'CONFIRM START/+30SEC' and 'Stop/Clear' buttons.

8-in-1 Multifunctional Cooking Modes

This appliance offers a wide range of cooking functions to meet diverse culinary needs:

8 IN 1 Multifunction Microwave Oven



Microwave



Air Fryer



Grill



Convection
Oven



Combi Cook



Low Temp



Defrost



Odor removal



Image: Visual representation of the eight primary cooking functions: Microwave, Air Fryer, Grill, Convection Oven, Combi Cook, Low Temp, Defrost, and Odor Removal.

- **Microwave:** For standard heating and cooking.
- **Air Fry:** For crispy results with less oil.
- **Convection (Bake):** For baking and roasting, similar to a traditional oven.
- **Grill (Broil):** For browning and toasting.
- **Combi. (Combination Cooking):** Combines microwave with grill or convection for faster, more even cooking.
- **Low Temp.:** Ideal for keeping food warm, drying, or making yogurt.
- **Odor Removal:** Helps eliminate lingering food smells.
- **Defrost:** Thaws frozen food by weight or time.

Basic Operation

1. **Setting Time:** Turn the central control knob to set the desired cooking time.
2. **Quick Start:** Press the 'CONFIRM START/+30SEC' button to start cooking immediately for 30 seconds at full

power. Each subsequent press adds 30 seconds.

3. **Multi-Stage Cooking:** Allows you to program multiple cooking stages (e.g., defrost then microwave). Refer to the detailed instructions in the full manual for specific programming steps.
4. **Stopping/Clearing:** Press the 'Stop/Clear' button to pause or cancel a cooking program.

Special Features and Menus

- **Auto Menus:** 10 pre-programmed menus for common dishes (e.g., potato, seafood, meat, vegetables, pasta, pizza, desserts). Select the desired menu and input the weight if prompted.
- **Air Fryer Menus:** 9 dedicated menus for air frying.
- **Crispy Grill Menus:** 4 menus for grilling.
- **ECO Mode:** Press the 'ECO Button' to save 50% standby power by turning off the display when not in use.
- **Mute Button:** Silences the end-of-cooking beep for a quieter kitchen environment.
- **Child Lock:** Activates to prevent accidental operation by children. Consult the full manual for activation/deactivation steps.
- **Deodorization:** Helps remove cooking odors from the oven cavity.
- **Steam Clean Function:** Facilitates easy cleaning of the interior.
- **Turntable Reset Function:** Ensures the turntable returns to its original position for ease of use and safety.

CARE AND MAINTENANCE

Cleaning the Oven

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, use the Steam Clean Function.
- **Exterior:** Clean the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Door Seals:** Keep the door seals clean to ensure proper closure and prevent microwave energy leakage.
- **Glass Turntable and Ring:** These can be washed in warm soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

Caution: Always unplug the oven before cleaning.

TROUBLESHOOTING GUIDE

If you encounter issues with your SMETA Combination Microwave Oven, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food is not heating evenly.	Food quantity too large; Incorrect power level; Food not stirred/rotated.	Reduce food quantity; Select appropriate power level; Stir or rotate food halfway through cooking.
Oven light not working.	Bulb is loose or burned out.	Contact qualified service personnel for bulb replacement.

Problem	Possible Cause	Solution
Excessive steam from door.	Normal during cooking, especially with high moisture content foods.	This is normal and not a fault. Ensure proper ventilation.
Control panel unresponsive.	Child Lock activated; Temporary electronic glitch.	Deactivate Child Lock (refer to manual); Unplug the unit for 1 minute, then plug back in.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SMETA
Model	T-DMD100-34LKMMK(J9)
Capacity	34 Litres
Microwave Power Output	1000 Watts
Grill Power Output	2400 Watts
Convection Power Output	2400 Watts
Product Dimensions (W x D x H)	520mm x 520mm x 327mm (approx. 52 x 52 x 32 cm)
Item Weight	22.88 kg
Installation Type	Countertop
Material Type	Glass (Door), Stainless Steel (Inner)
Voltage	240 Volts
Special Features	Keep Warm, Food Dry, Yogurt, 10 Auto Menu, 6 Microwave Power Levels, Defrost by W.T./T, Deodorization, Mute Function, Steam Clean Function, ECO Function, Child Lock, Turntable Reset Function

WARRANTY AND SUPPORT

Warranty Information

Your SMETA Combination Microwave Oven comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty inquiries, please contact SMETA customer support. We aim to respond to all after-sales questions within 24 hours.

You can find contact information on the official SMETA website or through your purchase platform.