

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY YDX-135 Replacement Remote Control User Manual for RCA LCD LED HDTV Smart TV

ECONTROLLY YDX-135

ECONTROLLY YDX-135 Replacement Remote Control User Manual

For RCA LCD LED HDTV Smart TVs with YouTube, Netflix, and Prime Video Access

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY YDX-135 replacement remote control. It is designed to be compatible with various RCA LCD LED HDTV Smart TV models, offering direct access to popular streaming services like YouTube, Netflix, and Prime Video. This remote functions as a direct replacement and does not require programming.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY YDX-135 Replacement Remote Control

Note: 2 x AA batteries are required and are not included in the package.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) new AA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.





Figure 1: Battery compartment with AA batteries. Ensure correct polarity when inserting batteries.

Important: Use only new alkaline batteries. Rechargeable batteries may not provide sufficient power for optimal performance. Ensure no objects are blocking the infrared sensor on your TV or the remote control's emitter.

4. OPERATING INSTRUCTIONS

The ECONTROLLY YDX-135 remote control is designed for immediate use with compatible RCA LCD LED HDTV Smart TVs once batteries are installed. No additional programming is required.

4.1. Remote Control Layout and Functions





Figure 2: Front view of the ECONTROLLY YDX-135 remote control.

Table 1: Button Functions

Button	Function
Power ()	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI 1, AV).
Number Buttons (0-9)	Direct channel selection.
CH RTN	Returns to the previous channel.
YouTube	Direct access to the YouTube application.
Netflix	Direct access to the Netflix application.
Prime Video	Direct access to the Amazon Prime Video application.
HOME	Accesses the TV's home screen or smart hub.
Q.MENU	Opens the Quick Menu for common settings.
MENU	Opens the main settings menu.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
VOL +/-	Adjusts the volume level.
Mute	Mutes or unmutes the TV audio.

Button	Function
CH ^/v	Changes the channel up or down.
GUIDE	Displays the electronic program guide.
Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop, Record)	Controls media playback (e.g., USB content, streaming).
INFO	Displays information about the current program or content.
MTS/AUDIO	Selects audio tracks or MTS (Multi-channel Television Sound) options.
PICTURE	Accesses picture settings.
LIST	Displays a list of channels or other content.
CC/SUBTITLE	Toggles closed captions or subtitles.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

6. TROUBLESHOOTING

Table 2: Common Issues and Solutions

Problem	Possible Cause / Solution
Remote control is not working.	◦ Batteries: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with new alkaline batteries. ◦ Obstruction: Check if anything is blocking the line of sight between the remote control and the TV's infrared sensor. ◦ Distance: Ensure you are within the effective range of the TV's infrared receiver.
Specific buttons are not responding.	◦ Compatibility: While designed for RCA Smart TVs, some specific functions might vary slightly depending on the exact TV model. ◦ Stuck Button: Check if the button is physically stuck.

Problem	Possible Cause / Solution
TV does not respond consistently.	◦ Low Batteries: Replace batteries with new ones. ◦ Interference: Ensure there are no strong light sources or other electronic devices interfering with the infrared signal.

If troubleshooting steps do not resolve the issue, please contact ECONTROLLY customer support for further assistance.

7. SPECIFICATIONS

- **Model:** YDX-135
- **Brand:** ECONTROLLY
- **Compatibility:** RCA LCD LED HDTV Smart TVs (with YouTube, Netflix, Prime Video buttons)
- **Power Source:** 2 x AA 1.5V Alkaline Batteries (not included)
- **Material:** ABS
- **Dimensions:** Approximately 6 x 3 x 0.5 inches (15.24 x 7.62 x 1.27 cm)
- **Weight:** Approximately 2 ounces (56.7 grams) (without batteries)

8. WARRANTY AND SUPPORT

This ECONTROLLY product is designed for reliability and durability. For any questions, concerns, or issues not covered in this manual, please contact ECONTROLLY customer support. While specific warranty details are not provided in this document, please refer to your purchase documentation or the seller's information for warranty terms. For support, please reach out to the seller directly via the platform where the purchase was made. They can provide assistance with product inquiries and troubleshooting.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CR3HMC6F>

More documents and user manuals: <https://manuals.plus/>