

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY HPX06C Replacement Remote Control User Manual

ECONTROLLY HPX06C-OTMS

ECONTROLLY HPX06C Replacement Remote Control User Manual

For Idylis Portable Air Conditioners Models: 416711, 416709, 0416711, 416710


1. INTRODUCTION

Thank you for choosing the ECONTROLLY HPX06C Replacement Remote Control. This remote is specifically designed to be a direct replacement for the original remote controls of various Idylis Portable Air Conditioner models, including 416711, 416709, 0416711, and 416710. It offers the same functionality as the original, ensuring seamless operation of your air conditioner.

This manual provides detailed instructions on how to set up, operate, and maintain your new remote control, along with troubleshooting tips and product specifications.

2. PRODUCT OVERVIEW

The HPX06C remote control features a simple, ergonomic design for comfortable handling and easy access to all functions. Below is an illustration of the remote's front face and its primary buttons.

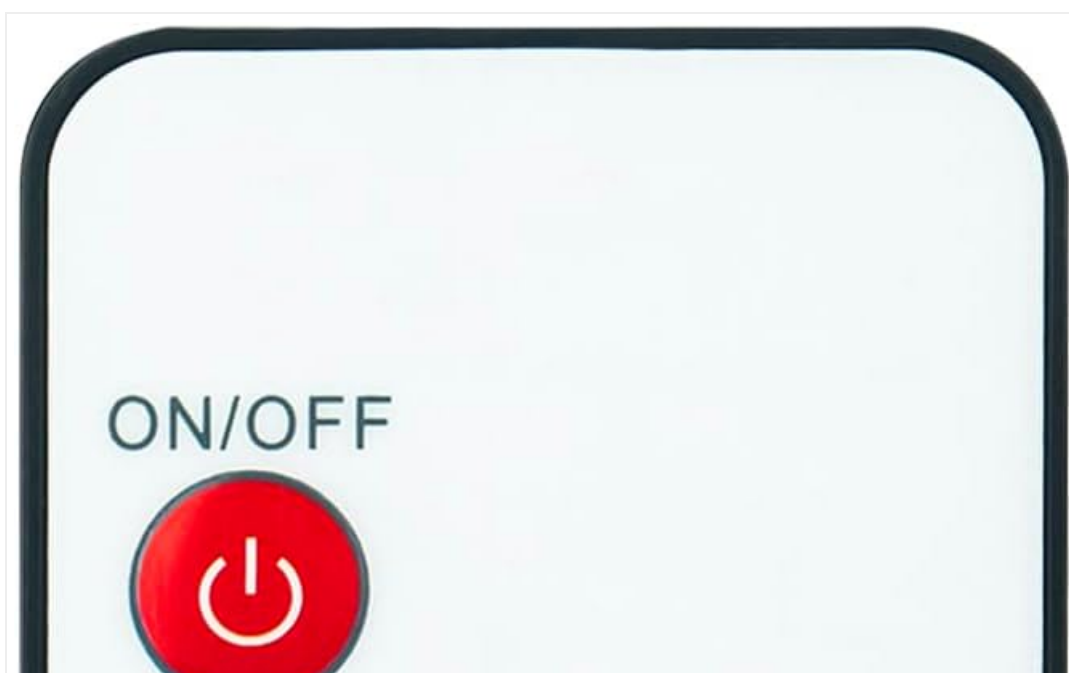

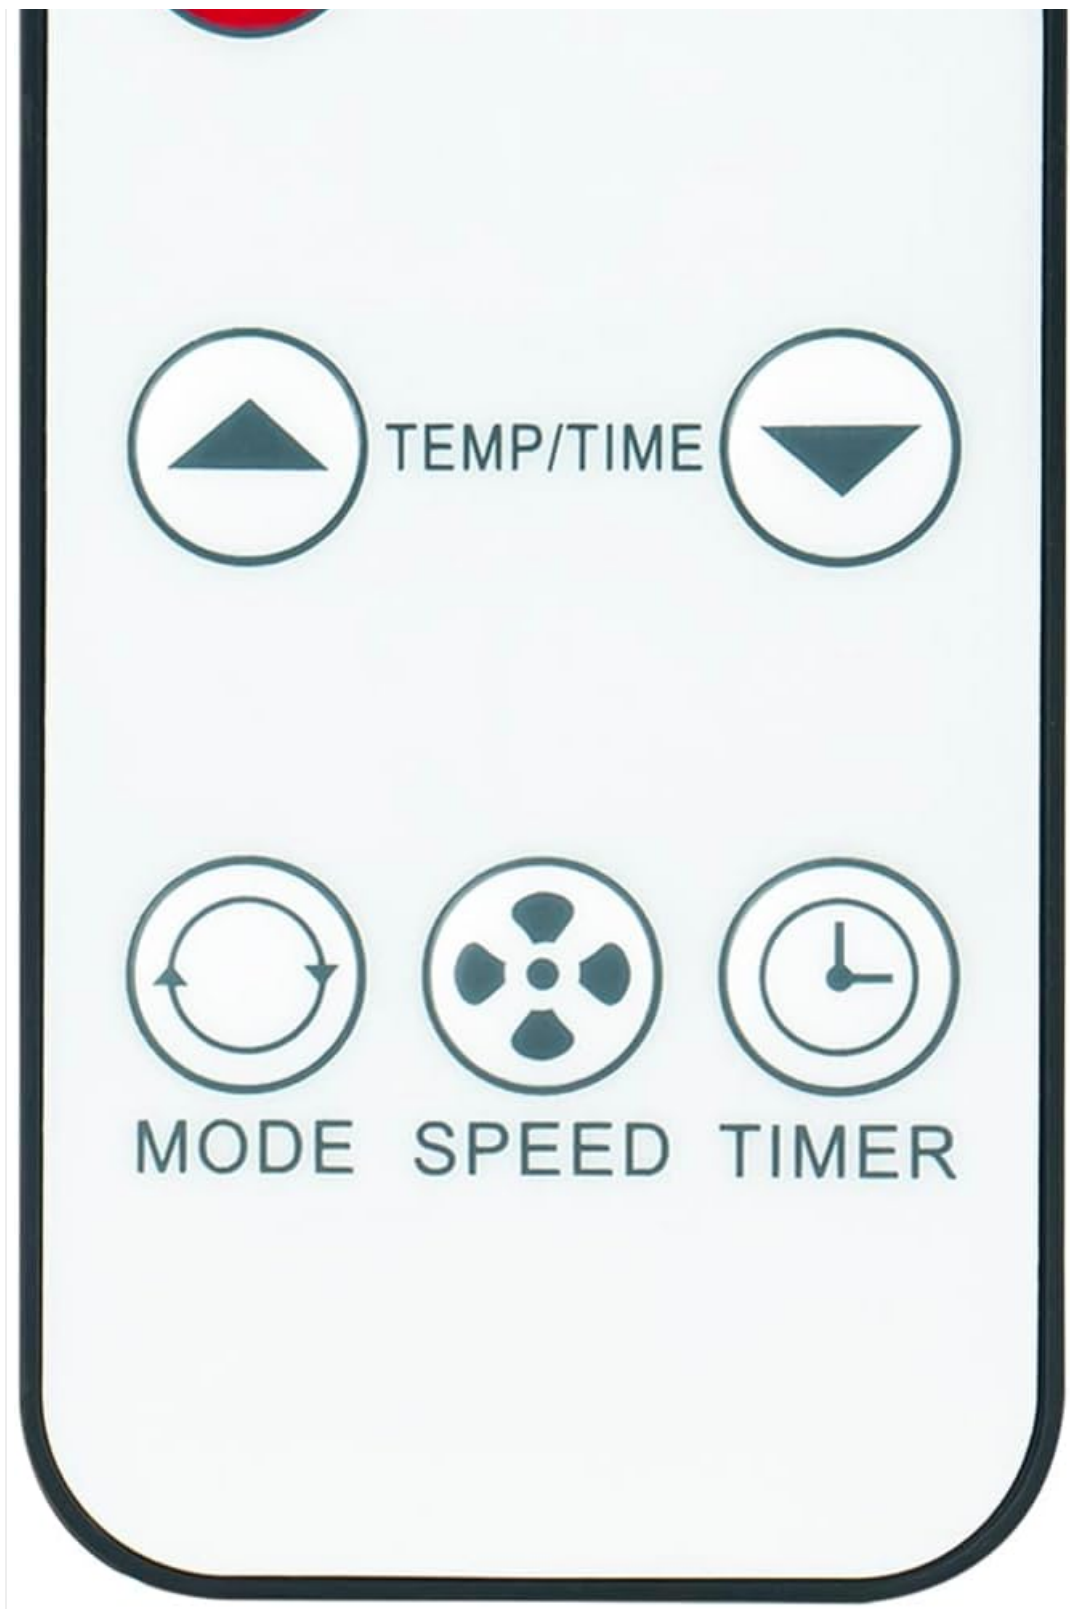


Figure 2.1: Front view of the HPX06C Replacement Remote Control, showing the ON/OFF button, TEMP/TIME adjustment buttons, MODE, SPEED, and TIMER buttons.

Button Functions:

- **ON/OFF:** Powers the air conditioner on or off.
- **TEMP/TIME (▲ / ▼):** Adjusts temperature settings or sets the timer duration.
- **MODE:** Cycles through different operating modes (e.g., Cool, Fan, Dry).
- **SPEED:** Adjusts the fan speed (e.g., Low, Medium, High).
- **TIMER:** Activates or adjusts the timer function for scheduled operation.

3. SETUP

The ECONTROLLY HPX06C remote control does not require any programming or complex setup. Simply install the batteries, and it will be ready for use with your compatible Idylis Portable Air Conditioner.

3.1 Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 3.1: Back view of the HPX06C Replacement Remote Control, illustrating the battery compartment and release mechanism.

Important Note:

- Always use new, high-quality alkaline batteries for optimal performance and longevity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

4. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at the infrared receiver on your Idylis Portable Air Conditioner. Ensure there are no obstructions between the remote and the air conditioner.

- **To Power On/Off:** Press the **ON/OFF** button.
- **To Adjust Temperature/Time:** Use the **TEMP/TIME ▲** (up) or **TEMP/TIME ▼** (down) buttons to increase or decrease the desired temperature or timer setting.
- **To Change Mode:** Press the **MODE** button repeatedly to cycle through available operating modes (e.g., Cool, Fan, Dry, Auto).
- **To Adjust Fan Speed:** Press the **SPEED** button repeatedly to select the desired fan speed (e.g., Low, Medium, High, Auto).
- **To Set Timer:** Press the **TIMER** button to activate or adjust the timer function. Refer to your air conditioner's manual for specific timer programming details.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity and reliable performance of your remote control.

5.1 Cleaning

Wipe the remote control periodically with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's range decreases or if the air conditioner does not respond to commands. Always replace both batteries at the same time with new alkaline batteries.

6. TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Remote control not working or unresponsive.	Dead or weak batteries.	Replace with two new AA alkaline batteries. Ensure correct polarity.
	Obstruction between remote and air conditioner.	Ensure a clear line of sight between the remote and the air conditioner's infrared receiver.
	Remote control is too far from the air conditioner.	Move closer to the air conditioner. The effective range is typically up to 20 feet (6 meters).
Remote functions are intermittent.	Low battery power.	Replace batteries.
	Infrared interference.	Ensure no other devices emitting infrared signals (e.g., other remotes, strong sunlight) are interfering.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	HPX06C-OTMS
Brand	ECONTROLLY
Compatible Models	Idylis Portable Air Conditioner 416711, 416709, 0416711, 416710
Power Source	2 x AA Batteries (not included)
Material	ABS
Color	Black
Product Dimensions	6 x 3 x 0.5 inches (approx.)
Item Weight	2 ounces (approx.)
Special Feature	Ergonomic Design

8. SUPPORT

If you have any questions regarding the compatibility or operation of your ECONTROLLY HPX06C Replacement Remote

Control, or if you encounter any issues not covered in this manual, please do not hesitate to contact us. We are committed to providing assistance and ensuring your satisfaction.

Please provide your product model number (HPX06C-OTMS) and a detailed description of the issue when contacting support for faster assistance.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question