

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY ZH/TL-02 Replacement Remote Control User Manual for CHIGO Air Conditioners

ECONTROLLY ZH-TL-02

ECONTROLLY ZH/TL-02 Replacement Remote Control User Manual

For CHIGO Air Conditioner Units

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY ZH/TL-02 replacement remote control, designed for use with various CHIGO air conditioner units. This remote control offers full functionality as a direct replacement for your original CHIGO A/C remote, displaying temperatures in both Celsius and Fahrenheit. It is constructed from durable ABS material for long-lasting use.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY ZH/TL-02 Replacement Remote Control

Note: 2 x AA batteries are required and not included in the package.

3. SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AA batteries.

Important: Use new alkaline batteries for optimal performance. Rechargeable batteries may not provide sufficient power.

4. OPERATING INSTRUCTIONS

The ZH/TL-02 remote control features a clear LCD display and intuitive buttons for controlling your CHIGO air conditioner. Ensure there is a clear line of sight between the remote control and the A/C unit's receiver.



Image: Front view of the remote control, highlighting the LCD screen and various function buttons.

Button Functions:

- **Power Button (●):** Turns the air conditioner ON or OFF.
- **Mode Button (M):** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Fan Speed Button (☺):** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Temperature Up/Down Arrows (▲ / ▼):** Increases or decreases the set temperature.
- **Turbo Clean Button:** Activates or deactivates the Turbo Clean function for rapid cooling/heating or self-cleaning (functionality depends on A/C unit).
- **Sleep Button:** Activates the Sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy saving.
- **°C/°F Button:** Toggles the temperature display between Celsius and Fahrenheit.

- **Light Button:** Controls the display light on the air conditioner unit (if available).
- **Timer Button:** Sets the ON/OFF timer for the air conditioner. Refer to your A/C unit's manual for specific timer programming.
- **Hold Button:** May be used to lock current settings or activate a specific hold function (functionality depends on A/C unit).
- **Swing Buttons** (↔ / ⬆): Controls the horizontal and vertical swing of the air conditioner's louvers.

5. MAINTENANCE

Cleaning the Remote Control:

To maintain the remote control's appearance and functionality, wipe it regularly with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the surface or internal components.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or the display fades. Always replace both batteries simultaneously with new AA alkaline batteries. Remove batteries if the remote control will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **Remote control is not working:**
 - Ensure new AA alkaline batteries are correctly installed. Avoid using rechargeable batteries.
 - Check for any obstructions between the remote control and the air conditioner unit.
 - Ensure you are within the effective operating range of the air conditioner.
- **Display is dim or blank:**
 - Replace the batteries with new AA alkaline batteries.
- **Remote control does not respond to certain functions:**
 - Some functions may be specific to your original A/C unit model and might not be fully supported by a universal replacement remote.
 - Ensure the A/C unit is powered on and not in a standby mode that restricts certain operations.

7. SPECIFICATIONS

Feature	Detail
Model Number	ZH-TL-02
Brand	ECONTROLLY
Compatibility	CHIGO A/C Units (various models)
Power Source	2 x AA Batteries (3V DC)
Material	ABS
Product Dimensions	6 x 3 x 0.5 inches

Item Weight	2 ounces
Special Feature	Ergonomic design, Celsius & Fahrenheit display

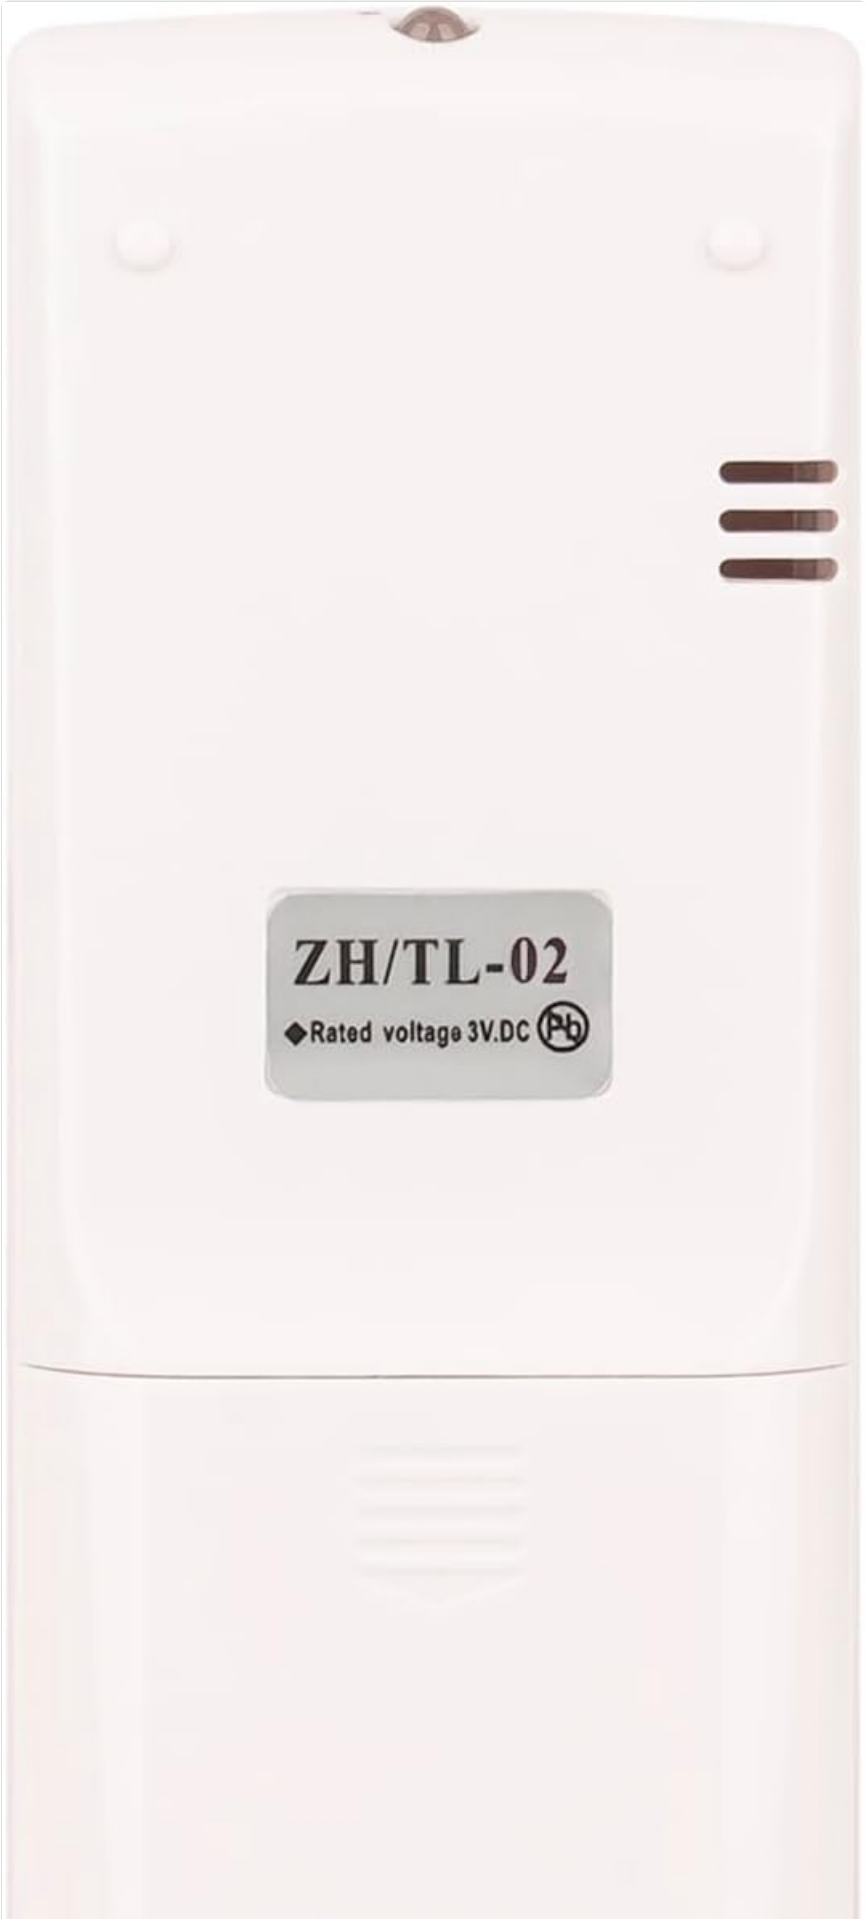




Image: Rear view of the remote control, displaying the model number and rated voltage.

8. SUPPORT

If you have any questions regarding the compatibility or operation of your ECONTROLLY ZH/TL-02 replacement remote control, please contact our customer support. We are committed to assisting you and providing the best possible service. For assistance, please refer to the contact information provided by your retailer or on the product packaging.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0CR3Z15KC>

More documents and user manuals: <https://manuals.plus/>