

- Manuals.plus /
- › YESHOMY /
- › YESHOMY YH-0284-WA Walnut Fireplace TV Stand User Manual

YESHOMY YH-0284-WA

YESHOMY YH-0284-WA Walnut Fireplace TV Stand User Manual

Model: YH-0284-WA

1. INTRODUCTION

Thank you for choosing the YESHOMY YH-0284-WA Walnut Fireplace TV Stand. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly or use to ensure proper function and longevity of the product. Keep this manual for future reference.



Image 1.1: The YESHOMY Walnut Fireplace TV Stand, showcasing its design with a television and various media components.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, injury, or property damage.

- Always assemble according to the provided instructions.
- Secure the TV stand to the wall using appropriate hardware to prevent tip-over. Wall anchoring hardware is recommended for stability and safety, especially in households with children or pets.
- Keep the area around the TV stand clear of objects that could pose a hazard if the TV stand were to tip over.
- Do not overload the TV stand. Ensure the weight of your television and other items does not exceed the stand's maximum weight capacity. The top surface supports up to 220 lbs.
- The electric fireplace is designed for indoor use only. Do not expose it to rain or moisture.

- Ensure the power cord is not pinched or routed under the unit or any other furniture.
- Do not operate the fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped.
- Maintain a safe distance from combustible materials (e.g., curtains, bedding) to the fireplace.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- The fireplace is equipped with overheat protection. If it overheats, it will automatically shut off. Unplug the unit and allow it to cool before restarting.

3. PACKAGE CONTENTS

Your YESHOMY Fireplace TV Stand is shipped in two separate packages (Box A and Box B), which may arrive on different days. Please ensure you have received both packages and all components before beginning assembly.

Included Components:

- TV Stand Panels (various sizes)
- Hardware Pack (screws, dowels, cam locks, hinges, handles, etc.)
- Electric Fireplace Insert
- Fireplace Remote Control
- Assembly Instruction Manual



Image 3.1: Overview of the TV stand's storage features, including two-tier side cabinets and a semi-open cubby for media equipment.

4. ASSEMBLY INSTRUCTIONS (SETUP)

Assembly typically requires two adults. All parts are labeled for easy identification. Follow the step-by-step instructions provided in the separate assembly manual included in your package.

General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts and hardware are present against the parts list in the assembly manual.
2. **Assemble the Main Frame:** Follow the diagrams to connect the base, side panels, and top panel using the provided hardware. Ensure all connections are secure.
3. **Install Shelves and Dividers:** Insert the adjustable shelves into the side cabinets and the fixed dividers for the central cubby.

4. **Attach Barn Doors:** Mount the sliding barn doors onto their tracks according to the instructions. Adjust as needed for smooth operation.
5. **Install Fireplace Insert:** Carefully slide the electric fireplace insert into its designated opening in the center of the TV stand. Ensure it fits snugly and is properly aligned.
6. **Cable Management:** Utilize the pre-drilled wire holes on the back panel to organize and route cables for your media devices.
7. **Secure to Wall (Recommended):** For enhanced safety, attach the TV stand to a wall stud using the provided anti-tip hardware.



Image 4.1: Close-up illustrating the storage options, the electric fireplace, and the integrated wire management system for electronic devices.

5. OPERATING INSTRUCTIONS

5.1. TV Stand Usage

- **Television Placement:** The top surface is designed to accommodate televisions up to 65+ inches. Ensure the TV base is centered and stable.
- **Storage:** Utilize the two-tier side cabinets and the semi-open highboy cubby for storing media equipment, books, or decorative items. The shelves in the side cabinets can be adjusted or removed to fit different-sized objects.
- **Cable Management:** Route all power cords and signal cables through the designated wire holes on the back panel to maintain a tidy appearance and prevent tangles.

PRODUCT DIMENSIONS



The item will delivered in **TWO Packages** and may **NOT** arrived on same day!



◀ **WIRE HOLE
CONVENIENT FOR USE**

Image 5.1: Visual guide demonstrating the compatibility of the TV stand with various television sizes, up to 65 inches.

5.2. Electric Fireplace Operation

The electric fireplace can be controlled via the front panel buttons or the included remote control.

30" Large Electric Fireplace with Remote

5000 BTU warmth providing areas heating for up to 500 sq.ft. & showcasing stunning 3D flame effects



Image 5.2: The electric fireplace insert, showing its integrated control panel and the accompanying remote control for convenient operation.

Fireplace Controls:

- **Power On/Off:** Press the power button on the unit or remote to turn the fireplace on or off.
- **Heat Function:** The fireplace provides 5000 BTU of heat, capable of warming areas up to 400 sq. ft. Use the temperature control buttons to adjust the heat setting between 65°F and 95°F. The heat function can be used independently of the flame effect.
- **Flame Effects:** Enjoy 3-stage 3D flame effects. Use the flame button to cycle through different brightness levels (L1-L4) or flame patterns. The flame effect can be operated without heat for ambiance.
- **Timer:** Set the operational timer for 1 to 8 hours. The fireplace will automatically shut off after the set duration.
- **Remote Control:** The remote control duplicates all functions available on the fireplace's front panel for convenience. Ensure batteries are correctly installed.



Ample Storage & Spacious Tabletop

Introduce 2 storage compartments and 2 pull-out cabinets silhouetted in a skillfully etched geometric pattern, this spacious console is a stunning storage unit that adds a touch of elegance to the living space.



A striking focal point in a farmhouse

Come with a unique clear crystal shimmering bed, which gives the appearance of a traditional fireplace in like coals burning in a traditional fireplace without any noise.



Charming Flames & Lighting



Spacious Storage Unit



Easy to open



Wire management

Image 5.3: Detailed features of the 3D fireplace insert, including heating capacity, flame brightness levels, control options, temperature range, and timer settings.

6. MAINTENANCE AND CARE

Proper care will help maintain the appearance and functionality of your TV stand and fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the wood finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe the exterior. Do not spray water directly onto the unit.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Inspecting Connections:** Periodically check all screws and hardware to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter issues with your YESHOMY Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not plugged in, circuit breaker tripped, unit overheated.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. If the unit overheated, unplug it and allow it to cool for at least 15 minutes before plugging it back in.
No heat output.	Heat function is off, temperature setting is too low, unit overheated.	Activate the heat function using the control panel or remote. Increase the temperature setting. If overheated, follow the solution above.

Problem	Possible Cause	Solution
Flame effect not visible.	Flame effect is off, brightness set to minimum.	Activate the flame effect using the control panel or remote. Adjust the flame brightness setting.
Remote control not working.	Dead batteries, remote out of range, obstruction.	Replace the batteries in the remote control. Ensure you are within range and there are no obstructions between the remote and the fireplace sensor.
TV stand feels unstable.	Loose hardware, not anchored to wall.	Check and tighten all assembly hardware. Ensure the unit is properly anchored to the wall using the anti-tip hardware.

If these solutions do not resolve your issue, please contact YESHOMY customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	YH-0284-WA
Color	Walnut
Material	Engineered Wood
Product Dimensions (L x W x H)	59 x 15.1 x 30.1 inches
Item Weight	94 pounds
TV Size Compatibility	Up to 65+ inches
Weight Capacity (Top Surface)	220 lbs
Fireplace Heat Output	5000 BTU
Heating Area	Up to 400 sq. ft.
Temperature Control Range	65°F - 95°F
Timer Settings	1-8 hours
Certifications	ETL/FCC Certified

65-In Fireplace TV Stand with LOTS of Storage

keep your space neat & tidy

• 2-TIER SIDE CABINETS

You can keep or remove the shelves to storage different-sized items freely

• SEMI-OPEN HIGHBOY CUBBY

For media equipment storage & arts display



Image 8.1: Side profile of the TV stand, providing a clear view of its depth and structural design.

9. WARRANTY AND SUPPORT

YESHOMY products are manufactured with quality and care. For specific warranty details regarding your Fireplace TV Stand, please refer to the warranty information included in your product packaging or visit the official YESHOMY website. If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact YESHOMY customer support:

- **Online Support:** Visit the YESHOMY store on Amazon: [YESHOMY Store](#)
- **Email Support:** Refer to your product packaging for the most current customer service email address.

Please have your model number (YH-0284-WA) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CR67WTX2>

More documents and user manuals: **<https://manuals.plus/>**