

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Majority](#) /

› [Majority Naga 80 Sound Bar User Manual](#)

Majority Naga 80

Majority Naga 80 Sound Bar User Manual

Model: Naga 80

INTRODUCTION

The Majority Naga 80 Sound Bar is designed to enhance your home audio experience with powerful 140W peak output and 2.1 channel sound. Featuring advanced 3D surround sound technology and a built-in subwoofer, it delivers rich, clear audio for movies, gaming, and music. This manual provides detailed instructions for setup, operation, and maintenance of your sound bar.

MAJORITY



The Naga 80 TV Soundbar delivers powerful, high-quality sound to elevate your home entertainment.

WHAT'S IN THE BOX

Please check the contents of your package carefully. If any items are missing or damaged, contact customer support.

- Naga 80 Soundbar
- User Manual
- Remote Control
- Wall Brackets

- HDMI, AUX, and Power cables



Wall Brackets & Fixings



HDMI Cable



RCA to AUX Cable



Remote Control & Batteries



Mains Power



User Manual

All items included in the Naga 80 Sound Bar package.

SETUP

Connecting to Power

1. Ensure the sound bar is placed on a stable surface or securely wall-mounted.
2. Connect the power adapter to the DC 24V input port on the back of the sound bar.

3. Plug the power adapter into a wall outlet.

Audio Connections

The Naga 80 Sound Bar offers multiple connectivity options for your devices:

- **HDMI ARC:** Connect an HDMI cable from the sound bar's ARC port to your TV's HDMI ARC port for high-quality audio and TV remote control integration.
- **Optical In:** Use an optical cable to connect to your TV or other audio source for digital audio transmission.
- **AUX In:** Connect devices using the 3.5mm AUX cable for analog audio input.
- **USB:** Insert a USB drive to play audio files directly from the sound bar.
- **Bluetooth:** Pair your smartphone, tablet, or other Bluetooth-enabled devices wirelessly.

Important: If you experience buzzing or static sound when using HDMI or Optical connections, adjust your TV's audio output settings to PCM (Pulse Code Modulation).



Rear panel connections of the Naga 80 Sound Bar.

Bluetooth Pairing

1. Press the 'Input' button on the sound bar or remote control until 'BT' appears on the display.
2. On your device (smartphone, tablet), enable Bluetooth and search for 'Naga 80'.
3. Select 'Naga 80' to pair. A confirmation sound will indicate successful pairing.



MAJORITY



Bluetooth 5.0

2.1 Channel Speakers

The Naga 80 Sound Bar supports Bluetooth 5.0 for wireless audio streaming.

OPERATING INSTRUCTIONS

Remote Control Functions

The included remote control allows full command over your sound bar's features:

- **Power:** Turn the sound bar on or off.
- **Input:** Cycle through input sources (HDMI ARC, Optical, AUX, USB, Bluetooth).

- **Volume +/-:** Adjust the master volume.
- **Play/Pause, Skip Tracks:** Control media playback in Bluetooth or USB mode.
- **Sound Modes:** Select between Movie, Music, and Dialog modes.
- **Bass +/- (BA+/-):** Adjust bass levels.
- **Treble +/- (TR+/-):** Adjust treble levels.
- **3D On/Off:** Activate or deactivate 3D surround sound.
- **Reset:** Reset audio settings to default.
- **Pair:** Initiate Bluetooth pairing.



The remote control provides comprehensive control over your sound bar.

Sound Modes

Optimize your audio experience with dedicated sound modes:

- **Movie Mode:** Enhances cinematic sound effects and dialogue for an immersive movie-watching experience.
- **Music Mode:** Provides a balanced audio profile suitable for various music genres.
- **Dialog Mode:** Prioritizes vocal clarity, making conversations easier to understand, especially in TV shows or news broadcasts.

Adjusting Bass and Treble

You can fine-tune the bass and treble levels to your preference using the remote control. Both settings can be adjusted from -4 to +4, with 0 being the default. Use the 'BA+/-' buttons for bass and 'TR+/-' buttons for treble.

INSTALLATION AND PLACEMENT

Wall Mounting

The Naga 80 Sound Bar can be wall-mounted for a clean, space-saving setup. Use the included wall brackets and fixings. Ensure the mounting surface is sturdy enough to support the sound bar's weight (4.3 pounds).



MAJORITY Naga 80

- Premium build quality
- 140W output with 2.1 speakers
- HDMI ARC, AUX, Optical, BT
- Wall mountable, with included brackets
- 3 year coverage



Other Brands

- Fragile construction
- Weak performance
- Limited connectivity
- Not wall mountable
- Minimal coverage & support

**MAJORITY always
sounds twice the price**

Wall mount brackets for secure installation.

SPECIFICATIONS

Feature	Specification
Model Name	Naga 80
Speaker Type	Soundbar

Speaker Maximum Output Power	140 Watts
Surround Sound Channel Configuration	2.1
Connectivity Technology	Bluetooth, HDMI, Optical, AUX, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Control Method	Remote
Product Dimensions	31.8"D x 4.6"W x 3.06"H
Item Weight	4.3 Pounds
Material	Plastic (Enclosure), Metal (Subwoofer)
Included Components	HDMI, AUX and Power cables, Naga 80 Soundbar, Remote, User Manual, Wall Brackets
Batteries	2 AAA batteries required (included)
Mounting Type	Wall Mount

MAINTENANCE

To ensure the longevity and optimal performance of your Majority Naga 80 Sound Bar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the sound bar. Avoid using abrasive cleaners, waxes, or solvents.
- **Ventilation:** Ensure proper ventilation around the sound bar to prevent overheating. Do not block any ventilation openings.
- **Storage:** If storing the sound bar for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your sound bar, refer to the following common problems and solutions:

- **No Power:** Ensure the power cable is securely connected to both the sound bar and a working power outlet. Check if the power adapter is functioning correctly.
- **No Sound:** Verify the correct input source is selected on the sound bar. Check all audio cables for secure connections. Ensure the volume is not muted or set too low on both the sound bar and your connected device.
- **Buzzing/Static Sound (HDMI/Optical):** Adjust your TV's HDMI/Optical audio output settings to PCM. Some TVs may default to other formats that are not compatible with the sound bar.
- **Bluetooth Pairing Issues:** Ensure the sound bar is in Bluetooth pairing mode. Turn off and on Bluetooth on your device, then try pairing again. Move your device closer to the sound bar to ensure it's within range (10 meters).
- **Remote Control Not Working:** Check the batteries in the remote control and replace them if necessary (2 AAA batteries). Ensure there are no obstructions between the remote and the sound bar.

WARRANTY AND SUPPORT

The Majority Naga 80 Sound Bar comes with a **3-Year Extended Warranty** upon registration. For warranty registration, technical support, or further assistance, please visit the official Majority website or contact their customer service. For more information and to register your product, visit: www.majority.co.uk