

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER 4-Slice Toaster \(TR1410BD\) & 12-Cup Programmable Coffee Maker User Manual](#)

BLACK+DECKER TR1410BD

BLACK+DECKER 4-Slice Toaster (TR1410BD) & 12-Cup Programmable Coffee Maker User Manual

Model: TR1410BD (Toaster)

INTRODUCTION

Welcome to your new BLACK+DECKER kitchen appliance set, featuring a 4-Slice Extra-Wide Toaster and a 12-Cup Programmable Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliances. Please read all instructions thoroughly before first use and retain for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, drapes, walls, and

the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate the coffee maker without water in the reservoir.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

PRODUCT OVERVIEW

BLACK+DECKER 4-Slice Toaster (Model TR1410BD)

This 4-slice toaster features extra-wide slots to accommodate various bread types, including thick bagels and artisan breads. It includes independent controls for each pair of slots, allowing for customized toasting. The high-lift lever ensures easy retrieval of smaller items.



Image: Front view of the BLACK+DECKER 4-Slice Toaster, showcasing its sleek black design and four wide slots.

Key Features:

- **4 Extra-Wide Toasting Slots:** Accommodates thick bagels and artisan breads.
- **7 Toast Shade Settings:** Two independent shade selector knobs (1-7) for customized browning.
- **Frozen, Bagel & Cancel Buttons:** Dedicated functions for specific toasting needs and immediate cancellation.

- **Extra Lift:** Levers lift toast safely into reach.

BLACK+DECKER 12-Cup Programmable Coffee Maker

The 12-Cup Programmable Coffee Maker allows you to customize your morning brew with strength selection and a 1-4 cup option. Its QuickTouch Programming simplifies setting the 24-hour auto brew function, and the 'Time Since Brewed' display keeps track of coffee freshness.



Image: Front view of the BLACK+DECKER 12-Cup Programmable Coffee Maker, showing the digital display and control buttons.

Key Features:

- **12-Cup Capacity:** Brews enough coffee for the whole family.
- **QuickTouch Programming:** Easy 24-hour auto brew function.
- **Brew Strength Selector:** Choose between regular or strong coffee.
- **1-4 Cup Option:** Optimizes brewing for smaller quantities without sacrificing flavor.
- **'Keep Hot' Carafe Plate:** Nonstick plate keeps coffee warm for up to two hours with a 'time since brewed' display.

SETUP

Initial Cleaning

1. Before first use, wipe all exterior surfaces of both appliances with a damp cloth.
2. For the toaster, remove any packaging materials from the toasting slots and crumb trays.
3. For the coffee maker, wash the carafe and brew basket in warm, soapy water. Rinse thoroughly.
4. Run two full cycles of plain water through the coffee maker without coffee grounds to clean the internal components.

Placement

Place both appliances on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliances.

Power Connection

Plug the power cords into a standard 120V AC electrical outlet. Do not use extension cords unless absolutely necessary and ensure they are rated for the appliance's wattage.

OPERATING INSTRUCTIONS

BLACK+DECKER 4-Slice Toaster

1. **Load Bread:** Place up to four slices of bread, bagels, or other items into the extra-wide toasting slots.
2. **Select Shade:** Use the shade selector knobs (one for each pair of slots) to choose your desired browning level from 1 (lightest) to 7 (darkest).
3. **Lower Lever:** Push down the toast lever until it locks into place. The toasting cycle will begin.
4. **Special Functions:**
 - Press the **Bagel** button for toasting bagels (toasts the cut side and warms the other).
 - Press the **Frozen** button for frozen items (extends toasting time).
 - Press the **Cancel** button at any time to stop the toasting cycle and eject the items.
5. **Retrieve Toast:** Once the cycle is complete, the toast will automatically pop up. Use the high-lift lever to raise smaller items for easier retrieval.



7 Toast Shade Settings

Image: Close-up view of the toaster's control panel, showing the shade selector dial and function buttons (Bagel, Frozen, Cancel).

BLACK+DECKER 12-Cup Programmable Coffee Maker

1. **Fill Water Reservoir:** Open the reservoir lid and fill with fresh, cold water to the desired 12-cup mark using the water level indicator.
2. **Add Coffee Grounds:** Place a standard basket-style paper filter into the brew basket. Add the desired amount of ground coffee.
3. **Place Carafe:** Ensure the empty carafe is placed on the 'Keep Hot' plate.
4. **Brew Immediately:** Press the **ON/OFF** button to start brewing.
5. **Program Auto Brew:**
 - Press the **PROG** button. The clock will flash.
 - Use the **HOUR** and **MIN** buttons to set the desired brew time.
 - Press **PROG** again to confirm. The **AUTO** indicator will illuminate.
 - Press **ON/OFF** to activate the auto brew function.
6. **Select Brew Strength:** Press the **STRONG** button for a bolder coffee flavor.

7. **1-4 Cup Option:** For brewing smaller batches (1-4 cups), press the **1-4 CUP** button to optimize the brewing process.

MAINTENANCE

Cleaning the Toaster

1. **Unplug and Cool:** Always unplug the toaster and allow it to cool completely before cleaning.
2. **Empty Crumb Trays:** Pull out the slide-out crumb trays located at the bottom of the toaster. Discard crumbs and wipe the trays clean with a damp cloth. Reinsert the trays.
3. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.



Image: Side view of the BLACK+DECKER 4-Slice Toaster, indicating the location of the removable crumb trays at the bottom.

Cleaning the Coffee Maker

1. **Unplug and Cool:** Unplug the coffee maker and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The carafe, carafe lid, and brew basket are top-rack dishwasher safe or can be washed by hand in warm, soapy water.
3. **Exterior Cleaning:** Wipe the exterior surfaces, including the control panel, with a soft, damp cloth. Do not use abrasive cleaners.
4. **Descaling:** Over time, mineral deposits can build up in your coffee maker. To descale, fill the water reservoir

with equal parts white vinegar and water. Place an empty paper filter in the brew basket and place the empty carafe on the 'Keep Hot' plate. Brew half of the solution, then turn off the coffee maker and let it soak for at least 15 minutes. Turn it back on and brew the remaining solution. Run two full cycles of clean water through the coffee maker to rinse. Repeat monthly or as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster not toasting	Not plugged in; lever not fully depressed.	Ensure toaster is plugged in; push lever down until it locks.
Uneven toasting	Food item too thick or unevenly cut; crumb tray full.	Adjust food item; clean crumb tray.
Coffee not brewing	No water in reservoir; coffee maker not turned on; brew basket clogged.	Fill reservoir; press ON/OFF; check for clogs and clean brew basket.
Coffee tastes weak/strong	Incorrect coffee-to-water ratio; wrong brew strength selected.	Adjust coffee amount; use Brew Strength Selector.

SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Color:** Black
- **Material:** Plastic, Stainless Steel
- **Product Dimensions:** 7.71"D x 11.54"W x 7.71"H
- **Toaster Slot Count:** 4 (Extra-Wide)
- **Toaster Settings:** 7 Shade Settings, Bagel, Frozen, Cancel functions
- **Coffee Maker Capacity:** 12-Cup
- **Coffee Maker Features:** Programmable, Brew Strength Selector, 1-4 Cup Option, 'Keep Hot' Carafe Plate
- **Model Number (Toaster):** TR1410BD

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your proof of purchase for warranty claims.

Online Support: www.blackanddecker.com/support