

[Manuals.plus](#) /

› [The MeatStick](#) /

› The MeatStick Wireless Meat Thermometer (Stick Only, Green) Instruction Manual

The MeatStick PS860G

The MeatStick Wireless Meat Thermometer (Stick Only, Green)

Model: PS860G

1. INTRODUCTION

This manual provides essential instructions for the proper use and care of your The MeatStick Wireless Meat Thermometer (Stick Only, Green). Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This product is designed to monitor internal meat temperatures during cooking processes such as grilling, smoking, roasting, and sous-vide.



Image 1.1: The MeatStick Wireless Meat Thermometer (Stick Only, Green). This image displays the standalone MeatStick probe, featuring a stainless steel shaft and a green-banded ceramic handle.

2. SAFETY INFORMATION

- **High Temperature Warning:** The stainless steel probe can withstand meat temperatures up to 212°F (100°C). The ceramic handle can withstand ambient temperatures up to 572°F (300°C). Exceeding these temperatures may damage the device.
- **Charger Required:** This MeatStick is sold as a 'Stick Only' unit. It requires a compatible The MeatStick/MeatStick X Charger (not included) for activation and charging. Do not attempt to charge with Mini/MiniX chargers.
- **Sharp Point:** The probe has a sharp tip. Handle with care to prevent injury.
- **Children:** Keep out of reach of children.
- **Cleaning:** The MeatStick is dishwasher safe. Ensure it is completely dry before storage or charging.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x The MeatStick Wireless Meat Thermometer (Green)

Note: A charger is not included with this 'Stick Only' product and must be purchased separately.



Image 3.1: Classic MeatStick. This graphic highlights the MeatStick and explicitly states that activation and charging require a MeatStick/X Charger, which is not included.

4. SETUP

4.1 Initial Charging and Activation

1. Insert the MeatStick into a compatible The MeatStick/MeatStick X Charger (sold separately).
2. Allow the MeatStick to charge fully. The charging indicator on your charger will confirm the charging status.
3. The MeatStick will activate automatically upon successful charging.

4.2 App Installation and Pairing

1. Download 'The MeatStick App' from your device's app store (available on App Store and Google Play).
2. Ensure Bluetooth is enabled on your smartphone or tablet.
3. Open The MeatStick App and follow the on-screen instructions to pair your MeatStick.
4. The app will guide you through selecting meat types, desired doneness, and setting up alerts.



Image 4.1: MeatStick App Interface. This image shows the mobile application interface, demonstrating how different MeatSticks can be identified by color rings, both on the physical stick and within the app.

5. OPERATING INSTRUCTIONS

5.1 Inserting the MeatStick

1. Carefully insert the MeatStick into the thickest part of the meat, avoiding bones.
2. Ensure the entire stainless steel probe is inside the meat, with only the ceramic handle exposed to the cooking environment.

5.2 Monitoring Temperature

1. Once inserted, place the meat in your oven, grill, smoker, or sous-vide bath.
2. Monitor the internal temperature and cooking progress via The MeatStick App on your paired device.
3. The app will provide real-time temperature readings and estimated cook times.

5.3 Range Extension (Optional)

The MeatStick's range can be extended using compatible accessories such as The MeatStick X Charger, MiniX Charger, or WiFi Bridge (all sold separately). Refer to the respective accessory manuals for setup and operation.

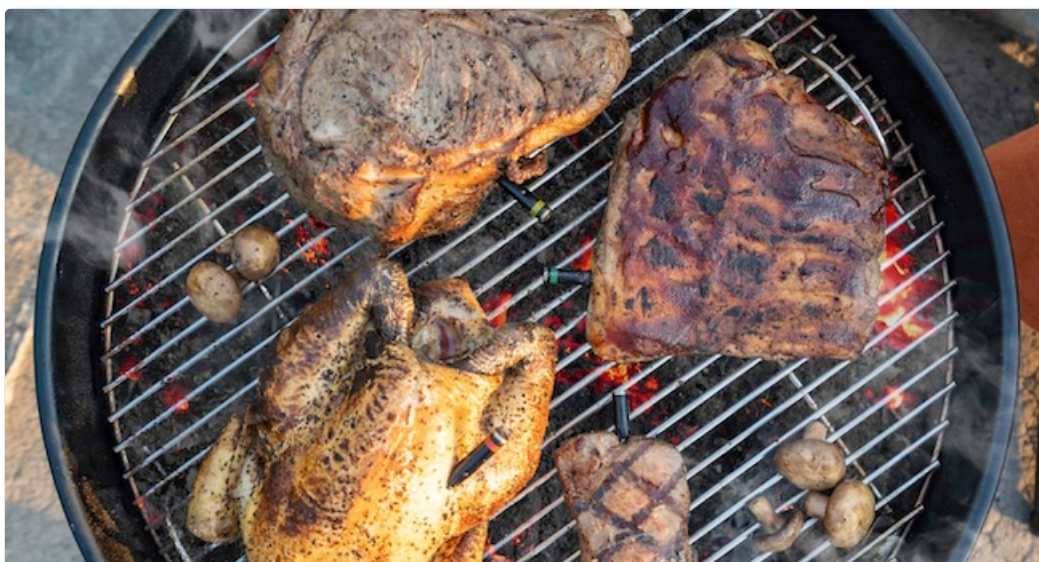


Image 5.1: MeatSticks in use on a grill. This image illustrates multiple MeatSticks inserted into different cuts of meat (chicken, steak, ribs) on a barbecue grill, demonstrating simultaneous temperature monitoring.

6. MAINTENANCE

6.1 Cleaning

- After each use, allow the MeatStick to cool down.
- The MeatStick is dishwasher safe. Alternatively, wash by hand with warm, soapy water.
- Ensure all food residue is removed from the probe and handle.
- Thoroughly dry the MeatStick before storing or placing it back in its charger.

6.2 Storage

Store the MeatStick in a clean, dry place. When not in use, it is recommended to store it in its compatible charger to maintain battery health.

7. TROUBLESHOOTING

- **No Connection to App:**
 - Ensure the MeatStick is charged and activated.
 - Verify Bluetooth is enabled on your device.
 - Make sure your device is within the MeatStick's range. Consider using a range extender (e.g., MeatStick X Charger, WiFi Bridge) if cooking at a distance.
 - Restart the app and/or your device.
- **Inaccurate Temperature Readings:**
 - Ensure the probe is inserted correctly into the thickest part of the meat, avoiding bones.
 - Verify the ceramic handle is not submerged in liquid or directly exposed to extreme heat sources that exceed its maximum temperature rating.
- **MeatStick Not Charging:**
 - Confirm you are using a compatible The MeatStick/MeatStick X Charger.
 - Ensure the MeatStick is correctly seated in the charger.
 - Check if the charger itself is powered on and functioning.

8. SPECIFICATIONS

Feature	Detail
Model Number	PS860G
Product Dimensions	5.51 x 1.18 x 1.18 inches
Weight	1.45 ounces
Probe Material	Stainless Steel

Handle Material	Ceramic
Max Internal Meat Temp.	212°F (100°C)
Max Ambient Handle Temp.	572°F (300°C)
Connectivity	Wi-Fi (via compatible charger/bridge)
Care Instructions	Dishwasher Safe

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official The MeatStick website or contact their customer service directly. Keep your purchase receipt as proof of purchase.
Website: www.themeatstick.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question