

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GUY-TECH](#) /

› [GUY-TECH AC/DC Adapter User Manual](#)

GUY-TECH D-9, D9, D-90, D90 Compatible

GUY-TECH AC/DC Adapter User Manual

Model: Compatible with Sony Discman Walkman D-9, D9, D-90, D90 Disc Compact CD Players

1. INTRODUCTION

This user manual provides essential information for the safe and effective use of your GUY-TECH AC/DC Adapter. This adapter is designed to provide reliable power to compatible Sony Discman Walkman D-9, D9, D-90, and D90 Disc Compact CD Players.

Key features include:

- Small and lightweight design for portability.
- High efficiency and low energy consumption.
- Built-in protection against over voltage, over current, and short circuit.
- Wide input voltage range (100V - 240V) for worldwide use.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Ensure the adapter's voltage and current ratings match your device's requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not disassemble or modify the adapter. Refer all servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x GUY-TECH AC/DC Adapter Charger

Note: Please ensure that you choose the right adapter before ordering to ensure compatibility with your device.

4. SETUP INSTRUCTIONS

Follow these steps to set up your AC/DC adapter:

1. **Inspect the Adapter:** Before use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Verify Compatibility:** Ensure your Sony Discman Walkman model (D-9, D9, D-90, D90) requires the specific voltage and connector type provided by this adapter.
3. **Connect to Device:** Carefully insert the DC output plug of the adapter into the power input jack of your Sony Discman Walkman. Ensure a snug and secure connection.
4. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard wall power outlet (100V - 240V AC).
5. **Power On Device:** Once connected, you can power on your Sony Discman Walkman.



Image 1: The GUY-TECH AC/DC Adapter showing the main unit and the connected power cable with the DC output plug. This image illustrates the complete adapter unit.

5. OPERATING THE ADAPTER

The GUY-TECH AC/DC Adapter operates automatically once connected to a power source and a compatible device. It

converts the AC wall power to the DC power required by your Sony Discman Walkman.

- The adapter is designed for continuous operation within its specified limits.
- It features high power exchange efficiency to maintain a stable working temperature.
- Built-in protection mechanisms (Over Voltage, Over Current, Short Circuit) automatically safeguard your device and the adapter from electrical irregularities.

Products Details of Different Directions



Image 2: This image displays the front and side views of the AC/DC adapter, highlighting its compact design and the input specifications printed on the front surface.



Image 3: A hand demonstrating the portability of the adapter by placing it into a bag, emphasizing its small and lightweight design for easy transport.

6. MAINTENANCE AND CARE

Proper care will extend the life of your adapter:

- **Cleaning:** Disconnect the adapter from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Handling:** Do not pull the cable to unplug the adapter from the wall or device; always grasp the plug itself.

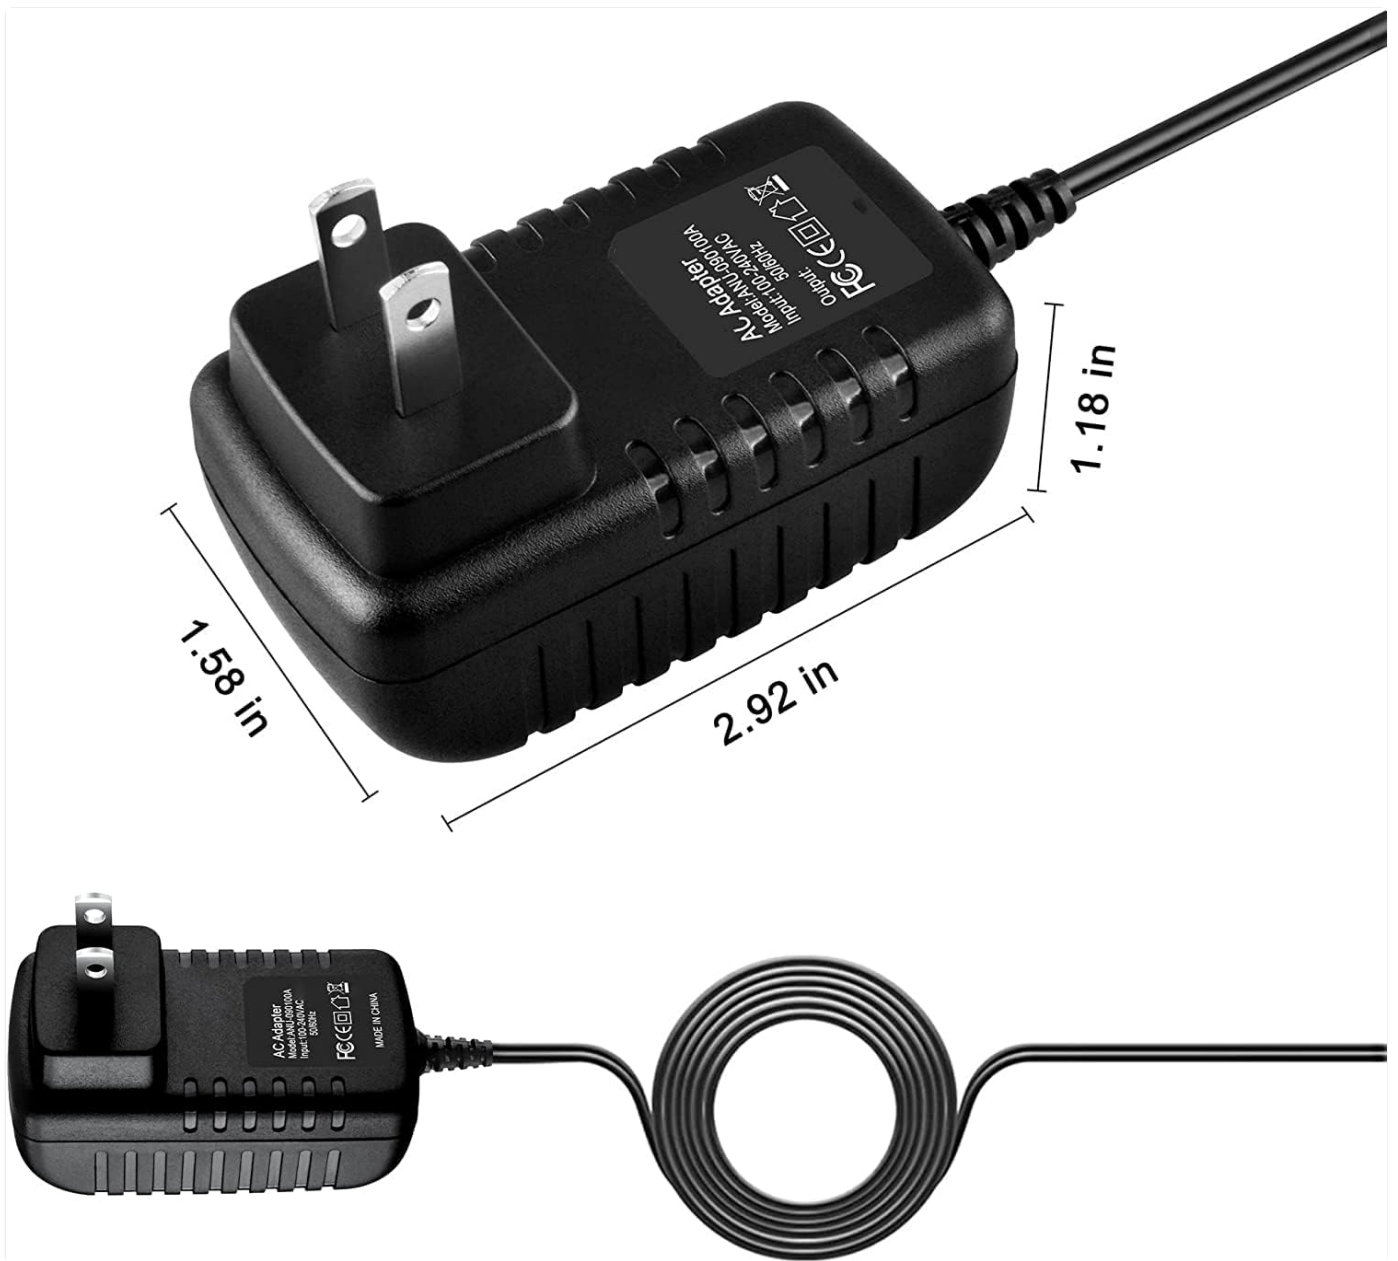


Image 4: This image provides the physical dimensions of the AC/DC adapter, showing its length, width, and height, which can be useful for storage and compatibility checks.

7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-------------------------|---|--|
| Device not powering on. | <ul style="list-style-type: none"> Adapter not properly plugged in. Power outlet is not active. Incompatible device. Adapter or device malfunction. | <ul style="list-style-type: none"> Ensure adapter is securely plugged into both the wall outlet and the device. Test the outlet with another device. Verify your device model is listed as compatible. Contact customer support if issues persist. |

| Problem | Possible Cause | Solution |
|---------------------|--|--|
| Adapter feels hot. | Normal operation (low fever). Overload or poor ventilation. | A slight warmth is normal. Ensure adapter is in a well-ventilated area. Disconnect if excessively hot and allow to cool. If overheating persists, discontinue use. |
| Intermittent power. | Loose connection. Damaged cable/connector. | Check all connections for tightness. Inspect the cable and connector for bends or breaks. Replace adapter if cable is damaged. |

8. PRODUCT SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Brand | GUY-TECH |
| Model Compatibility | Sony Discman Walkman D-9, D9, D-90, D90 Disc Compact CD Players |
| Input Voltage | 100V - 240V AC (Worldwide) |
| Output Protection | Over Voltage, Over Current, Short Circuit |
| Connectivity Technology | Powerline |
| Connector Type | Plug (DC output) |
| Color | Black |
| Special Feature | Portable |
| Certifications | CCC, CE, RoHS |
| Manufacturer | Guy-Tech |
| Country of Origin | China |

☆ Compact and Convenient

You could take it to anywhere you want to go



Image 5: An illustration of the adapter's compact and convenient nature, showing it can be used in various settings such as travel, home, and office environments.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. The seller for this product is EXT Store.

Please retain your proof of purchase for any warranty claims.