

iJoy iJoy 810116712472

iJoy Disney Lilo & Stitch Lick Bluetooth Over-Ear Headphones User Manual

Model: iJoy 810116712472

INTRODUCTION

This manual provides instructions for the iJoy Disney Lilo & Stitch Lick Bluetooth Over-Ear Headphones. It covers product features, setup, operation, maintenance, and troubleshooting to ensure optimal use of your device.




Image: Main product view of the iJoy Disney Lilo & Stitch Lick Bluetooth Over-Ear Headphones.



Image: A person wearing the iJoy Disney Lilo & Stitch Bluetooth Over-Ear Headphones, demonstrating their use in a home environment.

PRODUCT OVERVIEW

The iJoy Disney Lilo & Stitch Lick Bluetooth Over-Ear Headphones offer wireless audio connectivity with a built-in microphone. Designed for comfort and portability, these headphones feature a unique Lilo & Stitch design. Key functionalities include:

- **Wireless Bluetooth Connection:** Seamless audio streaming from compatible devices using Bluetooth 5.0.
 - **Built-in Microphone:** For clear hands-free calls and voice commands.
 - **Foldable Design:** Enhances portability and simplifies storage.
 - **LED Indicators:** Provide visual cues for battery status and connection.
 - **Extended Playtime:** Enjoy up to 15 hours of audio playback on a single charge.
 - **Sound Isolation:** Helps reduce external noise for an immersive listening experience.
 - **Multi-Mode Functionality:** Supports Bluetooth, FM Radio, and Micro SD card playback.
- 

SETUP

1. Charging the Headphones

Before initial use, ensure the headphones are fully charged. Connect the provided charging cable to the charging port on the headphones and the other end to a standard USB power source (e.g., computer USB port, USB wall adapter).

- The LED indicator will illuminate during the charging process.
- The LED indicator will change its state or turn off once charging is complete, indicating a full battery.
- A full charge provides approximately 15 hours of average battery life.

 


Image: The headphones connected to a charging cable, illustrating the charging process.

2. Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure the headphones are powered off and sufficiently charged.
2. Press and hold the Power button (often integrated with the Play/Pause button) until the LED indicator begins to flash rapidly, signifying that the headphones are in pairing mode.
3. On your desired audio source device (e.g., smartphone, tablet, laptop), navigate to the Bluetooth settings and enable Bluetooth.
4. Search for available devices. The headphones should appear as "iJoy Stitch Headphones" or a similar identifier. Select it to initiate pairing.
5. Upon successful pairing, the LED indicator on the headphones will typically display a steady light or flash slowly.



Image: A graphic illustrating the universal compatibility of the headphones with various Bluetooth-enabled devices, including Apple and Android platforms.

OPERATING INSTRUCTIONS

Controls Overview

The headphones feature a control panel on one of the ear cups for easy management of audio and calls. Familiarize yourself with the button functions:



Image: A detailed diagram illustrating the function of each button on the headphone ear cup, including volume, track control, mode selection, and equalizer.

- **Power On/Off:** Press and hold the central Play/Pause button.
- **Play/Pause Audio:** Press the central Play/Pause button once.
- **Increase Volume:** Press the "Volume +" button.
- **Decrease Volume:** Press the "Volume -" button.
- **Next Track:** Press and hold the "Volume +" button.
- **Previous Track:** Press and hold the "Volume -" button.
- **Answer/End Call:** Press the central Play/Pause button once during an incoming call or to end an active call.

- **Reject Call:** Press and hold the central Play/Pause button during an incoming call.
- **Mode Selector (M):** Press this button to cycle through available modes: Bluetooth, FM Radio, and Micro SD card playback.
- **Equalizer Switcher (EQ):** Press this button to switch between different audio equalizer presets.

Using the Built-in Microphone

The integrated microphone facilitates hands-free communication. When your headphones are connected via Bluetooth to a smartphone, you can manage calls directly through the headphones. Ensure the headphones remain within the Bluetooth range of your device for optimal call quality.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your headphones:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the surfaces of the headphones. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish or internal components.
- **Storage:** When not in use, store the headphones in a cool, dry environment, away from direct sunlight and extreme temperatures. Utilize the foldable design to store them compactly, ideally in a protective case if available.
- **Battery Care:** To maintain optimal battery health, avoid completely draining the battery frequently. Charge the headphones regularly, even if they are not used daily.
- **Water Resistance:** These headphones are not designed to be water resistant. Protect them from exposure to water, moisture, and excessive humidity to prevent damage.



Image: The headphones shown in a folded configuration, highlighting their compact and travel-friendly design.

TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect them to a reliable power source using the charging cable and attempt to power on again after a short charging period.
Cannot pair with a Bluetooth device.	<ul style="list-style-type: none"> • Verify that Bluetooth is enabled on your device. • Confirm the headphones are in pairing mode (indicated by a rapidly flashing LED). • Reduce the distance between the headphones and your device. • On your device, remove or "forget" the headphones from the list of previously paired Bluetooth devices, then attempt the pairing process again.
No sound or low volume output.	<ul style="list-style-type: none"> • Adjust the volume levels on both the headphones and your connected audio source device. • Ensure the headphones are correctly paired and connected to your device. • Verify that the audio source on your device is actively playing.

Problem	Possible Solution
Built-in microphone is not functioning.	<ul style="list-style-type: none">• Confirm that the headphones are actively connected to your device via Bluetooth.• Check your device's audio input settings to ensure the headphones are selected as the primary microphone.

SPECIFICATIONS

Detailed technical specifications for the iJoy Disney Lilo & Stitch Lick Bluetooth Over-Ear Headphones:

Feature	Detail
Brand	iJoy
Model Number	iJoy 810116712472
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.0
Ear Placement	Over Ear
Noise Control	Sound Isolation
Battery Average Life	15 Hours
Built-in Microphone	Yes
Foldable Design	Yes
Additional Features	Built-in Radio Receiver, Micro SD Card Plug-in
Weight	0.29 Kilograms
Frequency Range	20 Hz - 20,000 Hz
Audio Latency	15 Milliseconds

OFFICIAL PRODUCT VIDEO



Video: An official product video showcasing the Disney Lilo & Stitch Bluetooth Headphones, demonstrating features and design. Duration: 1 minute 31 seconds.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product packaging. For technical support or further assistance, please visit the official iJoy website or contact their customer service department. Retain your proof of purchase for any warranty claims.

Manufacturer: iJoy

Brand Store: [Visit the iJoy Store on Amazon](#)

