



[Manuals.plus](#) /

> [Genie](#) /

> Genie GU4TG-FR Universal Series Wireless Garage Door and Gate Opener 4-Button Remote User Manual

Genie GU4TG-FR

Genie GU4TG-FR Universal Series Wireless Garage Door and Gate Opener Remote

User Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Genie GU4TG-FR Universal Series Wireless Garage Door and Gate Opener 4-Button Remote. Designed for broad compatibility, this remote can control various garage door and gate opener brands, including LiftMaster, Chamberlain, Genie, Craftsman, and more.



Image: The Genie GU4TG-FR Universal Series 4-Button Remote shown alongside its retail packaging. The packaging highlights its universal compatibility and key features.

SETUP AND PROGRAMMING

Before using your new remote, it must be programmed to your specific garage door or gate opener. The GU4TG-FR remote features pre-programmed settings and a cloning feature for ease of setup.

Battery Installation

The remote uses a Lithium battery. Ensure the battery is correctly installed with the proper polarity before programming or use. Refer to the battery compartment for polarity markings.

Compatibility and Programming

The Genie GU4TG-FR remote is designed to be compatible with a wide range of garage door and gate openers. Compatibility often depends on the brand, frequency (MHz), and type of learn button or dip switches of your existing opener. For detailed programming instructions and a comprehensive list of compatible models, please refer to the official Genie website or the specific programming guide included with your remote. A general compatibility chart is provided below for reference.



4-Button Universal Remote Compatibility Chart

Brand Name	Specification Notes
Genie®	315/390 MHz, Intellicode® I, 1995-current
	315/390 MHz, Intellicode® II, 2010-2011
	390 MHz, 9 & 12 Switch/2 Position Dip Switch, 1993-current
Overhead Door	315/390 MHz, CodeDodger® I, 1995-current
	315/390 MHz, CodeDodger® II, 2010-2011
	390 MHz, 9 Switch/3 Position Dip Switch, 1993-current
Chamberlain® LiftMaster® Craftsman®	Purple Learn Button, 315 MHz, Security +®, 2006-2014
	Orange/Red Learn Button, 390 MHz, Security +®, 1996-2005
	Yellow Learn Button, 315, 390 MHz, Security +2.0®, 2011-current
	Green Learn Button, 390 MHz, Billion Code®, 1993-1995
	390 MHz, 9 Switch/3 Position Dip Switch <i>*Compatible on remotes with software versions v1.1.4 or higher</i>
Sommer®	310 MHz, Rolling Code
Linear®	318 MHz, Mega Code®
Wayne Dalton®	372.5 MHz, Rolling Code, 1999-current
Ryobi®	372.5 MHz, Rolling Code
Guardian®	303 MHz, Fixed Learn Code
Xtreme® Brand	303 MHz, Fixed Learn Code
Marantec®	315 MHz, Fixed Learn Code
Stanley®	310 MHz, 10 Switch/2 Position Dip Switch <i>*Compatible on remotes with software versions v1.1.8 or higher</i>
FAAC®	433.92 MHz, Rolling Code <i>*Compatible on remotes with software versions v1.1.8 or lower</i>

**Software revision numbers can be found on the back of the universal 4-button transmitter.*

For the most up-to-date and detailed programming instructions, scan the QR code found on the product packaging or visit the official Genie website: [Genie Programming Guide](#).

General programming typically involves placing the remote and your opener into a learning mode, then pressing a button on the remote to establish the connection. Specific steps vary by opener model.

OPERATING THE REMOTE

Once programmed, the Genie GU4TG-FR remote is simple to operate. It features four distinct buttons, allowing you to control up to four different garage door or gate openers, or to assign multiple functions to a single opener if supported.



Image: A close-up view of the Genie GU4TG-FR 4-button universal remote, clearly showing the four distinct black buttons and the "Genie Universal Series" branding.

- **Opening/Closing:** Press the programmed button firmly for approximately one second. The garage door or gate should begin to open or close.
- **Stopping:** Press the same button again while the door or gate is in motion to stop its operation.
- **Range:** For optimal performance, operate the remote within a reasonable range of your garage door or gate opener. Environmental factors and obstructions can affect signal range.



Image: A person's hands holding and operating the Genie GU4TG-FR remote from inside a car, with a garage door visible in the background, demonstrating typical use.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote.

- **Battery Replacement:** If the remote's range decreases significantly or the indicator light (if present) does not illuminate, the Lithium battery may need replacement. Open the battery compartment, remove the old battery, and insert a new one, observing correct polarity.
- **Cleaning:** Clean the remote's exterior with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which can damage the casing or internal components.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

If you encounter issues with your Genie GU4TG-FR remote, consider the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the battery. Replace it if necessary.
 - Ensure the remote is within range of the opener.

- Verify that the remote is correctly programmed to your opener. Re-attempt programming if unsure.

- **Reduced Range:**

- Replace the battery.
- Check for any new sources of radio frequency interference near your garage or gate opener.
- Ensure the antenna on your opener is unobstructed and extended.

- **Intermittent Operation:**

- This could indicate a low battery.
- Ensure there are no physical obstructions blocking the signal path.

If these steps do not resolve the issue, please contact Genie customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Genie
Model Name	GU4TG-FR
Compatible Devices	Garage Door, Gate Opener
Special Features	Infrared, Universal, Wireless
Battery Type	Lithium
Connectivity Technology	Radio Frequency
Max Number of Supported Devices	1 (up to 4 distinct openers/functions with 4 buttons)
Parcel Dimensions	15.3 x 8.7 x 3.4 cm
Weight	50 g

WARRANTY AND SUPPORT

For warranty information, technical support, or any questions not covered in this manual, please contact Genie customer service directly.

Customer Care: 800-354-3643

Website: www.geniecompany.com

Address: The Genie Company, One Door Drive, Mt. Hope, OH 44660

Please have your product model number (GU4TG-FR) available when contacting support.