

[manuals.plus](#) /

› [iJoy](#) /

› [iJoy Disney Nightmare Before Christmas TWS Earbuds User Manual](#)

**iJoy DEB2434**

# **iJoy Disney Nightmare Before Christmas TWS Earbuds**

USER MANUAL - MODEL: DEB2434

---

## **Introduction**

---

Thank you for choosing the iJoy Disney Nightmare Before Christmas Glow in The Dark TWS Earbuds. These wireless Bluetooth earbuds are designed to provide a high-quality audio experience with comfort and convenience. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds.



Image: The iJoy Disney Nightmare Before Christmas Glow in The Dark TWS Earbuds, featuring Jack Skellington and Sally designs, alongside their matching glow-in-the-dark charging case.

## Key Features:

- **True Wireless Stereo (TWS) Design:** Enjoy complete freedom of movement with no wires.
- **Bluetooth 5.0 Connectivity:** Ensures stable connection, faster transmission speed, and low latency.
- **Extended Battery Life:** Up to 30 hours of talk time and 20+ hours of standby time with the portable charging case.
- **IPX8 Waterproof Rating:** Designed to withstand water and sweat, suitable for active lifestyles.
- **Built-in Microphone:** For clear hands-free calls.
- **Comfortable and Secure Fit:** Ergonomically designed to stay in place during various activities.
- **Glow in the Dark Design:** Unique aesthetic featuring Disney's Nightmare Before Christmas characters.

## Setup

### 1. Charging the Earbuds and Case:

Before first use, ensure both the earbuds and the charging case are fully charged.

1. Place the earbuds into their respective slots in the charging case.
2. Connect the charging case to a USB power source using the provided charging cable.
3. The case needs approximately 1.5 hours for a full recharge, and the earbuds require about 1 hour.

# 30 HOURS

O F P L A Y T I M E



Image: The earbuds resting in their charging case, illustrating the extended playtime capability of 30 hours with the case.

# WIRELESS CHARGING

C O M P A T I B L E



©Disney

Image: The charging case highlighted, indicating its compatibility with wireless charging for convenient power replenishment.

## 2. Pairing with Your Device:

The earbuds use Bluetooth 5.0 for a quick and stable connection.

1. Open the charging case and take out both earbuds. The LED lights on both earbuds will flash red and blue, indicating they are in pairing mode.
2. On your device (smartphone, tablet, etc.), go to the Bluetooth settings and turn Bluetooth on.
3. Allow the left and right earbuds to sync with each other automatically.
4. From the list of available Bluetooth devices, select "Disney Earbuds".
5. Once connected, the earbuds will turn on and the LED lights will stop flashing.



Disney  
TIM BURTON'S  
THE NIGHTMARE BEFORE CHRISTMAS

©Disney

Image: A visual guide demonstrating the pairing process, showing the "Disney Earbuds" listed as a connected device on a smartphone's Bluetooth settings screen.

# BLUETOOTH 5.0

## E A S Y C O N N E C T I O N



Image: A graphic highlighting the "Bluetooth 5.0 Easy Connection" feature, showing the earbuds and a smartphone connected wirelessly.

## Operating Instructions

Your iJoy TWS Earbuds feature touch controls for easy management of audio and calls.

### Power On/Off:

- **Power On:** Take the earbuds out of the charging case. They will automatically power on and attempt to connect to the last paired device.
- **Power Off:** Place the earbuds back into the charging case. They will automatically power off and begin charging.

### Music Playback:

- **Play/Pause:** Tap either earbud once.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Volume Up:** Triple-tap the right earbud.
- **Volume Down:** Triple-tap the left earbud.

## Call Management:

- **Answer/End Call:** Tap either earbud once during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.

## Voice Assistant:

- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds.

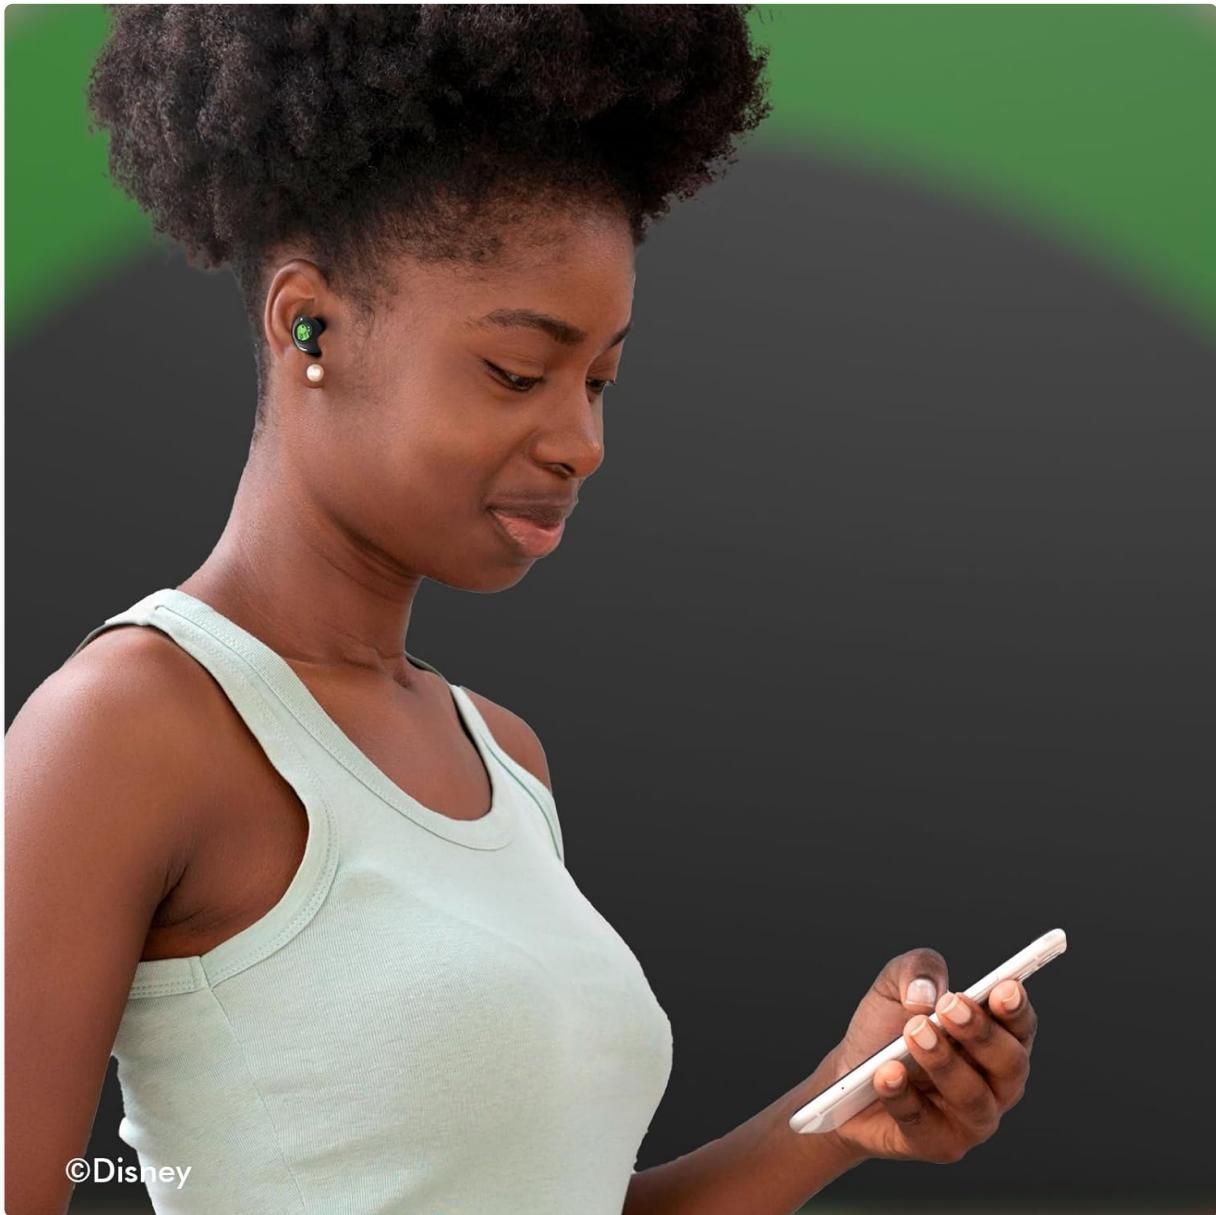


Image: A user enjoying music or a call with the iJoy Disney Nightmare Before Christmas TWS Earbuds, demonstrating their comfortable and discreet fit.

## Maintenance

Proper care will extend the life and performance of your earbuds.

### Cleaning:

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Clean the charging contacts on both the earbuds and the case regularly to ensure proper charging.

### Storage:

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

### Water Resistance (IPX8):

The earbuds are IPX8 waterproof, meaning they are protected against continuous immersion in water beyond 1 meter. While they are highly water-resistant, avoid prolonged exposure to water and ensure they are dry before placing them back in the charging case to prevent damage to the charging contacts.

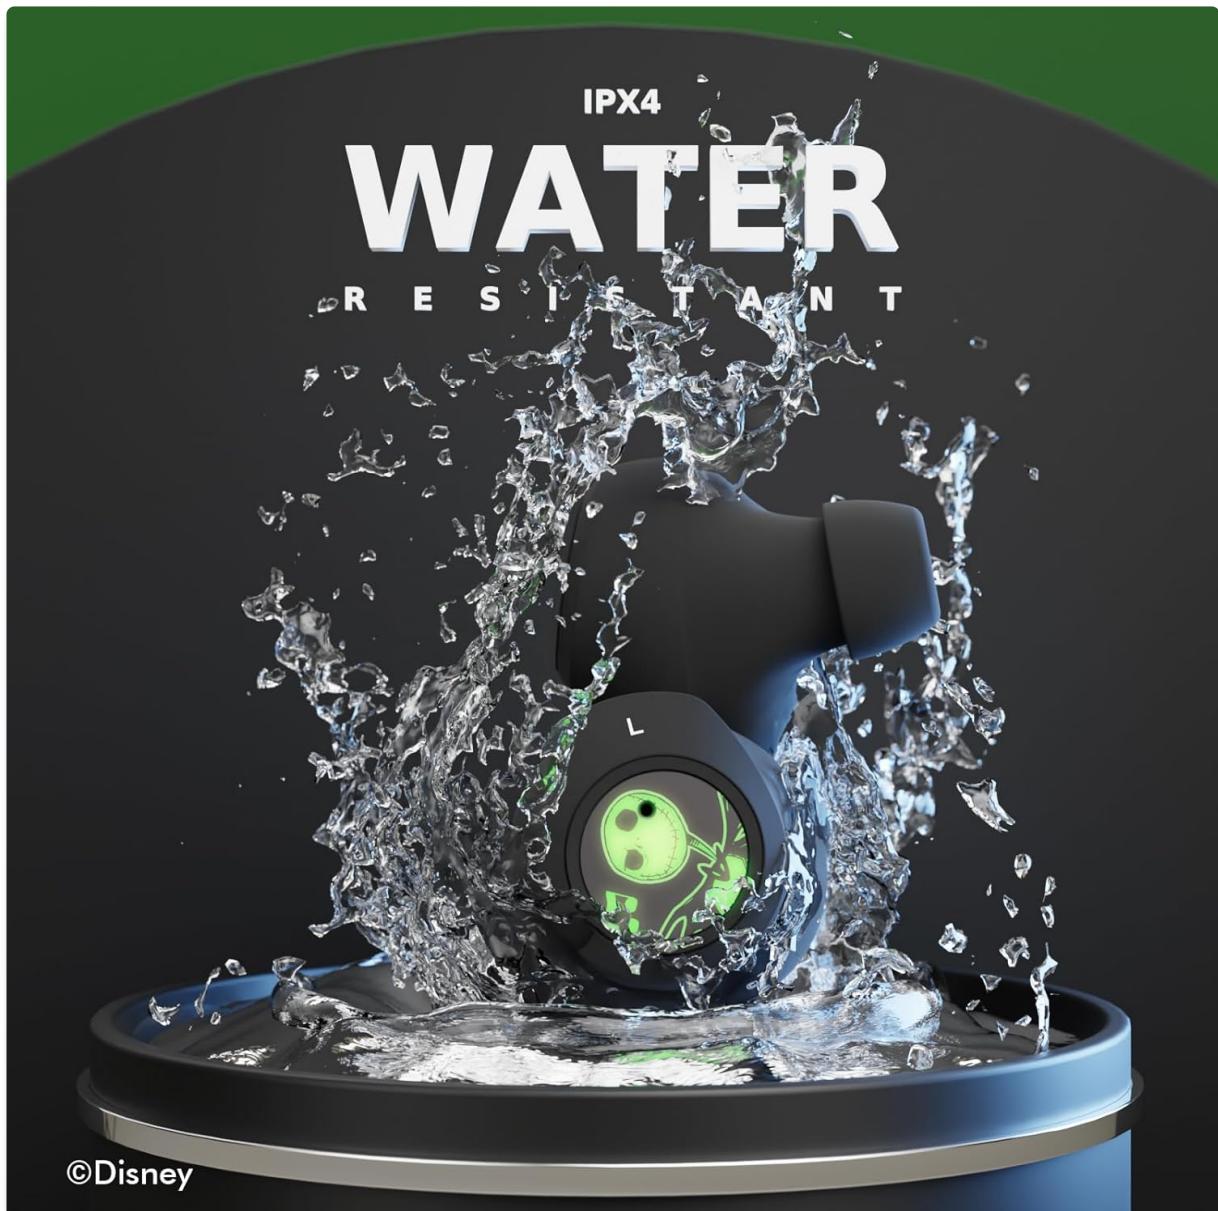


Image: An earbud shown with water splashing, visually representing its water-resistant capabilities.

### Troubleshooting

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Solution
Earbuds won't turn on.	Ensure the earbuds are charged. Place them in the charging case for at least 1 hour.

Problem	Solution
Earbuds won't pair with my device.	<ul style="list-style-type: none"> <li>Make sure Bluetooth is enabled on your device.</li> <li>Ensure earbuds are in pairing mode (flashing red/blue).</li> <li>Forget "Disney Earbuds" from your device's Bluetooth list and try pairing again.</li> <li>Ensure earbuds are within 10 meters of your device.</li> </ul>
Only one earbud is working.	<ul style="list-style-type: none"> <li>Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again to re-sync.</li> <li>Ensure both earbuds are charged.</li> </ul>
Poor sound quality or disconnections.	<ul style="list-style-type: none"> <li>Ensure earbuds are fully charged.</li> <li>Move closer to your device to reduce interference.</li> <li>Clean any debris from the earbud speakers.</li> </ul>
Charging case not charging.	<ul style="list-style-type: none"> <li>Check the charging cable and power adapter.</li> <li>Ensure the charging port on the case is clean and free of debris.</li> </ul>

## Specifications

Feature	Detail
Model Name	DEB210252
Connectivity Technology	Wireless (Bluetooth 5.0)
Bluetooth Range	10 Meters
Battery Life (Earbuds)	Up to 30 Hours (with charging case)
Earbud Charging Time	1 Hour
Case Charging Time	1.5 Hours
Water Resistance Level	IPX8 Waterproof
Control Type	Touch, Media Control
Frequency Range	20 Hz - 20,000 Hz
Item Weight	0.09 Kilograms (3.2 ounces)
Product Dimensions	1.85 x 5.04 x 6.46 inches
UPC	842700197181

## Warranty and Support

iJoy stands behind the quality of its products. Your Disney Nightmare Before Christmas TWS Earbuds come with a **60-Day Free Replacement Guarantee**.



If you experience any issues or have questions not covered in this manual, please contact iJoy customer support for assistance. Refer to the product packaging or the official iJoy website for the most current contact information.

For more information, you can visit the [iJoy Store on Amazon](#).

© 2024 iJoy. All rights reserved. Disney elements © Disney.

This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - DEB2434

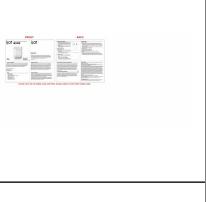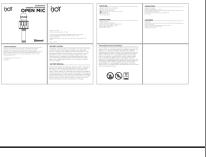	<p><a href="#">IJOY BUDZ Premium True Wireless Earbuds User Manual</a></p> <p>User manual for IJOY BUDZ Premium True Wireless Earbuds, detailing product overview, specifications, pairing, device functions, charging, safety precautions, battery disposal, warranty, and FCC compliance.</p>
	<p><a href="#">IJOY OPEN MIC Bluetooth Karaoke Microphone User Manual</a></p> <p>Comprehensive user manual for the IJOY OPEN MIC Bluetooth Karaoke Microphone, detailing its functions, specifications, wireless and recording instructions, battery safety, and disposal guidelines.</p>
	<p><a href="#">iJoy Muse Foldable Wireless Headset User Manual</a></p> <p>User manual for the iJoy Muse Foldable Wireless Headset, covering setup, operation, features, specifications, and warranty information.</p>
	<p><a href="#">IJOY SPORT Z True Wireless Earbuds User Manual</a></p> <p>Comprehensive user manual for the IJOY SPORT Z True Wireless Earbuds, detailing setup, device functions, specifications, safety guidelines, FCC compliance, and warranty information.</p>
	<p><a href="#">IJOY TUNESMITH Wireless Bluetooth Earbuds User Manual</a></p> <p>User manual for the IJOY TUNESMITH wireless Bluetooth earbuds with charging case, covering device functions, pairing, charging, safety information, and warranty.</p>
	<p><a href="#">IJOY BUDZ Premium True Wireless Earbuds User Manual</a></p> <p>Comprehensive user manual for IJOY BUDZ true wireless Bluetooth earbuds, covering pairing, device functions, charging, safety precautions, warranty, and FCC compliance.</p>