

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY EUR7722X30 Remote Control User Manual for Panasonic SC-HT870, SC-HT878, SA-HT870 DVD Systems

ECONTROLLY EUR7722X30

ECONTROLLY EUR7722X30 Remote Control User Manual

Compatible with Panasonic SC-HT870, SC-HT878, SA-HT870 DVD Systems

INTRODUCTION

This manual provides instructions for the ECONTROLLY EUR7722X30 remote control, designed as a replacement for specific Panasonic DVD home theater systems. This remote control is compatible with Panasonic models SC-HT870, SC-HT878, and SA-HT870. No programming is required; simply install batteries to begin operation.



Replace

Original

Figure 1: Comparison showing the ECONTROLLY EUR7722X30 replacement remote alongside the original Panasonic remote. This illustrates the similar button layout and design.

The ECONTROLLY EUR7722X30 remote control offers a direct replacement solution, maintaining the familiar button layout and functionality of the original remote. Its ergonomic design ensures comfortable handling.

SETUP: BATTERY INSTALLATION

The ECONTROLLY EUR7722X30 remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No additional programming is necessary.





Figure 2: Rear view of the remote control showing the open battery compartment and two AAA batteries. This illustrates the correct orientation for battery insertion.

OPERATING INSTRUCTIONS

This section outlines the primary functions of the remote control buttons. Refer to [Figure 3](#) for button layout.



Figure 3: Detailed front view of the ECONTROLLY EUR722X30 Remote Control, highlighting the arrangement of all functional buttons.

- **Power (Red Button):** Turns the connected Panasonic DVD system ON or OFF.
- **AV System / TV / VCR/AUX / DVD/CD Buttons:** Selects the input source on your connected system.
- **Tuner / Band:** Switches between radio bands (e.g., AM/FM) or tuner modes.
- **Sleep:** Activates the sleep timer function.
- **Subwoofer Level:** Adjusts the output level of the subwoofer.
- **Volume (+/-):** Increases or decreases the audio volume.
- **Muting:** Mutes or unmutes the audio output.
- **Channel (CH +/-):** Changes channels for TV or tuner functions.
- **Numeric Keypad (0-9, +10, ≥10):** Directly enters channel numbers or track numbers.
- **Top Menu / Menu:** Accesses the main menu or disc menu.
- **Direct Navigator:** Provides direct access to recorded content or specific functions.
- **Enter / Arrow Buttons (Up, Down, Left, Right):** Navigates through menus and confirms selections.
- **Return / Display:** Returns to the previous screen or displays on-screen information.
- **Play / Pause / Stop / Skip (Forward/Backward) / Slow/Search:** Standard playback controls for DVD/CD functions.
- **Position / Memory:** Used for setting memory points or navigating specific positions.
- **FL Display / Group:** Controls the front panel display or manages groups of content.
- **Repeat / Play Mode:** Toggles repeat playback modes or changes play modes.
- **Zoom / Audio / Subtitle:** Controls zoom features, audio tracks, or subtitle display.
- **Quick Replay:** Jumps back a few seconds during playback.
- **C.S.M. / C-Focus / Super Band / Mix 2CH / DO.PL.II:** These buttons activate specific audio processing modes or sound enhancements available on your Panasonic system. Refer to your Panasonic system's manual for detailed explanations of these functions.
- **Shift / CH Select:** Used in conjunction with other buttons for secondary functions or direct channel selection.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY EUR7722X30 remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.

- Ensure there are no obstructions between the remote control and the Panasonic DVD system's infrared receiver.
- Confirm that the remote is pointed directly at the system's receiver.
- **Specific Functions Not Working:**
 - Verify that the Panasonic DVD system is powered on and in the correct input mode (e.g., DVD/CD for disc playback).
 - Some advanced functions (like C.S.M. or Mix 2CH) may require specific settings on your Panasonic system. Consult your Panasonic system's original manual for these details.

If problems persist after trying these steps, contact the manufacturer or retailer for further assistance.

SPECIFICATIONS

Model Number	EUR7722X30
Brand	ECONTROLLY
Compatible Devices	Panasonic SC-HT870, SC-HT878, SA-HT870 DVD Systems
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Color	Black
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this ECONTROLLY product is not provided in this manual. Please refer to the product packaging or the retailer's website for warranty details and contact information for customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question