

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROBUD](#) /

› [ROBUD Wooden Laundry Playset Instruction Manual \(Model RB-WCF30\)](#)

ROBUD RB-WCF30

ROBUD Wooden Laundry Playset Instruction Manual

Model: RB-WCF30

INTRODUCTION

Thank you for choosing the ROBUD Wooden Laundry Playset. This realistic pretend play washing machine and dryer set is designed to provide an engaging and educational experience for children aged 3 and up. It encourages imaginative play, helps develop fine motor skills, and introduces basic concepts of household chores in a fun, interactive way. This manual provides essential information for assembly, operation, maintenance, and safety to ensure a safe and enjoyable experience.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult assembly is required. Keep small parts and assembly hardware away from children before and during assembly.
- Always supervise children during play to prevent accidents.
- Inspect the playset regularly for any loose parts, damage, or wear. Discontinue use if any part is broken or damaged.
- Ensure the playset is placed on a stable, flat surface to prevent tipping.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

SPECIFICATION

15.4
Pound

Weight

Washer: 19.6x16x11.8 inches

50x41x30cm

Basket: 15.74x11.4x11.6 inches

40x29x29.5 cm



Image: All included accessories for the ROBUD Wooden Laundry Playset.

- Wooden Washer/Dryer Unit (main playset structure)
- Toy Laundry Detergent Bottle
- Toy Bleach Bottle
- Toy Soap Bar (represented by cubes)
- Toy Iron
- Fabric Dirty Clothes Basket with wooden frame
- Assembly Hardware (screws, dowels, etc. - not pictured, but implied for assembly)
- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly of the ROBUD Wooden Laundry Playset requires adult supervision and adherence to the provided diagrams. Please follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts against the package contents list.
2. **Identify Hardware:** Separate and identify all screws, dowels, and other hardware components.
3. **Assemble Main Unit:** Follow the step-by-step diagrams provided in the separate assembly guide (if included in the physical product packaging) to connect the main wooden panels of the washer/dryer unit. Ensure all connections are secure.
4. **Attach Accessories:** Securely attach the sink, faucet, and ironing board shelf to the main unit as indicated in the diagrams.
5. **Insert Drawer:** Place the "SOAP" drawer into its designated slot.
6. **Final Check:** Once assembled, ensure all screws are tightened and the playset is stable. No loose parts should be present.



Image: The ROBUD Wooden Laundry Playset fully assembled, ready for play.

OPERATING INSTRUCTIONS (PRETEND PLAY)

This playset is designed for imaginative play. Here's how to use its various features:

UNIQUE AND ADORABLE DESIGN



Realistic Knobs



Rotatable Colorful Beads



Luxurious Gold Faucet



Mini Lovely Iron

Image: Detailed view of the playset's interactive elements.

1. Washing Machine:

- Open the front-loading door to place pretend clothes inside.
- Turn the realistic control knobs to select a wash cycle. The knobs provide tactile feedback.
- Observe the colorful beads inside the washer window as they mimic the rolling motion of a real washing machine when the drum is manually turned.
- Use the toy detergent, bleach, and soap from the accessories set for a complete pretend wash cycle. The "SOAP" drawer can be pulled out.

2. Sink and Faucet:

- The integrated sink allows for pretend hand washing of clothes or other items.
- The golden faucet and knobs can be turned for realistic play.

3. Ironing Station:

- Utilize the pull-out ironing board shelf and the toy iron to press pretend clothes smooth after washing.

4. Laundry Basket:

- Use the fabric laundry basket to collect dirty clothes or store clean, folded items.

CHTE MULTI-FUNCTIONAL WASHER



Image: Various pretend play activities with the laundry playset.

MAINTENANCE

Proper care will extend the life of your ROBUD Wooden Laundry Playset:

- **Cleaning:** Wipe down all wooden surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Drying:** Ensure all parts are thoroughly dried after cleaning to prevent warping or damage to the wood.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, which can cause the wood to crack or fade.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Fabric Basket:** The fabric laundry basket can be spot cleaned or hand washed with mild soap and air-dried.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Playset feels wobbly after assembly.	Screws or connections are not fully tightened.	Carefully re-tighten all assembly screws. Ensure the playset is on a level surface.
Missing parts or damaged components upon arrival.	Manufacturing defect or shipping damage.	Do not attempt to assemble. Contact ROBUD customer support immediately with your purchase details.
Wooden parts appear warped or cracked.	Exposure to excessive moisture, dryness, or temperature changes.	Ensure the playset is stored in a stable, dry environment. If damage is significant, contact customer support.
Knobs or doors are stiff.	Minor friction or dust accumulation.	Wipe clean. Avoid forcing movement. If persistent, contact customer support.

SPECIFICATIONS

LAUNDRY AND IRONING



Dirty Laundry Storage



Hand Wash



Machine Wash



Ironing

Image: Product dimensions and weight overview.

- **Model Number:** RB-WCF30
- **Product Dimensions (Washer Unit):** 20.08 x 11.81 x 22.05 inches (50 x 41 x 30 cm)
- **Product Dimensions (Basket):** 15.74 x 11.4 x 11.6 inches (40 x 29 x 29.5 cm)
- **Item Weight:** 16.54 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Materials:** Wood, Plastic (for beads, sink, faucet)

WARRANTY AND SUPPORT

ROBUD is committed to providing high-quality products. While specific warranty details are not provided in this manual, we recommend retaining your proof of purchase.

For any questions, concerns, or assistance with your ROBUD Wooden Laundry Playset, please contact ROBUD customer support through the retailer where the product was purchased or visit the official ROBUD website for contact information.

