

ECONTROLLY RC813-FMB1

ECONTROLLY RC813-FMB1 Voice Remote Control User Manual

Model: RC813-FMB1

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RC813-FMB1 Voice Remote Control. This remote is designed as a replacement for various TCL TV models, offering full functionality including intelligent voice control and quick access shortcut buttons. Please read this manual carefully to ensure proper setup and operation of your new remote control.

2. COMPATIBILITY

The ECONTROLLY RC813-FMB1 Voice Remote Control is compatible with a wide range of TCL TV models, including but not limited to:

- RC813-FMB1, RC813, FMB1, RC902V
- 32S370G, 40S370G, 43S370G, 43S446, 43S450G, 43S470G
- 50S45G, 50S446, 50S450G, 50S470G, 50S546, 50Q550G
- 55S446, 55S450G, 55S470G, 55S546, 55Q550G, 55Q650G, 55Q670G, 55Q750G, 55R646
- 58S450G, 58S470G
- 65S446, 65S450G, 65S470G, 65S546, 65Q550G, 65Q650G, 65Q670G, 65Q750G, 65QM850G, 65R646
- 70S470G
- 75S446, 75S450G, 75S470G, 75S546, 75Q650G, 75Q670G, 75Q750G, 75QM850G, 75R646
- 85S446, 85S450G, 85S470G, 85Q650G, 85Q670G, 85Q750G, 85QM850G
- 98S550G, 98QM850G

This remote is designed to replace your original remote and may not require programming for basic functions, but pairing is necessary for voice control.

3. KEY FEATURES

- **Intelligent Voice Control:** Perform operations and search for content using voice commands.
- **Quick Access Shortcut Buttons:** Dedicated buttons for popular streaming services and TV functions, allowing for

instant access.

- **No Programming Required:** Basic functions work immediately upon battery installation.

4. SETUP INSTRUCTIONS

4.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Rear view of the ECONTROLLY RC813-FMB1 Voice Remote Control with the battery compartment cover removed, revealing the slots for two AAA batteries.

4.2. Pairing the Remote Control (for Voice Functionality)

For the intelligent voice function to work, the remote control must be paired with your TCL TV. The exact pairing process may vary slightly depending on your TV model. Generally, follow these steps:

1. Ensure your TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **OK** button and the **Home** button simultaneously for a few seconds until a pairing message appears on your TV screen.
4. Release the buttons once the pairing message is displayed.
5. Follow any on-screen instructions to complete the pairing process.





Front view of the ECONTROLLY RC813-FMB1 Voice Remote Control with the microphone button highlighted, indicating its function for voice commands.

5. OPERATING INSTRUCTIONS





Front view of the ECONTROLLY RC813-FMB1 Voice Remote Control, illustrating the layout of all buttons.

5.1. Basic Navigation

- **Power Button:** Turns the TV on or off.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and content.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Volume Up/Down:** Adjusts the TV's volume.
- **Channel Up/Down:** Changes TV channels.

5.2. Using Voice Control

After successful pairing, press the **Microphone** button on the remote. Speak clearly into the remote to issue commands or search for content. The TV will process your voice input, allowing you to quickly find programs, adjust settings, or launch applications.

5.3. Using Shortcut Buttons

The remote features dedicated shortcut buttons for popular streaming services and TV functions. Simply press the corresponding button to instantly launch the application or feature:

- **Netflix**
- **Prime Video**
- **YouTube**
- **TV (or similar dedicated TV app button)**

6. MAINTENANCE

6.1. Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Refer to Section 4.1 for detailed battery installation instructions. Always use new AAA alkaline batteries for optimal performance.

6.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote.

7. TROUBLESHOOTING

- **Remote Not Responding:**

- Ensure batteries are correctly installed and not depleted. Replace with new AAA batteries if necessary.
- Check for any obstructions between the remote and the TV's infrared receiver.
- If the remote is paired, try re-pairing it with the TV (refer to Section 4.2).

- **Voice Control Not Working:**

- Confirm that the remote is successfully paired with your TV (refer to Section 4.2).
- Ensure there are no obstructions blocking the microphone on the remote.
- Speak clearly and at a normal volume.
- Check your TV's settings to ensure voice control is enabled.

- **Shortcut Buttons Not Launching Apps:**

- Ensure your TV is connected to the internet.
- Verify that the respective applications are installed and updated on your TV.

8. SPECIFICATIONS

Model Number	RC813-FMB1
Brand	ECONTROLLY
Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	2.3 ounces (65 grams)
Power Source	2 x AAA Alkaline Batteries (not included)
Special Feature	Voice Search
Color	Black

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the ECONTROLLY customer service directly. Contact details are typically available on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question