

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Eueiriup](#) /
- › [Eueiriup 16-inch Electric Fireplace Heater Instruction Manual](#)

Eueiriup HKFS002

Eueiriup 16-inch Electric Fireplace Heater

MODEL: HKFS002

Instruction Manual

Introduction

Thank you for purchasing the Eueiriup 16-inch Electric Fireplace Heater. This portable, freestanding electric fireplace is designed to provide supplemental heat and a realistic flame effect for indoor spaces such as living rooms, study rooms, and bedrooms. Please read this manual thoroughly before operation to ensure safe and efficient use of your appliance.



Figure 1: Front view of the Eueiriup 16-inch Electric Fireplace Heater.



Figure 2: The electric fireplace heater positioned in a living room.

Important Safety Information

WARNING: Read all instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater, and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Connect to properly grounded outlets only.
- The exterior of the fireplace heater is designed to be cool-to-the-touch.
- Features overheat protection that automatically shuts off the unit if it reaches a critical temperature.

Safe to Touch

Realistic Flame & Firewood Effect



Low Noise



Overheating Protection



Warning: Assemble the legs before using

Figure 3: The fireplace heater features a cool-to-touch exterior and overheating protection for safety.

Package Contents

Upon opening the package, please ensure all components are present and undamaged. The package should contain:

- 1 x Eueiriup 16-inch Electric Fireplace Heater Unit
- 4 x Legs for the fireplace heater
- 1 x Instruction Manual (this document)

Setup

The Eueiriup Electric Fireplace Heater requires minimal assembly. Follow these steps for initial setup:

1. Carefully remove the fireplace heater unit and all components from the packaging.
2. Place the main fireplace unit upside down on a soft, clean surface to prevent scratching.
3. Attach the four legs to the designated mounting points on the bottom of the fireplace unit. Ensure they are securely fastened.
4. Carefully turn the assembled fireplace heater upright and place it on a firm, level surface.
5. Ensure the fireplace is placed away from curtains, furniture, and other combustible materials, maintaining at least 3 feet (0.9 meters) clearance.
6. Plug the power cord into a grounded 120V AC outlet.

Operating Instructions

The control panel for the fireplace heater is located behind the front door. Open the door to access the controls.

Simple Control Panel



Figure 4: The simple control panel for the fireplace heater.

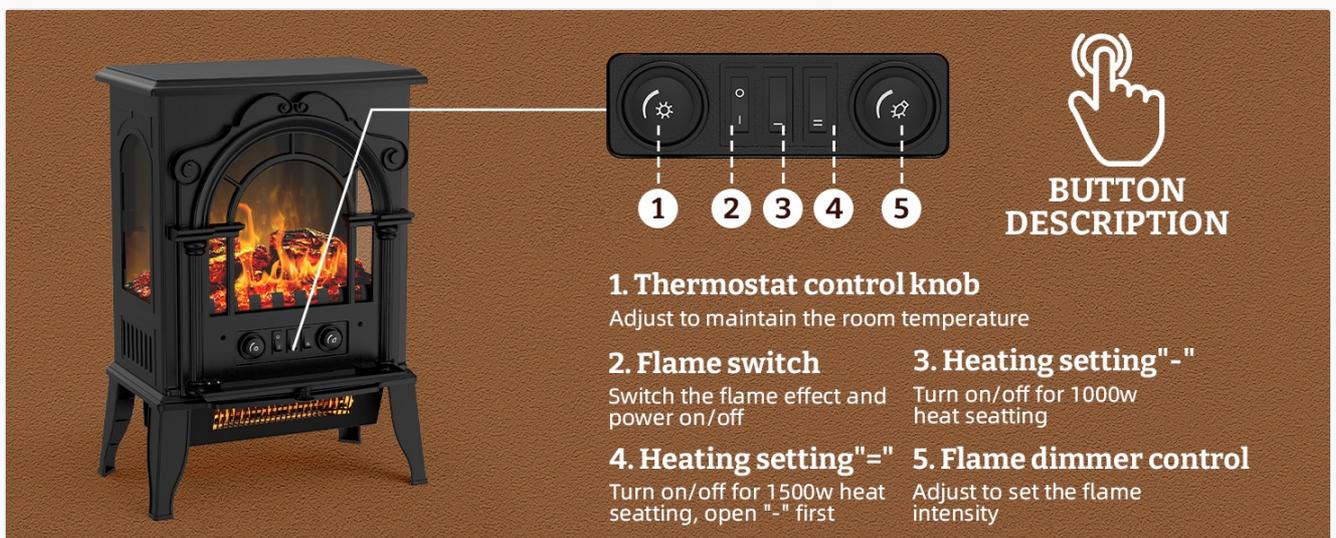


Figure 5: Detailed button description for the control panel.

1. **Main Power/Flame Switch (2):** Press this switch to turn the unit ON/OFF and activate the 3D flame effect.

The flame effect can be used independently without heat.

2. **Thermostat Control Knob (1):** Rotate this knob to adjust the desired room temperature. The heater will cycle on and off to maintain the set temperature.
3. **Heat Setting 'I' (3):** Press this switch to activate the 1000W heat setting.
4. **Heat Setting 'II' (4):** Press this switch to activate the 1500W heat setting. For 1500W operation, ensure the 'I' (1000W) switch is also engaged.
5. **Flame Dimmer Control Knob (5):** Rotate this knob to adjust the intensity and brightness of the flame effect.

Realistic 3D Flame Effect

Can be used without heater



Figure 6: The realistic 3D flame effect can be enjoyed with or without heat.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your electric fireplace heater.

- **Cleaning:** Always unplug the unit from the power outlet and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners, sprays, or harsh chemicals, as these may damage the finish.

- **Dust Removal:** Periodically use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust vents.
- **Storage:** If storing the unit for an extended period, unplug it and store it in a cool, dry place, preferably in its original packaging.

Troubleshooting

If you experience issues with your fireplace heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power to the unit.	Ensure the power cord is securely plugged into a grounded outlet. Check the circuit breaker.
No heat output.	Heat settings not activated or thermostat set too low.	Ensure the 1000W or 1500W heat switches are engaged. Adjust the thermostat control knob to a higher setting.
Unit suddenly turns off.	Overheat protection activated.	Unplug the unit and allow it to cool for at least 10-15 minutes. Check for any obstructions around the air vents. Re-plug and restart.
Flame effect not working.	Main power/flame switch not engaged.	Ensure the main power/flame switch is in the ON position.

Specifications

Technical specifications for the Eueiriup 16-inch Electric Fireplace Heater (Model: HKFS002):



Figure 7: Product dimensions.

Feature	Detail
Brand	Eueiriup
Model Name	fireplace heater (HKFS002)
Power Source	Corded Electric
Product Dimensions (D x W x H)	15.35" x 9.45" x 22.05"
Material	Plastic
Installation Type	Freestanding
Heat Output	1000W / 1500W (Max 5100 BTUs)
Special Feature	Adjustable Flame, Overheat Protection
Style	Vintage

Feature	Detail
Color	Black
Room Type	Bedroom, Living Room, Study
Ventilation Type	Vent Free
Heating Coverage	400-500 square feet
Item Weight	12.36 Pounds
Burner Type	Quartz
UPC	602835655440

Warranty Information

This Eueiriup Electric Fireplace Heater comes with a limited warranty. For specific details regarding the warranty period, coverage, and claims process, please refer to the warranty card included with your product or contact the manufacturer directly.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Eueiriup customer support. Refer to the product packaging or the manufacturer's official website for the most current contact information.