

ECOTINY HW1074BK

ECOTINY TV Easel Tripod Stand User Manual

Model: HW1074BK

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ECOTINY TV Easel Tripod Stand, model HW1074BK. This stand is designed to securely hold LCD, LED, and OLED televisions ranging from 43 to 65 inches. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 35 kg (77 lbs) for the TV and 10 kg (22 lbs) for the wooden shelf.
- **TV Size:** Ensure your TV's size is within the recommended range of 43-65 inches.
- **VESA Compatibility:** Verify that your TV's VESA mounting pattern is compatible with the stand (200x200, 300x200, 400x200, 300x300, 400x300, 400x400 mm).
- **Anti-Tip Cord:** Always install the included anti-tip cord to prevent accidental tipping, especially in households with children or pets.
- **Stable Surface:** Place the stand on a flat, stable, and level surface.
- **Assembly:** Follow all assembly instructions carefully. It is recommended to have two people for certain assembly steps, particularly when mounting the TV.
- **Cable Management:** Utilize the integrated cable management system to prevent tripping hazards and maintain a tidy setup.
- **Movement:** While the stand is portable, exercise caution when moving it with a TV attached. Ensure the TV is securely fastened and move slowly to prevent tipping.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are


missing or damaged, contact customer support.

- Tripod Legs (3 pieces: 1 short, 2 long)
- Central Support Pole
- TV Mounting Brackets (2 pieces)
- Wooden Shelf
- Mounting Hardware Kit (screws, washers, spacers for TV and stand assembly)
- Anti-Tip Cord
- Assembly Tools (e.g., Allen wrench, screwdriver - may vary)


4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. Refer to the diagrams for visual guidance.

Dimensions (in)

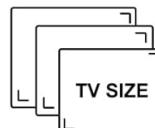

43"- 65"

 

**200×200, 300×200
400×200, 300×300
400×300, 400×400**



Weight Capacity

TV Stand: 35kg/77lbs
Shelf: 10kg/22lbs


* NOTE: Before making your purchase, kindly ensure that the SIZE, WEIGHT, and VESA specifications of your TV align with this mount for compatibility.

Image: Easy Installation Steps for the ECOTINY TV Easel Tripod Stand.

1. **Attach Legs:** Secure the three tripod legs to the central base plate. Ensure the short leg and two long legs are correctly positioned and tightened.
2. **Secure Locking Collar:** Slide the central support pole into the base. Secure the locking collar to fix the pole's position and ensure stability.

- 3. Attach Brackets to TV:** Carefully lay your TV face down on a soft, clean surface. Attach the two TV mounting brackets to the back of your television using the appropriate screws, washers, and spacers from the hardware kit. Ensure they are securely fastened and aligned with your TV's VESA pattern.
- 4. Mount & Secure the TV:** With assistance, lift the TV and hook the attached brackets onto the central support pole of the stand. Adjust the TV to your desired height and secure it in place using the provided locking mechanisms. Double-check that the TV is firmly attached and level.
- 5. Install Anti-Tip Cord:** Attach one end of the anti-tip cord to the stand and the other end to a wall stud or appropriate anchor point to prevent accidental tipping.
- 6. Cable Management:** Route all TV and device cables through the integrated cable management channels within the central support pole and legs to maintain a clean and organized appearance.

Easy Installation

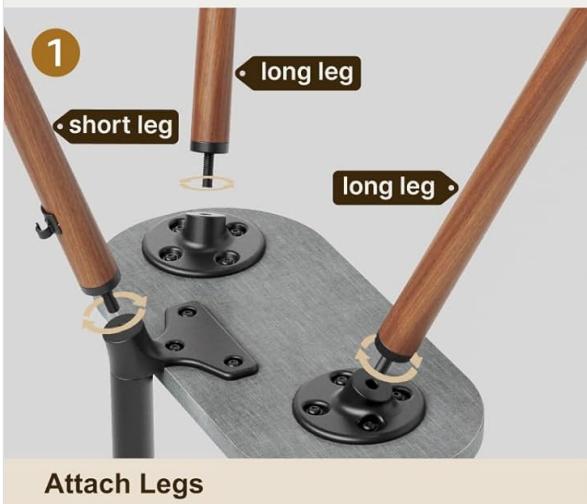


Attach Legs



Secure Locking Collar



Attach Brackets to TV

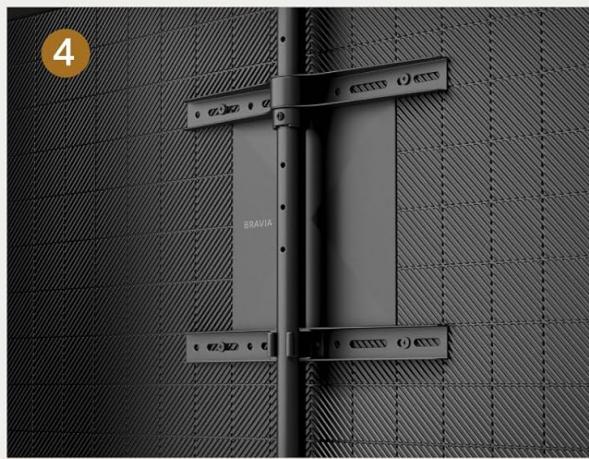

Mount & Secure the TV

Image: Features highlighting the stand's construction and cable management.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The stand allows for ergonomic height adjustment to position your TV at an optimal viewing level. To adjust the height, loosen the locking mechanism on the central support pole, carefully slide the TV up or down to

the desired position, and then securely tighten the locking mechanism. The maximum height is approximately 43.9 inches (111.5 cm) and the minimum is 32.1 inches (81.5 cm) from the floor to the center of the TV mounting point.



Image: Height Adjustment Range.

5.2 Swivel Function

The TV stand features a swivel function, allowing the television to pivot up to ± 45 degrees left or right. This enables you to adjust the viewing angle to reduce glare and optimize visibility from different positions in the room. Gently rotate the TV to the desired angle.

Eye Protection



Image: Swivel Function for Eye Protection.

5.3 Wooden Storage Shelf

The integrated wooden shelf provides a convenient space for media devices such as sound systems, DVD players, or gaming consoles. Ensure the total weight on the shelf does not exceed 10 kg (22 lbs).

6. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain stability.
- **Wood Care:** The wooden components are FSC-certified. Avoid prolonged exposure to direct sunlight or extreme humidity to preserve the wood's condition.

7. TROUBLESHOOTING

- **Stand is Unstable:**

Solution: Ensure all screws are tightened. Verify the stand is on a level surface. Recheck the assembly steps to confirm correct installation of legs and central pole.

- **TV Does Not Fit Brackets:**

Solution: Confirm your TV's VESA mounting pattern matches the stand's compatibility (200x200, 300x200, 400x200, 300x300, 400x300, 400x400 mm). Ensure you are using the correct screws and spacers for your TV model.

- **Difficulty Adjusting Height/Swivel:**

Solution: Ensure the locking mechanisms for height adjustment are sufficiently loosened before attempting to move the TV. Do not force movement; if resistance is met, recheck for obstructions or overtightened components.

- **Cables are Messy:**

Solution: Utilize the integrated cable management channels. Secure cables with ties if necessary to keep them tidy and out of sight.


8. SPECIFICATIONS



Bedroom



Living Room

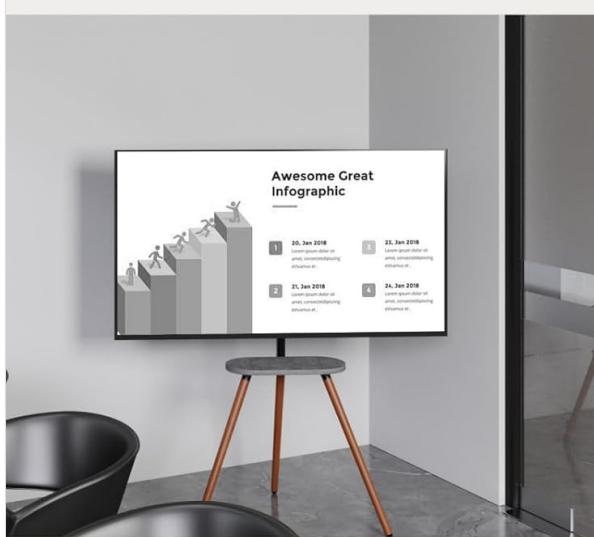

Meeting Room



Public Area

Image: Product Dimensions and Specifications.

Feature	Specification
---------	---------------

Model Number	HW1074BK
Compatible TV Sizes	43 - 65 inches (114 - 165 cm)
VESA Compatibility	200x200, 300x200, 400x200, 300x300, 400x300, 400x400 mm
TV Weight Capacity	35 kg (77 lbs)
Shelf Weight Capacity	10 kg (22 lbs)
Material	High-quality Metal, FSC-Certified Wood
Movement Type	Swivel (± 45 degrees), Height Adjustable
Color	Black + Walnut



9. WARRANTY INFORMATION

Warranty information for this product is not explicitly specified in the provided details. Please refer to the product packaging or contact the retailer/manufacturer for specific warranty terms and conditions.

10. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your ECOTINY TV Easel Tripod Stand, please contact your point of purchase or refer to the manufacturer's official website for contact information. Specific customer support details are not provided in this manual.

Related Documents - HW1074BK

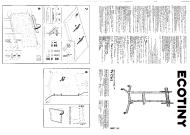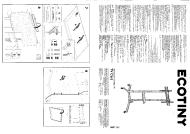	<u>ECOTINY TV Cart Assembly Instructions and User Guide</u> Detailed assembly instructions and guide for the ECOTINY TV Cart, model HW1074BK, including parts list, hardware, and step-by-step assembly process.
	<u>ECOTINY TV Cart Assembly Instructions and User Guide</u> Detailed assembly instructions and guide for the ECOTINY TV Cart, model HW1074BK, including parts list, hardware, and step-by-step assembly process.