

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [ECOTINY](#) /

> [ECOTINY Tripod Easel TV Stand \(Model HW1074WH\) Instruction Manual](#)

ECOTINY HW1074WH

ECOTINY Tripod Easel TV Stand (Model HW1074WH) Instruction Manual

For 43-65 Inch TVs

INTRODUCTION

Thank you for choosing the ECOTINY Tripod Easel TV Stand. This manual provides detailed instructions for the safe and efficient assembly, operation, and maintenance of your new TV stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or defective.
- This TV stand is designed to support TVs weighing up to 77 lbs (35 kg). Do not exceed this weight limit.
- The stand has passed rigorous UL/TUV laboratory testing at three times its rated load capacity, ensuring structural integrity.
- An anti-tip pull cord is included to secure the TV stand to the wall, preventing accidental tipping and ensuring safety, especially in households with children or pets. Always use the anti-tip feature.
- Place the TV stand on a stable, level surface to prevent imbalance.
- Keep children and pets away from the assembly area.

SPECIFICATIONS

| Feature | Detail |
|-----------------------|--------------|
| Brand | ECOTINY |
| Model Number | HW1074WH |
| TV Size Compatibility | 43-65 inches |

| | |
|---------------------|--------------------------------------------------------|
| VESA Compatibility | 200x200, 300x200, 400x200, 300x300, 400x300, 400x400mm |
| Maximum TV Weight | 77 lbs (35 kg) |
| Shelf Load Capacity | 22 lbs (10 kg) |
| Product Dimensions | 28.9 x 20 x 53.7 inches |
| Item Weight | 12.12 pounds |
| Material | Metal, FSC-Certified Wood |
| Movement Type | Adjustable Swivel (± 45 degrees) |
| Height Adjustment | 7-stage ergonomic height adjustment |

SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your ECOTINY Tripod Easel TV Stand.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process for the ECOTINY Tripod Easel TV Stand, including attaching legs, securing the locking collar, attaching brackets to the TV, mounting the TV, and attaching safety kits.

1. 1. Attach Legs

Carefully attach the three wooden legs to the base of the stand. Ensure they are securely fastened according to the provided hardware. The shorter leg should be positioned at the back.

Easy Installation




Attach Legs



Secure Locking Collar



Attach Brackets to TV

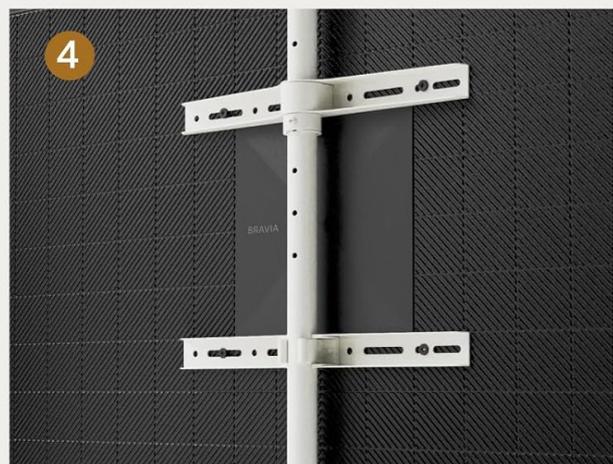

Mount & Secure the TV

Image: A visual guide illustrating the steps for attaching the wooden legs to the stand's base, securing the central pole, and mounting the TV brackets.

2. **Secure Locking Collar**

Insert the main vertical pole into the base and secure it with the locking collar. Tighten the screws to ensure the pole is stable and upright.

3. **Attach Brackets to TV**

Mount the TV brackets to the back of your television using the appropriate screws and spacers provided. Ensure the VESA pattern matches your TV's specifications. The brackets are designed with one closed section and one open section for easy mounting onto the stand's pole.

4. **Mount & Secure the TV**

Carefully lift your TV and hook the attached brackets onto the vertical pole of the stand. The brackets will slide down and lock into place. Secure the TV by tightening any additional locking mechanisms on the brackets.

5. **Attach Safety Kits**

For enhanced safety, attach the anti-tip pull cord from the TV stand to a wall stud or other secure anchor

point in your wall. This prevents the TV from accidentally tipping over.

OPERATING INSTRUCTIONS

Height Adjustment

The TV stand features a 7-stage ergonomic height adjustment function. To adjust the height, loosen the securing screws on the vertical pole, slide the TV up or down to your desired viewing level, and then re-tighten the screws firmly. This allows you to set the TV at the correct level for your eyes, preventing neck strain.



Image: This image displays the height adjustment capabilities of the stand, highlighting the minimum (32.1 inches) and maximum (43.9 inches) viewing heights for optimal comfort.

Swivel Function

The TV bracket allows for a ± 45 -degree left and right swivel. Gently push the TV to rotate it to your preferred viewing angle. This feature helps prevent light reflections and provides flexible viewing options from different areas of the room.

Eye Protection



Image: A visual representation of the TV stand's swivel feature, demonstrating the $\pm 45^\circ$ rotation for flexible viewing angles and eye protection.

Wooden Storage Tray

The integrated wooden storage tray has a maximum load capacity of 22 lbs (10 kg). Use it to place your sound system, DVD player, gaming console, remote controls, or other entertainment accessories. This helps keep your living space organized.

Cable Management

Utilize the two hidden cable management clips on the rear leg to route and organize your TV and accessory cables. This keeps wires tidy and out of sight, contributing to a clean and minimalist aesthetic.



Image: This image details the stand's features, including the quality of the wooden legs, the integrated cable management system, and the robust construction for stability.

MAINTENANCE

- Regularly check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- Clean the stand with a soft, dry cloth. Avoid using abrasive cleaners or solvents that may damage the finish.
- Keep the stand away from direct sunlight and excessive moisture to preserve the wood and metal components.

TROUBLESHOOTING

- **TV feels unstable:** Ensure all screws are tightened, especially those connecting the brackets to the TV and the pole to the base. Verify the anti-tip cord is securely fastened to the wall.
- **Difficulty adjusting height/swivel:** Check for any obstructions. Ensure securing screws are sufficiently loosened before attempting adjustments, and re-tighten them afterward.

- **Cables are messy:** Utilize the integrated cable management clips to route and secure all cables neatly along the stand's pole.

WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your ECOTINY Tripod Easel TV Stand, please refer to the contact information provided with your purchase or visit the official ECOTINY website. Please have your model number (HW1074WH) ready when contacting support.