

[Manuals.plus](#) /

› [GUESS](#) /

› GUESS Men's 44mm Watch GW0703G3 Instruction Manual

GUESS GW0703G3

GUESS Men's 44mm Watch GW0703G3 Instruction Manual

Model: GW0703G3

INTRODUCTION

This manual provides essential information for the proper use and care of your GUESS Men's 44mm Watch, model GW0703G3. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image: Front view of the GUESS Men's 44mm Watch GW0703G3, showcasing its two-tone bracelet, blue dial with Roman numerals, and multi-function sub-dials.

FEATURES

- **Case Size:** 44mm two-tone case.
- **Bracelet:** 8-inch two-tone bracelet.
- **Dial:** Blue dial with multi-function chrono-look sub-dials.
- **Crystal:** Mineral glass lens.
- **Water Resistance:** Up to 50 meters (165 feet).

SETUP

1. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for date adjustment, or position 3 for time adjustment.
2. **Adjust the date:** In position 2, turn the crown clockwise or counter-clockwise to set the correct date.
3. **Adjust the time:** In position 3, turn the crown to move the hands clockwise until the correct time is displayed. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date change mechanism.
4. **Push in the crown:** Once set, push the crown back into position 1 (normal operating position) to start the watch.



Image: Side profile of the watch, highlighting the crown and pushers used for setting time and date.

2. Adjusting the Bracelet

The two-tone bracelet can be adjusted by adding or removing links. This procedure typically requires specialized tools and is best performed by a professional jeweler or watch repair service to avoid damage.

OPERATING YOUR WATCH

Water Resistance

Your GUESS watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water intrusion.

- **50M (5 ATM):** Suitable for showering, bathing, and swimming in shallow water. Not suitable for diving.
- **Important:** Water resistance is not a permanent condition and may decrease over time due to wear and tear or accidental impact. Always ensure the crown is fully pushed in before exposing the watch to water.

Multi-Function Dials

The watch features multi-function sub-dials that typically display day of the week, date, and 24-hour time. These are usually synchronized with the main time setting or can be adjusted via the pushers on the side of the case, if applicable. Refer to the specific movement instructions if more detailed adjustment is required.



Image: The watch worn on a wrist, providing a clear view of the blue dial and the intricate details of the two-tone bracelet.

MAINTENANCE

- **Cleaning:** Wipe the watch case and bracelet regularly with a soft, dry cloth. For water-resistant models, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Battery Replacement:** This watch uses a product-specific battery. When the battery runs low, the watch may stop or the second hand may jump in intervals. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

- **Storage:** When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Avoid Shocks:** While durable, avoid dropping your watch or subjecting it to strong impacts, which can damage the internal movement or exterior components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery (professional service recommended).
Condensation inside the crystal.	Water intrusion, sudden temperature change.	Seek professional service immediately to prevent damage. Avoid extreme temperature changes.
Date or day not changing correctly.	Incorrect time setting (AM/PM).	Re-set the time, ensuring the 24-hour cycle is correct.

SPECIFICATIONS

- **Model Number:** GW0703G3
- **Product Dimensions:** 7.48 x 1.73 x 0.43 inches
- **Item Weight:** 6.17 ounces
- **Material:** Two-tone metal (case and bracelet)
- **Movement:** Quartz
- **Battery:** 1 Product Specific battery (included)
- **Manufacturer:** GUESS

OFFICIAL PRODUCT VIDEOS

GUESS Men's Quartz Watch with Stainless Steel Strap, Gunmetal, 21.5 (Model: U0668G9)

Your browser does not support the video tag.

Video: A detailed product video showcasing a GUESS Men's Quartz Watch with a stainless steel strap in gunmetal. While not the exact model GW0703G3, this video provides a general overview of GUESS watch features and design, which may be helpful for understanding the brand's quality and style.

WARRANTY AND SUPPORT

GUESS watches typically come with a manufacturer's warranty covering defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official GUESS Watches website. For support, contact GUESS customer service through their official channels. You can visit the official GUESS Store on Amazon for more information:[GUESS Watches Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRDXZTKP>

More documents and user manuals: **<https://manuals.plus/>**