

[Manuals.plus](#) /

› [Denon](#) /

› Denon Home-SUB Subwoofer Instruction Manual

Denon DENONHOMESUB

Denon Home-SUB Subwoofer Instruction Manual

Model: DENONHOMESUB | Brand: Denon

1. INTRODUCTION

The Denon Home-SUB Subwoofer is designed to enhance your home audio experience by adding deep, thunderous bass to your movies and music. Featuring HEOS Built-In technology, it allows for seamless wireless integration with any Denon Home sound bar or Denon Home speaker, creating a true 5.1 home theater sound system without the need for speaker wires.



Figure 1: Front view of the Denon Home-SUB Subwoofer.

2. WHAT'S IN THE BOX

- Denon Home Subwoofer
- Quick Start Guide
- AC power cord
- Safety instructions

3. SETUP

3.1 Placement

For optimal bass performance, place the Denon Home-SUB in a corner or near a wall. Experiment with different locations to find the best sound balance for your room. Ensure the subwoofer is placed on a stable, flat surface.



Figure 2: Example placement of the Denon Home-SUB Subwoofer in a room.

3.2 Connections

Connect the supplied AC power cord to the subwoofer's power input and then to a wall outlet. The Denon Home-SUB connects wirelessly to your Denon Home sound bar or speakers via HEOS Built-In technology, eliminating the need for audio cables between devices.



Figure 3: Rear panel of the Denon Home-SUB Subwoofer showing power and input connections.

3.3 Initial Configuration

To set up and pair your Denon Home-SUB, download the HEOS app on your smartphone or tablet. Follow the in-app instructions to connect the subwoofer to your existing Denon Home system. The app will guide you through the wireless pairing process and initial sound adjustments.



Figure 4: The HEOS Built-In app for controlling Denon Home devices.

4. OPERATING INSTRUCTIONS

4.1 HEOS App Control

All primary controls for the Denon Home-SUB, including volume, crossover frequency, and phase, are managed through the HEOS app. This allows for precise customization of your bass output to match your listening preferences and room acoustics.

4.2 Pairing with Denon Home Devices

The subwoofer is designed to seamlessly pair with Denon Home sound bars and speakers. Use the HEOS app to initiate pairing and create a unified 5.1 surround sound experience. The wireless connection ensures flexibility in placement.



Figure 5: The Denon Home-SUB integrates wirelessly with other Denon Home devices.

4.3 Sound Modes and Adjustments

The Denon Home-SUB offers features like Bass Boost to further enhance low-frequency impact. These settings, along with volume and phase adjustments, are accessible via the HEOS app, allowing you to tailor the sound to your specific content, whether it's music, movies, or games.



Figure 6: Connectivity and control options on the Denon Home-SUB back panel.

5. MAINTENANCE

To maintain the appearance and performance of your Denon Home-SUB, regularly wipe the exterior with a soft, dry cloth. Avoid using abrasive cleaners or solvents. Ensure the subwoofer is not exposed to moisture or extreme temperatures, as it is designed for indoor use and is not water-resistant.

6. TROUBLESHOOTING

6.1 No Sound

- Check if the power cord is securely connected and the subwoofer is powered on.
- Verify that the subwoofer is properly paired with your Denon Home sound bar or speakers via the HEOS app.
- Ensure the volume level in the HEOS app is not set to minimum or muted.

6.2 Distorted Sound

- Reduce the volume level in the HEOS app.
- Adjust the crossover frequency and phase settings in the HEOS app to optimize sound integration with your main speakers.
- Check for any physical obstructions or vibrations around the subwoofer.

6.3 Connection Issues

- Ensure your Wi-Fi network is stable and the Denon Home devices are within range.
- Restart your router, Denon Home sound bar/speakers, and the subwoofer.
- Attempt to re-pair the subwoofer using the HEOS app.

7. SPECIFICATIONS

Feature	Detail
Model Name	DENON-HOME-SUB
Speaker Type	Subwoofer
Woofer Diameter	8 Inches
Frequency Response	20 KHz
Connectivity Technology	Wi-Fi, Bluetooth (Wireless)
Product Dimensions	13"D x 13"W x 14.5"H
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant
Control Method	App
UPC	840377517196

8. OFFICIAL PRODUCT VIDEO

Watch this short product review for an overview of the Denon Home-SUB Subwoofer.

Your browser does not support the video tag.

Video: Denon Home-SUB Subwoofer Product Review by Walts TV.

9. WARRANTY AND SUPPORT

This product includes an additional 1-Year Extended Amber Protection. For detailed warranty information, technical support, or service inquiries, please refer to the documentation included in your product packaging or visit the official Denon website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question