



Manuals.plus /

› Remocon /

› Remocon 7651 Replacement Remote Control User Manual for United TVs

## Remocon 7651

# Remocon 7651 Replacement Remote Control User Manual for United TVs

Model: 7651 | Brand: Remocon

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Remocon 7651 Replacement Remote Control. This remote is designed to be fully compatible with a wide range of United TV models, offering a seamless replacement for your original remote.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

## 2. PRODUCT OVERVIEW

---

The Remocon 7651 is a non-original replacement remote control engineered to replicate the full functionality of the original remote for compatible United TV models. It operates using infrared technology and features 25 buttons for comprehensive control.



**Figure 1:** Front view of the Remocon 7651 Replacement Remote Control. This image displays the layout of all buttons, including power, mute, channel, volume, numeric keypad, and special function buttons.

### 3. SETUP

---

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.

**Note:** The remote control does not require any programming. It is ready to use immediately after battery installation with compatible United TV models.

## 4. OPERATING INSTRUCTIONS

---

Point the remote control directly at your United TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

### 4.1 Button Functions

- **POWER** (Red button): Turns the TV on or off.
- **MUTE**: Mutes or unmutes the TV sound.
- **TV / SAT**: Switches between TV and Satellite input modes.
- **MENU**: Accesses the TV's main menu.
- **EXIT**: Exits the current menu or on-screen display.
- **SHIFT**: May provide access to secondary functions of certain buttons (refer to your TV's manual if applicable).
- **Numeric Keypad (0-9)**: Enters channel numbers directly.
- **TV/AV**: Switches between different input sources (e.g., HDMI, AV).
- **-/--**: Toggles between single and double-digit channel input.
- **PVR**: Activates Personal Video Recorder functions (if supported by TV).
- **SIZE**: Adjusts screen size or aspect ratio.
- **SETUP**: Accesses setup or settings menu.
- **Volume Up/Down (V+/V-)**: Adjusts the volume level.
- **Channel Up/Down (P+/P-)**: Changes the TV channel.
- **OK**: Confirms selections in menus.
- **Directional Arrows (Up, Down, Left, Right)**: Navigates through menus and options.
- **BACK**: Returns to the previous menu or channel.
- **SLEEP**: Sets the TV's sleep timer.
- **TV/DTV**: Switches between analog TV and digital TV modes.
- **INFO**: Displays information about the current program or channel.
- **EPG**: Accesses the Electronic Program Guide.
- **FAV**: Accesses favorite channels list.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within menus or interactive services (functions vary by TV model and content).
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback (if supported by TV or connected device).

## 5. COMPATIBLE UNITED TV MODELS

---

This replacement remote control is compatible with the following United TV models:

- LEDH28S27

- LED 50 x 16
- LED 49HS65
- LED 49HS27
- LED 46 x 16
- LED 43HS26
- LED 42HS27
- LED40X16
- LED 40T26
- LED 40HS61
- LED 40HS27
- LED39X16
- LED 39HS28
- LED 39HS27
- LED32X26
- LED 32X19
- LED 32X16
- LED32T26
- LED 32HS61
- LED 32HS32
- LED 32HS28
- LED 32HS27
- LED 32B19
- LED 32B16
- LED 28X16
- LED 28X26
- LED 28H40
- LED24X26
- LED 24X16
- LED24H50
- LED24H44
- LED 24H26
- LED22X26
- LED 22X16
- LED22W16
- LED 22T26
- LED 22HW26
- LED22H37
- LED22H26
- LED22B16
- LD 20H26
- LED 20H36
- LED 19X28
- LED 19X26

- LED19X16
- LED 19H26
- LED19B16

If your United TV model is not listed, please verify compatibility with the product description or contact customer support.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the signal path. Move closer to the TV.
Certain buttons not working	Button malfunction. TV model specific function not supported.	Ensure the button is pressed firmly. Verify if the function is supported by your specific United TV model.
TV not turning on/off	TV is unplugged or power issue.	Check if the TV is properly plugged into a power outlet and receiving power.

## 7. SPECIFICATIONS

- **Brand:** Remocon
- **Model:** 7651
- **Connectivity Technology:** Infrared
- **Compatible Devices:** United Televisions
- **Controller Type:** Button Control
- **Number of Buttons:** 25
- **Battery Description:** Requires AAA batteries (not included)

## 8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid or aerosol cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 9. SAFETY INFORMATION

- Do not mix old and new batteries, or different types of batteries.
- Do not expose the remote control to water or moisture.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep out of reach of children to prevent accidental ingestion of small parts or batteries.

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the seller's policy or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.