

MIXX USSO-01-BK-012

MIXX StreamBuds Solo 1 True Wireless Earbuds User Manual

Model: USSO-01-BK-012

INTRODUCTION

Welcome to the user manual for your MIXX StreamBuds Solo 1 True Wireless Earbuds. These earbuds are designed to provide a seamless audio experience with features like long playtime, quick charging, and intuitive touch controls. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your device.

The MIXX StreamBuds Solo 1 are truly wireless earbuds offering up to 18 hours of total playtime, including 4.5 hours from the earbuds on a single charge and an additional 13.5 hours from the compact charging case. They feature Bluetooth 5.1 connectivity, touch sensor controls, a built-in microphone for hands-free calling, and come with custom-fit ear cushions for optimal comfort and sound.

WHAT'S INCLUDED



Image: The package contents of the MIXX StreamBuds Solo 1, showing the blue earbuds, their charging case, a USB-C charging cable, and a set of ear cushions.

- MIXX StreamBuds Solo 1 True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB-C Charging Cable
- Changeable Soft Silicone Ear Cushions (Multiple Sizes)
- Quick Start Guide (Physical document)

PRODUCT OVERVIEW



Image: A close-up view of the blue MIXX StreamBuds Solo 1 earbuds, one placed inside its open charging case and the other resting beside it. The case features a magnetic flip-top.

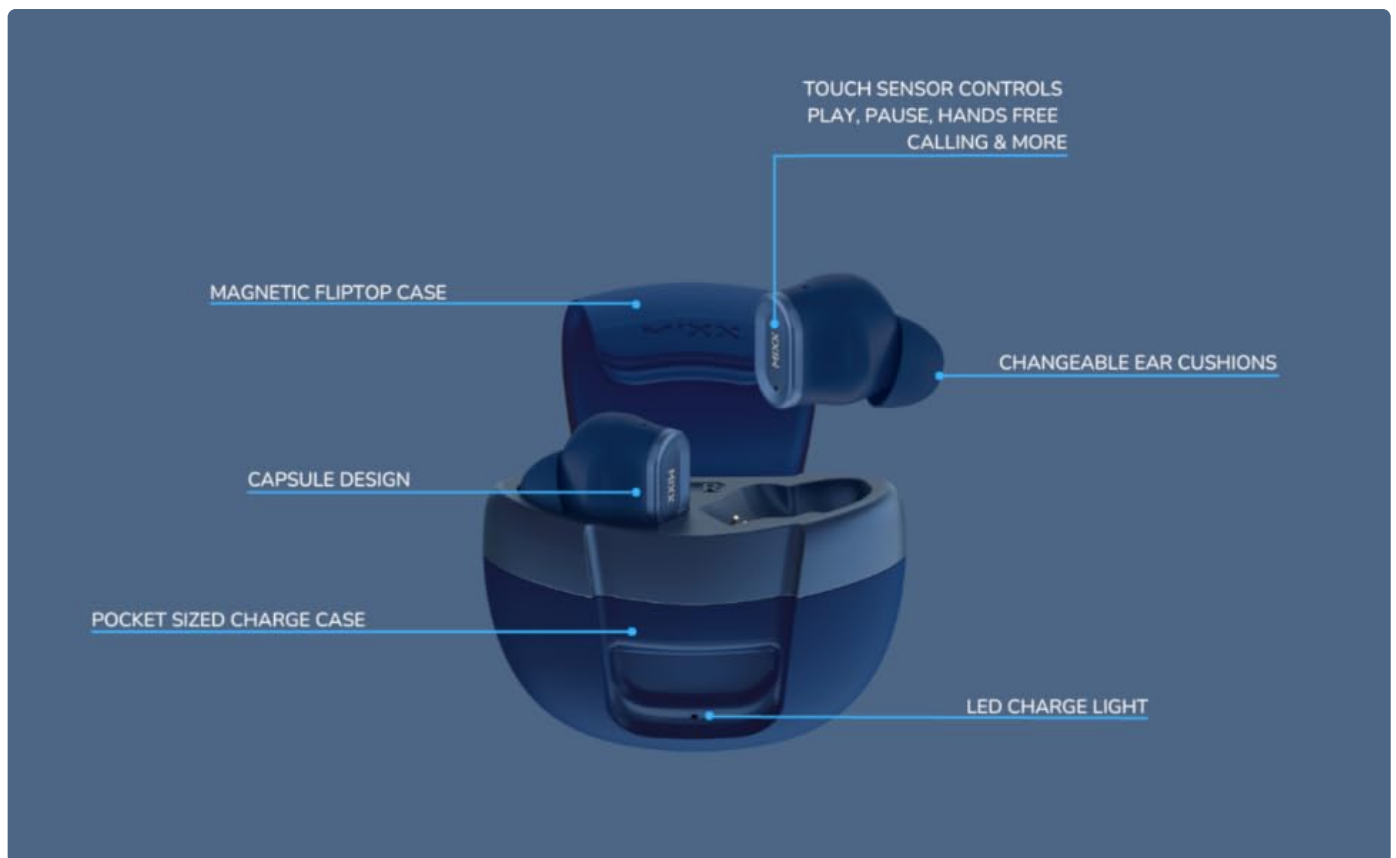 


Image: A detailed diagram highlighting key features of the StreamBuds Solo 1, including the touch sensor controls, magnetic flip-top case, changeable ear cushions, capsule design, pocket-sized charge case, and LED charge light.

 
The StreamBuds Solo 1 feature a discreet capsule design. The charging case has a magnetic flip-top for secure storage. The earbuds are equipped with touch sensor controls for easy management of audio and calls.

SETUP

1. Charging the Earbuds and Case

Before first use, ensure both the earbuds and the charging case are fully charged. The charging case provides additional battery life for your earbuds on the go.

CHARGING

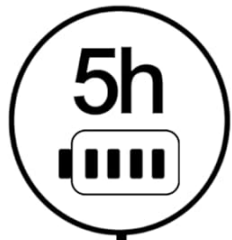


Wireless playtime
on a single charge



Additional charge
stored in case



 Total charge
with case

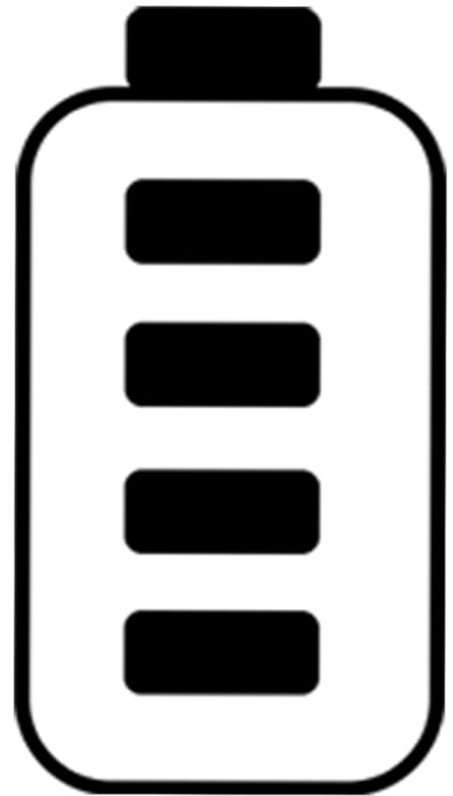

15 mins quick charge
= 2 hours playtime

Image: A graphic detailing the charging capabilities: 5 hours of wireless playtime on a single charge, 13 hours additional charge stored in the case, totaling 18 hours. It also highlights a 15-minute quick charge provides 2 hours of playtime.

1. Connect the USB-C charging cable to the charging port on the case.
2. Connect the other end of the cable to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicator on the case will show charging status. A full charge typically takes 1.5 hours for the case.
4. Place the earbuds into the charging case. They will begin charging automatically.
5. **Quick Charge:** For 2 hours of playtime, charge the earbuds in the case for just 15 minutes.

2. Pairing with a Device

The StreamBuds Solo 1 use Bluetooth 5.1 for wireless connectivity.

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
4. Search for new devices. You should see "MIXX StreamBuds Solo 1" in the list.
5. Select "MIXX StreamBuds Solo 1" to connect. Once connected, you will hear an audible confirmation.
6. The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled

on the device.

3. Choosing the Right Ear Cushions

For optimal sound quality and comfort, select the ear cushions that best fit your ears. Three pairs of ear cushions are included.

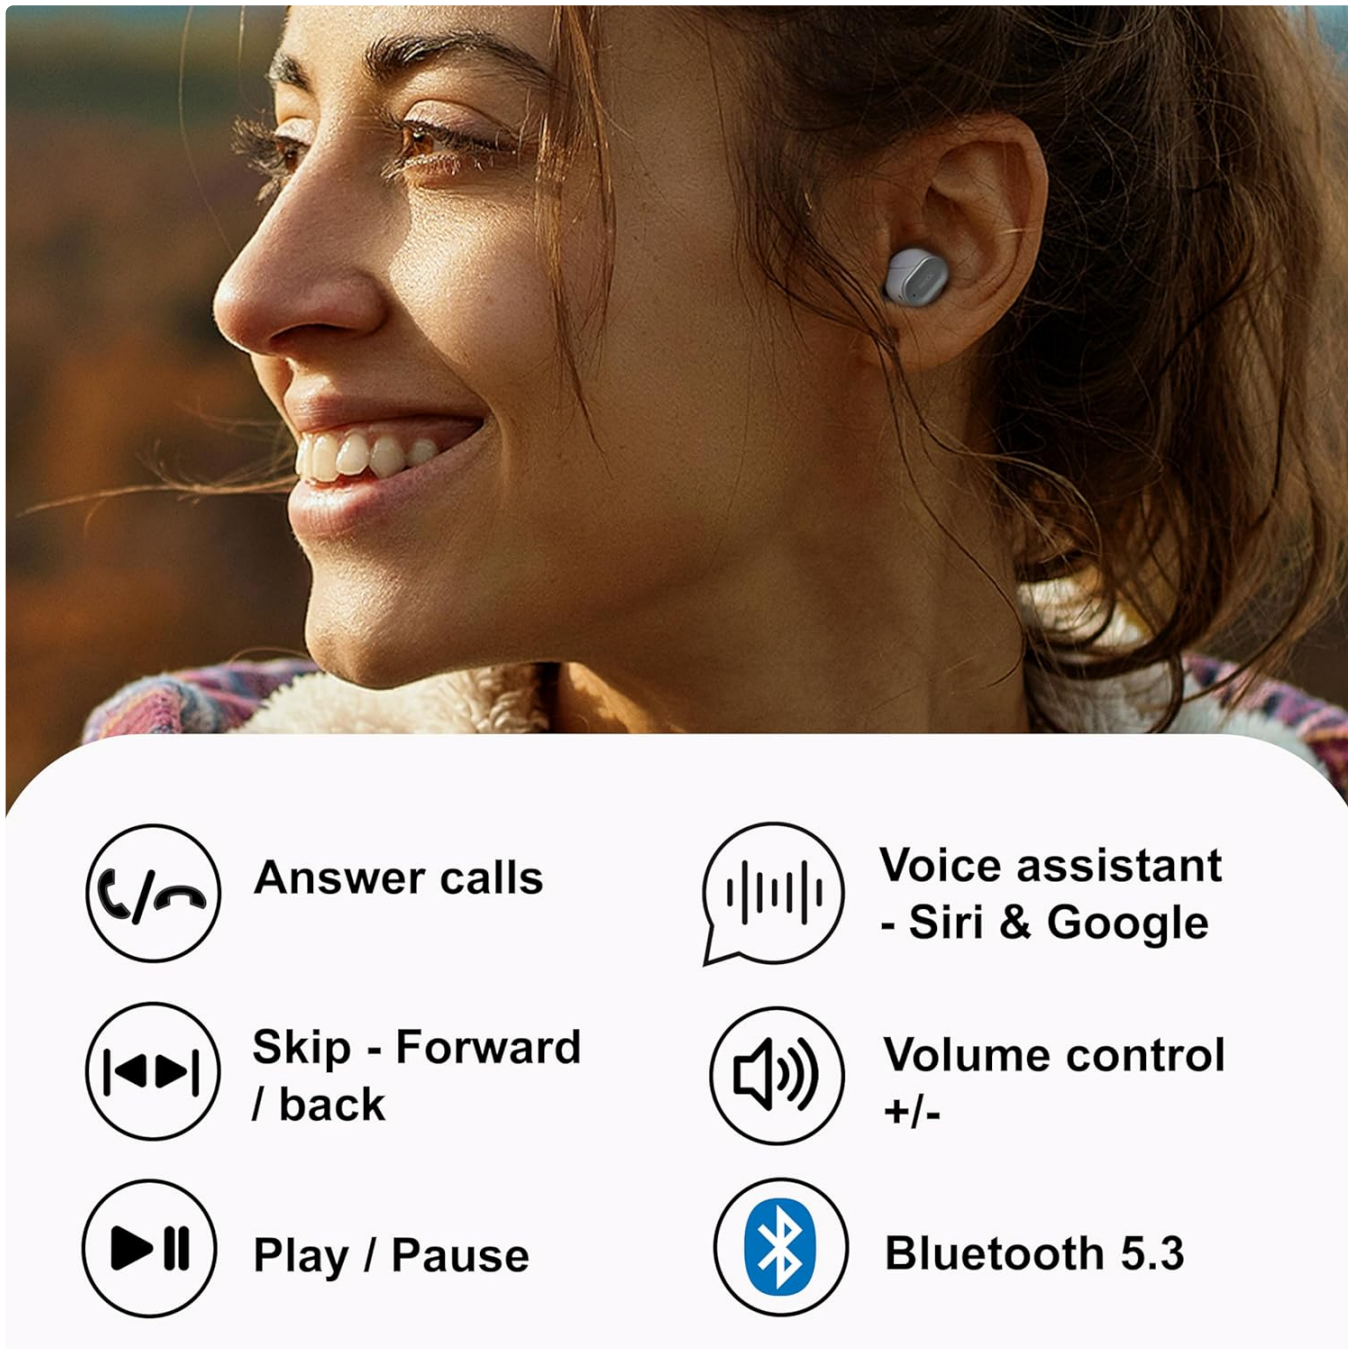 


Image: A person wearing a blue StreamBuds Solo 1 earbud, illustrating how the earbud sits comfortably and securely in the ear for an optimal listening experience.

- Experiment with the different sizes (small, medium, large) to find the most comfortable and secure fit.
- A good seal is crucial for passive noise cancellation and bass response.
- Gently twist the earbud into your ear until it feels snug and stable.

OPERATING THE EARBUDS

The StreamBuds Solo 1 feature intuitive touch controls on each earbud.



Image: A visual guide to the touch controls on the StreamBuds Solo 1, detailing functions such as answering calls, skipping tracks, play/pause, activating voice assistants (Siri & Google), volume control, and confirming Bluetooth 5.3 connectivity.

Touch Control Functions

Action	Function
Single Tap (Left or Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Right Earbud)	Volume Up
Triple Tap (Left Earbud)	Volume Down
Long Press (2 seconds, Left or Right Earbud)	Activate Voice Assistant (Siri / Google Assistant), Reject Call

Hands-Free Calling

The built-in microphone allows for clear hands-free calls. Use the touch controls to manage your calls.

- **Answer/End Call:** Single tap either earbud.
- **Reject Call:** Long press either earbud for 2 seconds.

MAINTENANCE

Proper maintenance will extend the life of your StreamBuds Solo 1.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Ear Cushions:** Remove and clean the silicone ear cushions regularly with mild soap and water. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** These earbuds are **not water resistant**. Avoid exposure to water, sweat, and high humidity.
- **Temperature:** Do not expose the earbuds or case to extreme temperatures (hot or cold).

TROUBLESHOOTING

If you encounter issues with your StreamBuds Solo 1, try the following solutions:

Problem	Possible Solution
Earbuds not charging	<ul style="list-style-type: none">• Ensure the charging cable is securely connected to both the case and the power source.• Check if the power source is active.• Make sure the earbuds are correctly seated in the charging case.• Clean the charging contacts on both the earbuds and the case with a dry cotton swab.
Only one earbud is working	<ul style="list-style-type: none">• Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again.• Ensure both earbuds are charged.• Try re-pairing the earbuds with your device. Forget the device in your Bluetooth settings and pair again.
Earbuds not pairing/connecting	<ul style="list-style-type: none">• Ensure Bluetooth is enabled on your device.• Make sure the earbuds are in pairing mode (open case lid).• Move the earbuds closer to your device.• Turn off Bluetooth on your device, then turn it back on.• Forget "MIXX StreamBuds Solo 1" from your device's Bluetooth list and attempt to pair again.• If possible, try pairing with a different device to rule out device-specific issues.
Low volume or poor sound quality	<ul style="list-style-type: none">• Adjust the volume on both your device and using the earbud touch controls.• Ensure the ear cushions provide a good seal in your ear. Try different sizes.• Clean any debris from the earbud speaker grilles.• Ensure the earbuds are fully charged.

Problem	Possible Solution
Touch controls not responding	<ul style="list-style-type: none">• Ensure your fingers are clean and dry when using the touch controls.• Try placing the earbuds back in the case and taking them out again to reset them.• Ensure the earbuds are connected to your device.

SPECIFICATIONS

Feature	Detail
Model Name	StreamBuds Solo 1
Model Number	USSO-01-BK-012
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.1
Earbud Battery Life	Up to 4.5 Hours
Total Playtime (with Case)	Up to 18 Hours (4.5 hours earbuds + 13.5 hours case)
Quick Charge	15 minutes for 2 hours playtime
Charging Time (Case)	Approx. 1.5 Hours
Control Type	Touch Control
Built-in Microphone	Yes (for Hands-Free Calling)
Noise Control	Passive Noise Cancellation
Water Resistance Level	Not Water Resistant
Frequency Range	20Hz - 20KHz
Impedance	32 Ohm
Item Weight	3.68 ounces
UPC	810148210151

WARRANTY AND SUPPORT





For warranty information and customer support, please refer to the official MIXX website or contact their customer service directly.

Manufacturer: MIXX

Seller: Mixx USA (via Amazon)

For further assistance, visit the [MIXX Store on Amazon](#).

Related Documents

 <p>MIXX Streambuds ColourChroma 3 True Wireless Earbuds HOW TO GUIDE</p>	<p>MIXX Streambuds ColourChroma 3 Quick Start Guide</p> <p>Get started with your MIXX Streambuds ColourChroma 3 wireless earbuds. This guide covers charging, pairing, controls, voice assistant usage, safety, and recycling information.</p>
 <p>MIXX StreamBuds Micro True Wireless Earbuds HOW TO GUIDE</p>	<p>MIXX StreamBuds Micro True Wireless Earbuds: How-To Guide and Specifications</p> <p>Comprehensive guide for MIXX StreamBuds Micro True Wireless Earbuds, covering setup, pairing, usage, charging, technical specifications, safety, and recycling.</p>
 <p>MIXX StreamBuds Sports Charge 2 True Wireless Earbuds HOW TO GUIDE</p>	<p>MIXX StreamBuds Sports Charge 2 True Wireless Earbuds - Quick Start Guide & Warnings</p> <p>Concise HTML guide for MIXX StreamBuds Sports Charge 2 true wireless earbuds, covering how to wear, product details, and regulatory warnings. Features multilingual support and detailed product information.</p>
 <p>MIXX StreamBuds Air 5 True Wireless Earbuds HOW TO GUIDE</p>	<p>MIXX StreamBuds Air 5 True Wireless Earbuds: How To Guide</p> <p>Comprehensive how-to guide for MIXX StreamBuds Air 5 True Wireless Earbuds, covering setup, pairing, usage, charging, troubleshooting, technical specifications, and safety information.</p>