

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SuperATV](#) /

› [SuperATV Honda Talon 1000X-4 Primal Soft Cab Enclosure Upper Doors Instruction Manual](#)

## SuperATV SE-H-TAL4-001

# SuperATV Honda Talon 1000X-4 Primal Soft Cab Enclosure Upper Doors

MODEL: SE-H-TAL4-001

## Introduction

This manual provides instructions for the installation, operation, and maintenance of your SuperATV Primal Soft Cab Enclosure Upper Doors for the Honda Talon 1000X-4. These doors are designed to offer robust protection from the elements and trail debris, enhancing your UTV experience. Please read these instructions thoroughly before proceeding with installation or use to ensure proper function and longevity of the product.

## Safety Information

- Always ensure all components are securely fastened before operating the vehicle. Loose parts can pose a hazard.
- Regularly inspect the doors for any signs of wear, damage, or loose connections. Address any issues promptly.
- Do not operate the vehicle with obstructed visibility. Ensure windows are clean and clear at all times.
- Exercise caution when trailering the vehicle with doors installed. Utilize all provided cinch straps for additional security to prevent damage or detachment.
- This product is intended for off-road use. Adhere to all local laws and regulations regarding vehicle modifications and operation.

## Package Contents

Verify that all components listed below are present in your package:

- Upper Door Panels (Left and Right)
- Mounting Hardware (Includes hook and loop strips, snaps, and cinch straps)

- Installation Instructions (This manual)
- Associated housing components

If any items are missing or damaged, please contact SuperATV customer support immediately.

---

## Installation Instructions

Follow these steps for proper installation of your Primal Soft Cab Enclosure Upper Doors. A second person may be helpful for alignment.

1. **Prepare the Vehicle:** Ensure the Honda Talon 1000X-4 is clean and free of debris where the doors will be mounted. This includes the roll cage and existing door frames.
2. **Identify Door Panels:** Separate the left and right upper door panels. Note any markings that indicate side or orientation.
3. **Attach Hook and Loop Strips:** Apply the industrial-strength hook and loop strips to the designated areas on the vehicle's roll cage and existing door frame. Ensure these strips are applied smoothly and firmly for maximum adhesion.
4. **Position Door Panels:** Carefully position each upper door panel onto the vehicle, aligning the hook and loop strips. Start from one end and work your way across, pressing firmly to secure the hook and loop connection.
5. **Secure with Snaps:** Fasten the heavy-duty snaps located along the edges of the door panels to the corresponding attachment points on the vehicle. Ensure all snaps are fully engaged.
6. **Adjust for Fit:** Gently pull and adjust the door panels to achieve a tight, wrinkle-free fit. The CNC cut material is designed for a precise fit, and minor adjustments may be needed to ensure optimal tension.
7. **Install Cinch Straps (for trailering):** If you plan to trailer the vehicle, attach the provided cinch straps for additional security. These straps help prevent flapping and potential damage to the doors during transport.
8. **Final Inspection:** Verify that all hook and loop strips are firmly attached, snaps are securely fastened, and the doors are properly aligned and taut. Check for any gaps that could allow elements to enter.



*Image: Close-up view of the SuperATV Primal Soft Cab Enclosure Upper Doors, highlighting the Pel-Tek material and clear vinyl windows as installed on the vehicle. This image demonstrates the fit and finish of the doors.*



*Image: Side view of a Honda Talon 1000X-4 UTV with the SuperATV Primal Soft Cab Enclosure Upper Doors fully installed, showing the complete enclosure from a distance.*

## Operating Instructions

The SuperATV Primal Soft Cab Enclosure Upper Doors are designed for ease of use and versatility, allowing you to adapt to changing weather conditions.

- **Opening and Closing Doors:** The doors are designed to open and close similar to standard vehicle doors. Simply unfasten the snaps and hook and loop strips as needed to open, and re-secure them to close. Ensure all fasteners are engaged for a secure closure.
- **Rolling Down Windows:** For open-air riding or increased ventilation, the clear vinyl windows can be rolled down. Unzip the window panel completely, roll it neatly downwards, and secure it using the integrated straps or fasteners. When rolled down, the upper portion of the door can serve as a convenient armrest.



*Image: Interior view of the SuperATV Primal Soft Cab Enclosure Upper Door, showing the integrated armrest feature when the window is rolled down.*



Image: SuperATV Primal Soft Cab Enclosure Upper Doors installed on a Honda Talon 1000X-4, with the clear vinyl windows rolled down for open-air riding.

## Maintenance

Proper maintenance will extend the life and appearance of your upper doors, ensuring they continue to provide optimal protection and functionality.

- **Cleaning Fabric:** Clean the Pel-Tek fabric with mild soap and water. Use a soft brush or cloth to gently scrub away dirt and grime. Avoid harsh chemicals, solvents, or abrasive cleaners, which can damage the material's integrity and water-resistant properties. Rinse thoroughly with clean water and allow to air dry completely before storage or prolonged exposure to direct sunlight.
- **Cleaning Windows:** The double-polished vinyl windows should be cleaned with a soft, lint-free cloth and a specialized vinyl cleaner or a very mild soap and water solution. Do not use ammonia-based cleaners (e.g., window cleaner), paper towels, or abrasive materials, as these can scratch, cloud, or yellow the vinyl over time. Wipe gently and dry with a clean, soft cloth.
- **Zipper Care:** To ensure smooth operation and prevent premature wear, regularly clean zippers of dirt, mud, and debris. Use a small brush to clear the teeth. Lubricate zippers periodically with a silicone-based lubricant or zipper wax. Avoid forcing stiff or jammed zippers, as this can cause damage.
- **Storage:** When not in use for extended periods, especially during off-season, store the doors in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure they are thoroughly clean and dry before storage to prevent mold, mildew, or material degradation. Rolling or folding them loosely is preferable to tight creases.

## Troubleshooting

- **Doors do not fit tightly or appear loose:**
  - **Check Fasteners:** Ensure all hook and loop strips are fully engaged and snaps are securely fastened along the entire perimeter of the door.
  - **Re-alignment:** Carefully re-adjust the door panels to ensure they are properly aligned with the vehicle's frame. Sometimes a slight repositioning can resolve looseness.
  - **Obstructions:** Check for any foreign objects or vehicle accessories that might be preventing a flush fit.
- **Zippers are stiff, difficult to operate, or snagging:**
  - **Clean Zipper Teeth:** Thoroughly clean the zipper teeth to remove any accumulated dirt, mud, sand, or debris that may be causing friction. A small brush can be effective.
  - **Lubrication:** Apply a silicone-based zipper lubricant or zipper wax to the zipper teeth and slider. Operate the zipper back and forth several times to distribute the lubricant.
  - **Avoid Force:** Never force a stiff or jammed zipper, as this can damage the zipper mechanism or cause the teeth to separate.
- **Vinyl windows appear cloudy, yellowed, or scratched:**
  - **Proper Cleaning:** Ensure you are using a soft, lint-free cloth and an appropriate vinyl cleaner or mild soap and water. Avoid harsh chemicals or abrasive materials.
  - **Wiping Technique:** Avoid wiping dry vinyl, as this can create static electricity that attracts dust and leads to scratches. Always use a damp cloth or cleaner.
  - **Sun Exposure:** Prolonged exposure to UV rays can cause yellowing over time. Proper storage when not in use can help mitigate this. Deep scratches are generally permanent.

## Specifications

Feature	Detail
Brand	SuperATV
Model Number	SE-H-TAL4-001
Material	Pel-Tek technology with PVC-backed polyester, double-polished UV-resistant vinyl windows
Color	Black
Vehicle Compatibility	Honda Talon 1000X-4 UTV
Item Weight	Approximately 16 pounds
Product Dimensions (Packaged)	Approximately 34 x 10 x 10 inches

Fit Type

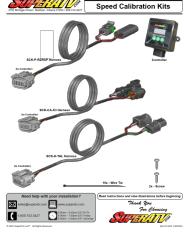
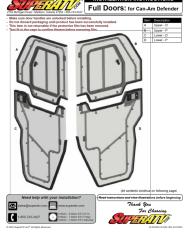
Vehicle Specific Fit

## Warranty and Support

For information regarding product warranty, technical support, or replacement parts, please contact SuperATV directly through their official website or customer service channels. Ensure you have your model number (SE-H-TAL4-001) and purchase details available when contacting support to facilitate a quicker resolution.

You can find more products and information by visiting the official [SuperATV Store](#).

## Related Documents - SE-H-TAL4-001

	<p><a href="#">SuperATV Soft Cab Upper Door Kit Installation Instructions for Kawasaki Teryx4</a></p> <p>Detailed installation guide for the SuperATV Soft Cab Upper Door Kit designed for the Kawasaki Teryx4. This document provides step-by-step instructions, important notes, and liability information for installing your soft cab enclosure.</p>
	<p><a href="#">SuperATV Full Glass Windshield Installation Instructions for Honda Talon</a></p> <p>Detailed installation guide for the SuperATV Full Glass Windshield designed for the Honda Talon. Includes step-by-step instructions, component lists, and important safety and liability information.</p>
	<p><a href="#">SuperATV Speed Calibration Kit Installation Instructions</a></p> <p>Detailed installation guide for SuperATV Speed Calibration Kits, including steps for Polaris RZR XP, Can-Am X3, and Honda Talon models. Learn how to calibrate your vehicle's speedometer.</p>
	<p><a href="#">SuperATV Full Doors Installation Instructions for Can-Am Defender</a></p> <p>Detailed installation guide for SuperATV Full Doors designed for the Can-Am Defender UTV. Includes parts list, removal steps, and assembly instructions for a secure and proper fit.</p>

	<p><a href="#">SuperATV Installation Instructions: Polaris RZR Pro R 4 Doors</a></p> <p>Comprehensive installation guide for SuperATV doors designed for the Polaris RZR Pro R 4. Includes parts list, step-by-step instructions, and safety information.</p>
	<p><a href="#">SuperATV Winch Mount Installation Instructions for Polaris RZR XP 1000 (2024)</a></p> <p>Detailed installation guide for the SuperATV Winch Mount designed for the Polaris RZR XP 1000 (2024 model). Includes step-by-step instructions, part identification, and important safety and liability information.</p>