

[Manuals.plus](#) /

› [Showvigor](#) /

› Showvigor Handmixer Electric Handheld User Manual

Showvigor 133

Showvigor Handmixer Electric Handheld User Manual

Model: 133

Brand: Showvigor

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the hand mixer.
- To protect against risk of electrical shock, do not immerse the motor unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.

PRODUCT OVERVIEW

The Showvigor Electric Handmixer is a portable kitchen appliance designed for various mixing tasks. It features 7 adjustable speeds and comes with a set of stainless steel accessories for different culinary needs.



Image: The Showvigor Electric Handmixer unit shown with its included accessories: a whisk, two beaters, and two dough hooks.



Image: A detailed view of the hand mixer highlighting its key components such as the heat sink, portable handheld design, ventilator, and the durable stainless steel accessories.

Components:

- **Hand Mixer Unit:** The main motor unit with speed control and ejector button.
- **Beaters (2):** Standard stainless steel beaters for general mixing.
- **Dough Hooks (2):** Stainless steel hooks designed for kneading dough.
- **Whisk (1):** A traditional whisk attachment for whipping eggs or cream.

Key Features:

- **7 Adjustable Speeds:** Allows for precise control over mixing tasks, from gentle stirring to high-speed whipping.
- **Ejector Button:** Enables quick and easy removal of accessories for cleaning and storage.
- **Ergonomic Design:** Lightweight and comfortable to grip, designed for ease of use and compact storage.

- **Efficient Heat Dissipation:** Built-in ventilation system to prevent overheating during extended use.
- **Durable Stainless Steel Accessories:** All included accessories are made of stainless steel and are dishwasher safe for convenient cleaning.

SETUP

Before first use, unpack all components and wash the stainless steel accessories (beaters, dough hooks, whisk) with warm, soapy water, then rinse and dry thoroughly. The main mixer unit can be wiped clean with a damp cloth.

Attaching Accessories:

1. Ensure the hand mixer is unplugged from the power outlet and the speed selector is set to "0" (OFF).
2. Insert the desired accessories (beaters, dough hooks, or whisk) into the openings on the bottom of the mixer unit. Push firmly until they click into place. For beaters and dough hooks, ensure they are inserted into the correct corresponding slots.
3. Verify that the accessories are securely attached before plugging in the mixer.



Image: Illustration of the speed adjustment slider and the eject button mechanism for accessory removal.

OPERATING INSTRUCTIONS

The Showvigor Handmixer offers 7 adjustable speeds to handle a variety of mixing tasks. Always start at a lower speed and gradually increase as needed.

Speed Selection:

Use the speed selector switch located on the top of the mixer to choose your desired speed from 1 (lowest) to 7 (highest). The "0" position is OFF.



Image: A user operating the hand mixer to blend ingredients in a mixing bowl, demonstrating typical usage.

Recommended Speed Guide:

Speed Grade	Description	Typical Use
Grade 1-2	Original Mixing Speed (Low)	Used for dry mixed items such as flour, butter, pudding.
Grade 3-4	Mixing Medium Speed	Used for jam, baby food, batter, potato mash.
Grade 5-7	High Mixing Speed	Used for milkshake, salad, eggs sent, gas-foaming with milk.



Image: A visual chart illustrating the recommended speed settings (Grade 1-2, 3-4, 5-7) for various food preparation tasks, such as mixing dry ingredients, batters, and whipping eggs.

Ejecting Accessories:

To remove the accessories, ensure the speed selector is set to "0" (OFF) and the mixer is unplugged. Press the "Eject" button firmly, and the accessories will release.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your hand mixer.

Cleaning the Mixer Unit:

- Always unplug the mixer before cleaning.
- Wipe the exterior of the motor unit with a clean, damp cloth. Do not immerse the motor unit in water or any other liquid.
- For stubborn spots, use a mild detergent on the damp cloth, then wipe with a clean, damp cloth to remove any residue.
- Dry thoroughly before storing.

Cleaning Accessories:

- The stainless steel beaters, dough hooks, and whisk are dishwasher safe.
- Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots or corrosion.

Storage:

Store the hand mixer and its accessories in a dry place, away from direct sunlight and moisture. The compact design allows for easy storage in a kitchen drawer or cabinet.

TROUBLESHOOTING

If you encounter any issues with your Showvigor Handmixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet issue; speed selector not set to a speed (0); internal fault.	Ensure the mixer is securely plugged into a working power outlet. Check if the speed selector is set to a number (1-7). If the issue persists, contact customer support.
Accessories do not eject.	Speed selector not at "0"; eject button not pressed firmly enough.	Ensure the speed selector is set to "0" (OFF). Press the eject button firmly and completely. Do not force accessories out.
Mixer overheats or smells burnt.	Prolonged use; mixing very thick ingredients; blocked ventilation.	Unplug the mixer immediately and allow it to cool down for at least 30 minutes. Avoid mixing overly thick ingredients for extended periods. Ensure ventilation slots are not blocked.
Accessories wobble during operation.	Accessories not fully inserted.	Unplug the mixer and re-insert the accessories, ensuring they click securely into place.

If the problem persists after trying these solutions, please contact Showvigor customer support for further assistance.

SPECIFICATIONS

- **Model Name:** 133
- **Brand:** Showvigor
- **Color:** Off white
- **Product Dimensions:** 3"D x 3"W x 3"H
- **Item Weight:** 1.65 pounds
- **Controls Type:** Push Button (for eject), Slider (for speed)
- **Special Feature:** Portable
- **Accessories:** 2 Mixers (Beaters), 2 Dough Hooks, 1 Traditional Whisk (all stainless steel)
- **Speed Settings:** 7 Adjustable Speeds
- **Manufacturer:** showvigor

QUIET AND LOW NOISE OPERATION



Image: An illustration demonstrating the low noise level of the hand mixer during operation, comparing it to common sound levels like speaking voice and library noise.

WARRANTY AND SUPPORT

Showvigor products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to report any issues not covered in this manual, please refer to the warranty card included with your purchase or visit the official Showvigor website.

Manufacturer: showvigor

ASIN: B0CRGXZ2M3

© 2024 Showvigor. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRGXZ2M3>

More documents and user manuals: <https://manuals.plus/>