

## Primevolve PF11R

# Primevolve PF11R Portable USB Rechargeable Fan User Manual

Model: PF11R

## PRODUCT OVERVIEW

The Primevolve PF11R is a versatile, battery-powered portable fan designed for both desk and floor use. It features an adjustable height, four speed settings, and a long-lasting 7200 mAh rechargeable battery. Its compact, foldable design makes it ideal for various environments, and it comes with a convenient remote control for ease of use.

## Key Features

- **High-Capacity Battery:** Equipped with a 7200 mAh battery, providing 6 to 21 hours of operation depending on the speed setting. Fully charges in approximately 5 hours.
- **USB Powered:** Compatible with various USB power sources (5V/2A) including PCs, laptops, power banks, AC adapters, and car chargers.
- **Easy to Clean:** The fan grille and blades are removable for regular cleaning, ensuring optimal airflow and hygiene.
- **Remote Control:** Includes a remote for convenient power on/off and speed adjustment from a distance.
- **Adjustable Height & Foldable Design:** Transforms from a compact 7cm folded unit to a 36cm desk fan or a 100cm floor fan.
- **Quiet Operation:** Operates at a low noise level of 30-40dB.

## SETUP AND ASSEMBLY

### Unfolding and Adjusting Height

The PF11R fan is designed for easy setup. To unfold, gently pull the fan head upwards from the base. The telescopic rod allows for height adjustment. Extend it to your desired height for desk or floor use. Ensure the fan head is securely locked in position after adjustment.



This image displays the Primevolve PF11R fan's versatility, showing it in its compact folded state, as a medium-height desk fan, and extended to its full height as a floor fan. The included remote control is also visible.

# Ventilatore portatile multiuso

regolabile in altezza e pieghevole



This image highlights the fan's adjustable height feature, showing it can be used compactly at 7cm, as a desk fan at 36cm, or as a floor fan at 100cm.

## Charging Instructions

Before first use, fully charge the fan. Connect the included USB cable to the fan's charging port and to a compatible 5V/2A USB power source. The charging indicator light will show the charging status. A full charge takes approximately 5 hours.

# Cavo di ricarica rapida USB incluso

Si ricarica completamente in 5 ore utilizzando:

- ✓ Computer portatile (non incluso)
- ✓ Banca di potenza (non inclusa)
- ✓ Caricabatterie da auto (non incluso)
- ✓ Adattatore per spina a muro (non incluso)



The image shows the fan's USB charging port and lists various compatible charging methods such as laptops, power banks, car chargers, and wall adapters. A 5ft USB cable is also depicted.

## OPERATING INSTRUCTIONS

### Power On/Off and Speed Control

To turn the fan on or off, press the power button on the fan's base or on the remote control. To adjust the wind speed,



press the speed button on the fan's base or the corresponding buttons on the remote control. The fan offers four speed settings: Low, Medium, Natural, and High.

# 4 livelli di velocità

## Batteria di grande capacità

Naturale

Alto

Medio

Basso

Basso

21h

Medio

11.5h

Naturale

11h

Alto

6h

A visual guide illustrating the four fan speed modes: Low, Medium, Natural, and High, along with their respective battery runtimes ranging from 6 to 21 hours on a full charge.


# Tenere lontano dalle vampate di calore



Valutazione del rumore:  
30~40dB



Modalità del vento:  
4 marce

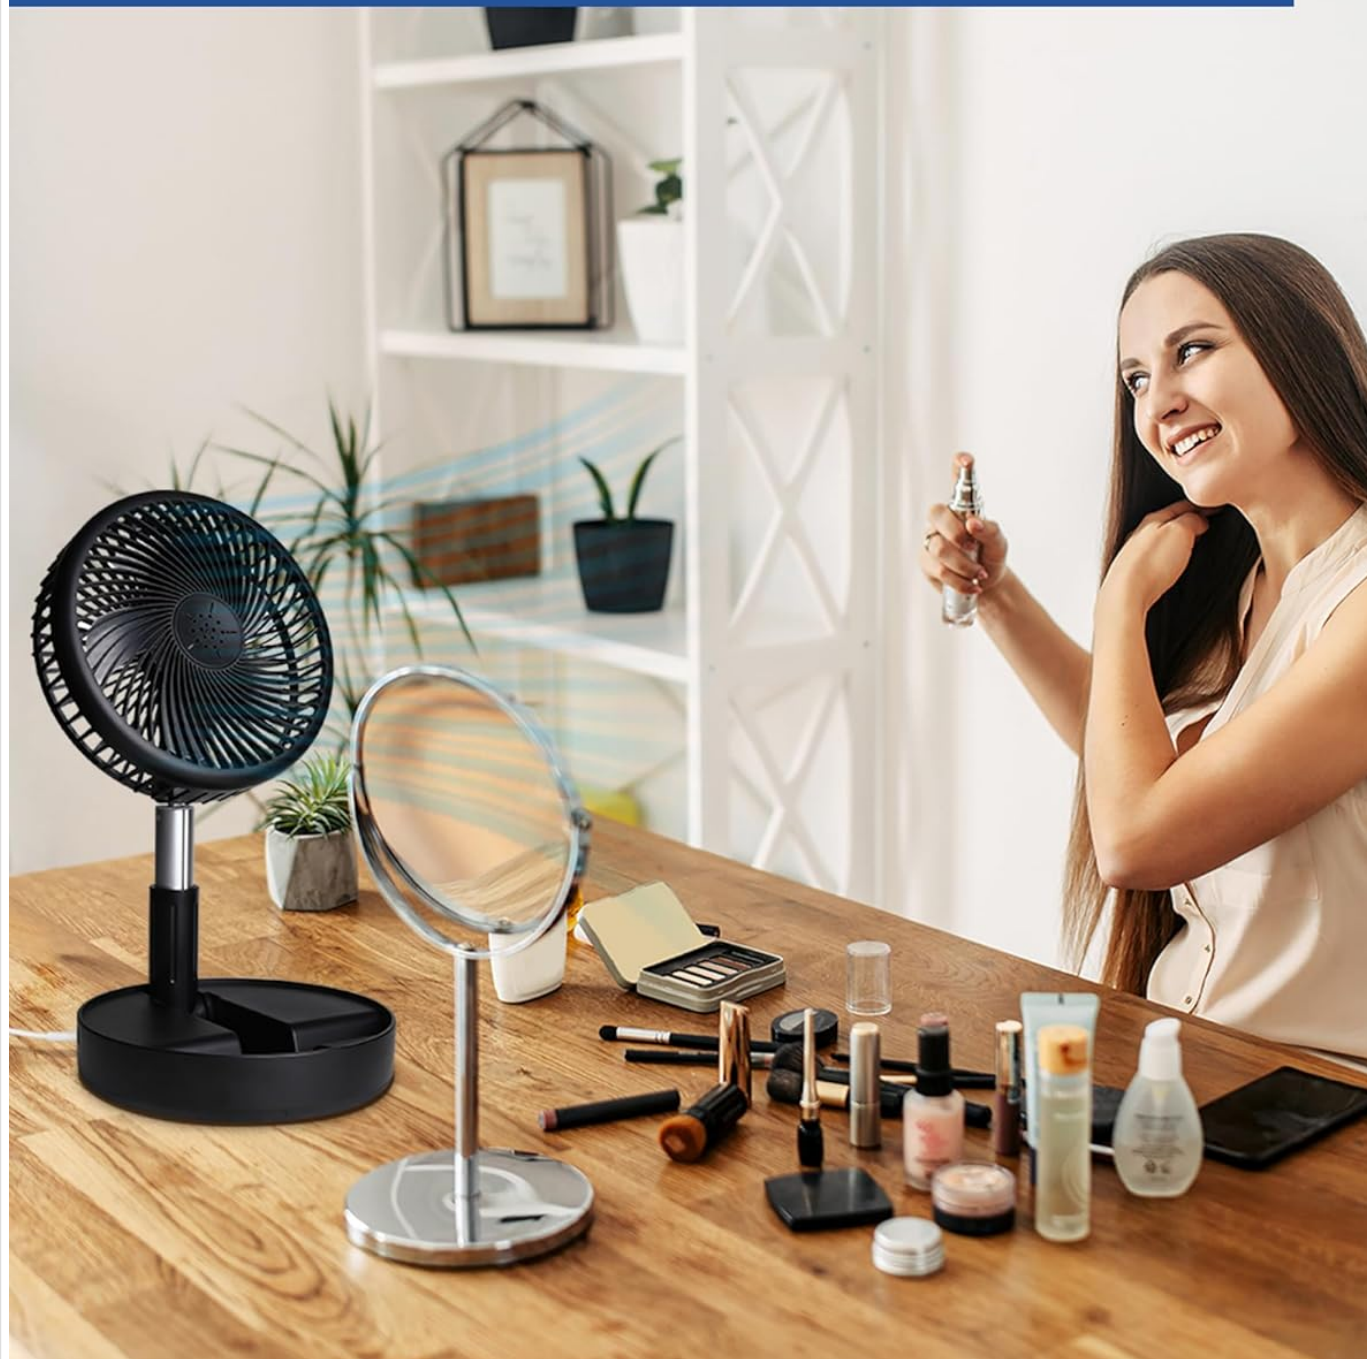

The fan is shown operating on a desk next to a person, emphasizing its quiet operation with a noise level of 30-40dB and its four available wind modes.

## Adjusting Fan Angle and Stability

The fan head can be manually tilted to direct airflow. The base is equipped with anti-slip silicone pads for stability on various surfaces. Ensure the fan is placed on a flat, stable surface during operation.





This image details the fan's base features, including anti-slip silicone pads for stability, the ability for the fan head to rotate, and a mechanism to lock the fan's position.

## MAINTENANCE AND CLEANING

Regular cleaning of your Primeville PF11R fan will help maintain optimal performance and airflow. The front grille is detachable for easy access to the fan blades.

## Cleaning the Fan Grille and Blades

1. Ensure the fan is turned off and unplugged from any power source.
2. Gently twist the front grille counter-clockwise to unlock and remove it.
3. Wipe the fan blades and the inside of the grille with a soft, damp cloth. Do not use abrasive cleaners or immerse the fan in water.
4. Allow all parts to dry completely before reassembling.
5. Align the grille and twist clockwise to lock it back into place.

# Design della cappa staccabile

Facile da pulire



A clear visual guide demonstrating the fan's detachable front cover, which can be twisted counter-clockwise for easy removal and cleaning of the blades.



## TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Primevolve
Model Number	PF11R
Color	Black
Product Dimensions (L x W x H)	23 x 11 x 23 cm
Item Weight	1.11 Kilograms
Power	3.47 Watts
Voltage	5 Volts
Material	Plastic
Number of Speeds	4
Noise Level	40 dB
Features	Foldable, Portable, Remote Control
Battery Type	1 Lithium metal (included)
Power Source	Battery Powered
Recommended Uses	Ventilation
Mounting Type	Floor Mount

## TROUBLESHOOTING

If you encounter any issues with your Primevolve PF11R fan, please refer to the following common problems and solutions:

- **Fan does not turn on:**
  - Ensure the battery is charged. Connect the fan to a power source and allow it to charge for at least 30 minutes.
  - Check if the power button on the fan or remote control is pressed correctly.
  - Verify that the USB cable and power adapter are functioning correctly.
- **Weak airflow:**
  - Increase the fan speed setting.
  - Clean the fan grille and blades as described in the Maintenance section. Dust buildup can restrict airflow.
  - Ensure the fan is not obstructed by objects.
- **Fan makes unusual noise:**
  - Check for any foreign objects caught in the fan blades or grille.
  - Ensure the fan is placed on a flat and stable surface.
  - Clean the fan blades to remove any debris that might cause imbalance.



- **Remote control not working:**
  - Ensure there are no obstructions between the remote and the fan.
  - Check if the remote control's battery needs replacement.

## WARRANTY AND SUPPORT

---

Primevolve products are manufactured with high-quality standards. For specific warranty information and customer support, please refer to the documentation included with your purchase or contact Primevolve customer service through the retailer's platform or the official brand website. Please retain your proof of purchase for any warranty claims.

### Related Documents - PF11R

	<p><a href="#">Primevolve Foldable Fan PF100 User Manual and Specifications</a></p> <p>Comprehensive guide for the Primevolve Foldable Fan PF100, covering safety instructions, assembly, operation, maintenance, and technical specifications. Learn how to use and care for your portable fan.</p>
	<p><a href="#">Primevolve P2000 Folding Storage Fan - User Manual and Operation Guide</a></p> <p>Comprehensive guide for the Primevolve P2000 Folding Storage Fan, detailing product parameters, function descriptions, step-by-step operation, and safety precautions. Learn how to set up, use, and maintain your fan.</p>