

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Marvello 10-in-1 Stand Bowl Mixer User Manual

Bennett Read KMX101

Bennett Read Marvello 10-in-1 Stand Bowl Mixer User Manual

Model: KMX101

INTRODUCTION

Thank you for choosing the Bennett Read Marvello 10-in-1 Stand Bowl Mixer. This versatile appliance is designed to assist with various kitchen tasks, including mixing, kneading, whipping, whisking, beating, creaming, folding, stirring, emulsifying, and combining ingredients effortlessly. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1: The Bennett Read Marvello 10-in-1 Stand Bowl Mixer, showcasing the main unit, stainless steel bowl, and various mixing attachments.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Always unplug the mixer from the power outlet before cleaning, assembling, or disassembling parts.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Never operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.

COMPONENTS AND PARTS IDENTIFICATION

Familiarize yourself with the various parts of your Bennett Read Marvello Stand Bowl Mixer.

1. **Motor Unit:** The main body housing the motor and control dial.
2. **Tilt-Head:** Allows for easy access to the bowl and attachment changes.
3. **Stainless Steel Mixing Bowl:** Removable and dishwasher-safe bowl for ingredients.
4. **Splashguard with Feed Chute:** Detachable transparent cover to prevent splatters and allow ingredient addition during mixing.
5. **Dough Hook:** For kneading heavy doughs (e.g., bread, pizza).
6. **Beater/Paddle:** For medium-heavy mixtures (e.g., cake batter, cookies, frosting).
7. **Whisk:** For light mixtures (e.g., egg whites, cream, light batters).
8. **Speed Control Dial:** Adjusts mixing speed and activates pulse function.
9. **Head Release Button:** To tilt the motor head upwards.



PLANETARY MIX
ORBITAL MOVEMENT



Image 2: Illustration demonstrating the Planetary Orbital Mixing Movement, where the attachment rotates on its own axis while also orbiting around the bowl, ensuring thorough mixing.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and ensure all parts are present.
2. **Cleaning:** Before first use, wash the mixing bowl, splashguard, dough hook, beater, and whisk in warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the mixer on a stable, flat, and dry surface.
4. **Attaching the Bowl:** Place the stainless steel mixing bowl onto the base and turn it clockwise until it locks securely into place.
5. **Tilting the Head:** Press the head release button and lift the motor head upwards until it locks into the tilted position.
6. **Attaching an Accessory:** Select the appropriate attachment (dough hook, beater, or whisk) for your recipe. Insert the attachment into the shaft and turn it slightly until it clicks into place.
7. **Lowering the Head:** Gently push the head release button again and lower the motor head until it locks into the operating position.
8. **Attaching the Splashguard:** If desired, place the splashguard over the bowl, aligning the opening with the

attachment.

OPERATING INSTRUCTIONS

General Operation

1. Ensure the mixer is properly assembled and the head is locked down.
2. Add your ingredients to the mixing bowl.
3. Plug the mixer into a suitable power outlet.
4. Turn the speed control dial to the desired setting (Min to Max). The mixer features stepless speed settings for precise control.
5. For short bursts of maximum power, turn the dial to the 'P' (Pulse) setting and hold. Release to stop.
6. When mixing is complete, turn the speed control dial to '0' (Off) and unplug the appliance.
7. Press the head release button and lift the motor head to remove the attachment and bowl.

Recommended Speed Settings

The speed control dial offers a range of settings, indicated by icons for common tasks.



Image 3: Close-up of the speed control dial, showing the 'P' (Pulse) setting, '0' (Off), 'Min' to 'Max' range, and icons indicating recommended speeds for whisking, beating, and kneading.

- **Min - Low Speeds:** Ideal for gentle mixing, folding, and combining dry ingredients to prevent splashing. Use with dough hook or beater.
- **Medium Speeds:** Suitable for creaming butter and sugar, mixing batters, and mashing potatoes. Use with beater.
- **Max - High Speeds:** Best for whipping egg whites, cream, and light batters. Use with whisk.
- **Pulse (P):** For short bursts of maximum power, useful for quickly incorporating ingredients or for delicate folding.

Always start at a lower speed and gradually increase to the desired setting to avoid splashing and ensure thorough mixing.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your mixer.

1. **Always unplug the appliance before cleaning.**
2. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse

the unit in water.

- 3. **Mixing Bowl, Attachments, and Splashguard:** These parts are removable and dishwasher-safe. Alternatively, wash them in warm soapy water, rinse thoroughly and dry completely before storing.
- 4. **Storage:** Store the mixer and its accessories in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in; power switch off; head not locked down.	Ensure plug is securely in outlet; turn speed dial to a setting other than '0'; ensure motor head is fully lowered and locked.
Attachments are difficult to install/remove.	Head not tilted up; attachment not aligned correctly.	Press the head release button and tilt the head fully upwards. Align the attachment with the shaft and twist gently until it clicks.
Excessive noise or vibration.	Bowl or attachment not properly secured; too much mixture.	Ensure bowl is locked and attachment is clicked into place. Reduce the amount of ingredients if exceeding capacity.
Splashing during mixing.	Speed too high; splashguard not used.	Start at a lower speed and gradually increase. Use the transparent splashguard.

If the problem persists after attempting these solutions, please contact customer support. Do not attempt to repair the appliance yourself.

SPECIFICATIONS

- **Model Number:** KMX101
- **Brand:** Bennett Read
- **Power:** 800W
- **Material:** Stainless Steel (bowl), other components as specified
- **Number of Speeds:** Stepless variable speeds + Pulse function
- **Special Features:** Lightweight, Tilt-head design, Planetary Orbital Mixing Movement, Detachable transparent splashguard, Removable dishwasher-safe bowl and accessories.
- **Item Weight:** Approximately 4.2 kg
- **Dimensions:** Approximately 50D x 41.5W x 37.5H centimetres (Product dimensions)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Bennett Read customer service directly.

Note: Spare part information is not explicitly provided in the product details. Please contact customer support for inquiries regarding spare parts.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRHS57ND>

More documents and user manuals: <https://manuals.plus/>