

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read KMW113 Manual Microwave Oven User Manual

Bennett Read KMW113

Bennett Read KMW113 Manual Microwave Oven User Manual

Model: KMW113

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Always supervise children when the microwave is in use.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.

PRODUCT OVERVIEW

The Bennett Read KMW113 Manual Microwave Oven is designed for convenient heating, cooking, and defrosting of various food items. Familiarize yourself with its components for optimal use.

Components

- Microwave Oven Unit
- Glass Turntable Plate
- Turntable Ring Assembly



Figure 1: Front view of the Bennett Read KMW113 Manual Microwave Oven, showcasing its sleek black design and door handle.



Figure 2: Side view of the Bennett Read KMW113 Manual Microwave Oven, illustrating its compact dimensions.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer support for assistance.

Placement

Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in the oven. Ensure there is adequate ventilation around the oven. Maintain a minimum clearance of 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides. Do not block any ventilation openings. Keep the oven away from heat sources and water.

Electrical Connection

Ensure the electrical outlet is properly grounded and matches the voltage requirements specified on the oven's rating label. Do not use extension cords or adapters with this appliance.

OPERATING INSTRUCTIONS

The Bennett Read KMW113 features simple manual controls for ease of use.

Control Panel Overview



Figure 3: The control panel features a Power dial and a Timer dial for manual operation.

- **Power Dial:** This dial allows you to select the desired cooking power level. Options typically include High, M.High (Medium-High), Med (Medium), Low, and Defrost.
- **Timer Dial:** This dial sets the cooking duration, up to a maximum of 35 minutes.

Setting Cooking Time and Power

1. Place the food in a microwave-safe container on the glass turntable. Close the oven door securely.
2. Turn the **Power Dial** to select the desired power level (e.g., High for fast cooking, Med for gentle heating).
3. Turn the **Timer Dial** clockwise to set the desired cooking time. The oven will start automatically once the timer is set.
4. When the cooking time expires, the oven will automatically turn off and a bell will sound.

Defrosting Food

To defrost food, follow these steps:

1. Place the frozen food on the glass turntable.
2. Turn the **Power Dial** to the 'Defrost' setting.
3. Turn the **Timer Dial** to the appropriate defrosting time. Refer to food packaging for recommended defrosting times.
4. During defrosting, it is often beneficial to turn the food over periodically to ensure even thawing.

General Cooking Tips

- For best results, cover food during cooking to retain moisture and ensure even heating.
- Stir or rotate food halfway through cooking for more uniform results.
- Allow standing time after cooking for heat to distribute evenly throughout the food.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

Exterior Cleaning

Wipe the exterior surface with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

Interior Cleaning

Clean the interior cavity regularly, especially after spills. Wipe with a damp cloth and mild detergent. For stubborn food splatters, place a bowl of water with lemon slices inside and heat for a few minutes to loosen residue, then wipe clean.

Turntable Care

The glass turntable plate and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Check fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or rotated; Incorrect power level or cooking time.	Stir or rotate food during cooking; Adjust power level and cooking time as needed.
Unusual noise during operation	Turntable not correctly positioned; Foreign object in cavity.	Ensure turntable and ring are correctly seated; Remove any foreign objects.
Oven light not working	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement. Do not attempt to replace yourself.

SPECIFICATIONS

Detailed technical specifications for the Bennett Read KMW113 Manual Microwave Oven.

Feature	Specification
Brand	Bennett Read
Model Number	KMW113
Capacity	20 Litre
Colour	Black
Material	Stainless Steel
Item Weight	12.3 kg
Product Dimensions (D x W x H)	47.8D x 28.8W x 38.2H centimetres
Door Style	Side Swing
Special Feature	Portable
Manufacturer	Tevo

WARRANTY AND SUPPORT

Warranty Information

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase or contact your retailer for specific terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or service inquiries, please contact the retailer where you purchased the product or the Bennett Read customer service department. Contact details can typically be found on the manufacturer's official website or your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRHSF21Q>

More documents and user manuals: <https://manuals.plus/>